#### **WARNING!!**

Children have died from furniture tipover. Tip restraints have been included with this product; you must install the tip restraints according to these instructions in order to minimize the risk of furniture tipping. If you have any questions about this product or the tip restraint, please send us an email at <a href="mailto:tip">tip</a> restraint help@Noblehousefurniture.com

NEVER allow children to climb or hang on furniture, including drawers or cabinet doors.

In addition to installing the restrains. To help prevent tip-over


- 1. **NEVER** put a **TV** or other heavy objects on top of this product".
- 2. Do not stand on the products.



# **Assembly Instructions**

Caution: You must read this before you proceed


## **BEDSIDE**

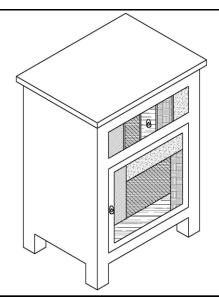

<u>Hardware</u>			
Label	Picture	Description	QTY
1		Screwdriver (Not Provided)	1
2		Hammer (Not Provided)	1
3		Power Drill (Not Provided)	1
4		Bracket (45mmx20mm)	2
(5)		Wall Plug Screw	4
6		Wall Plug	4
T		Restraint Strap	2

# **Assembly Preparation**

Before Beginning Assembly:

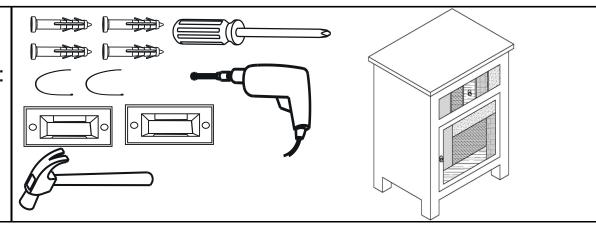



Read instructions, cover to cover-



Have 2 adults on hand for assembly-



Do not assemble on flooring or carpet-



Assemble on a clean non-marring surface (packing foam)-



Save all packaging until finished-


# Tipover Restraint Device Installation Instruction

WARNING 1

Serious or fatal crushing injuries can occur from tripping furniture.


To help prevent tip-over: ALWAYS secure this furniture to the wall using tipover device.

See products instruction for more ways to help prevent furniture tip-over.

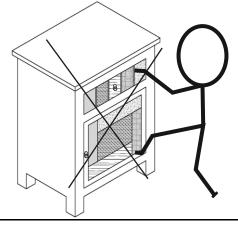

#### **Usage For Tipover Restraint Device:**

To secure Bedside against wall, attach two Brackets (4) on wall and 2 are already attached to the products, use restraint strap(7)to connect the brackets (4)

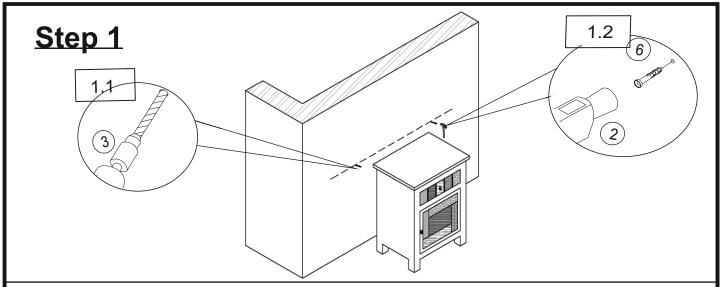


1.1) Drill two holes on wall at same height as Bracket (4) on Bedside with Power Drill (3).

You can mark these points in the ways as below:


1) Move the Bedside back to the wall. Mark two point same height as Bedside on the wall.

Note: The brackets need to be secured to solid, load bearing surface. Please use a stud finder (not supplied) if needed to locate the wall frame.

- 2) Measure the height of the Brackets (4) with ruler/measuring tape and mark on wall to keep them accurate and same height.
- 2.2) Insert wall plugs (6) into drilled holes on wall with Hammer (2).

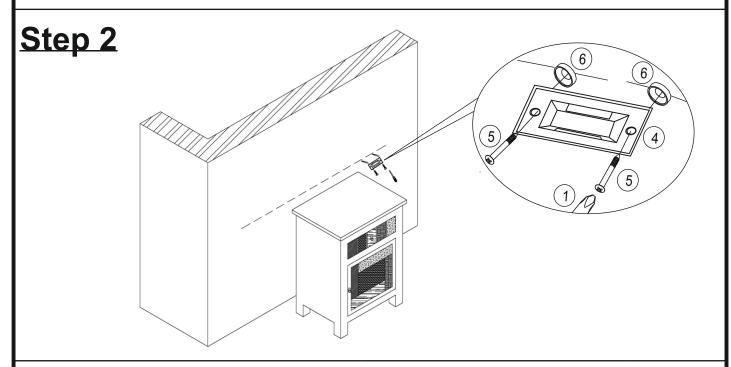

Attach Brackets (4) to Wall Plugs (6) using Wall Plug Screws (5) with Screwdrivers (1)

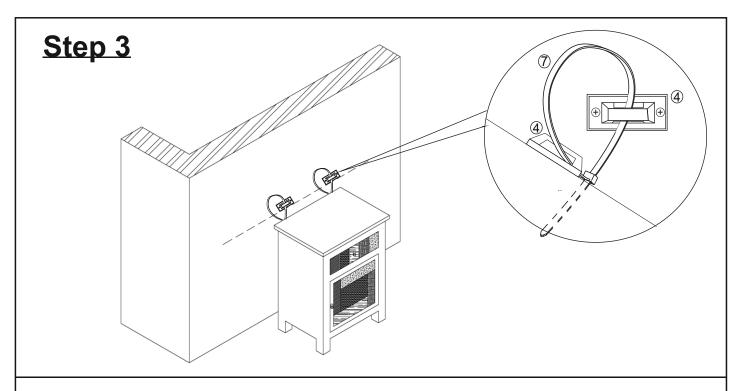

Move Bedside to the wall. Pull the Restraint Straps (7) through the Brackets (4) on the wall and Bedside one by one, and pull the Restraint Straps (7) tight.

This Bedside is now is now ready to use.

Caution: This Bedside can only be used on flat, level surface.

### Care And Maintence

- Furniture may scratch floors. We recommend using furniture pads to protect your floors.
- □ Do not put hot items directly on furniture surface.
- Do not place furniture under direct sunlight.
- Do not place furniture near heating or cooling vents.
- Do not write on furniture without a padded barrier to protect the surface.
- Not for commercial use . For residential use only.
- Stains may be removed with mild soup solution and damp cloth.
- ✓ Dust and pick-up spills using a clean, non-colored lint-free cloth.