



ASSEMBLY INSTRUCTIONS

1340006

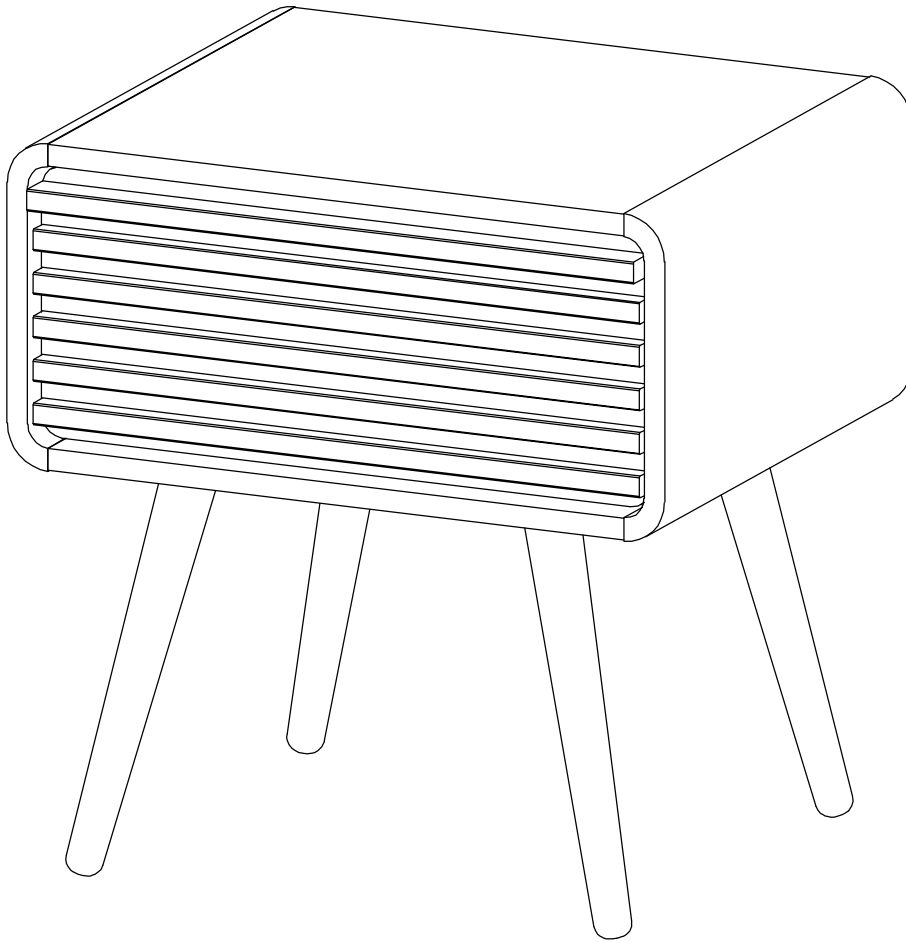

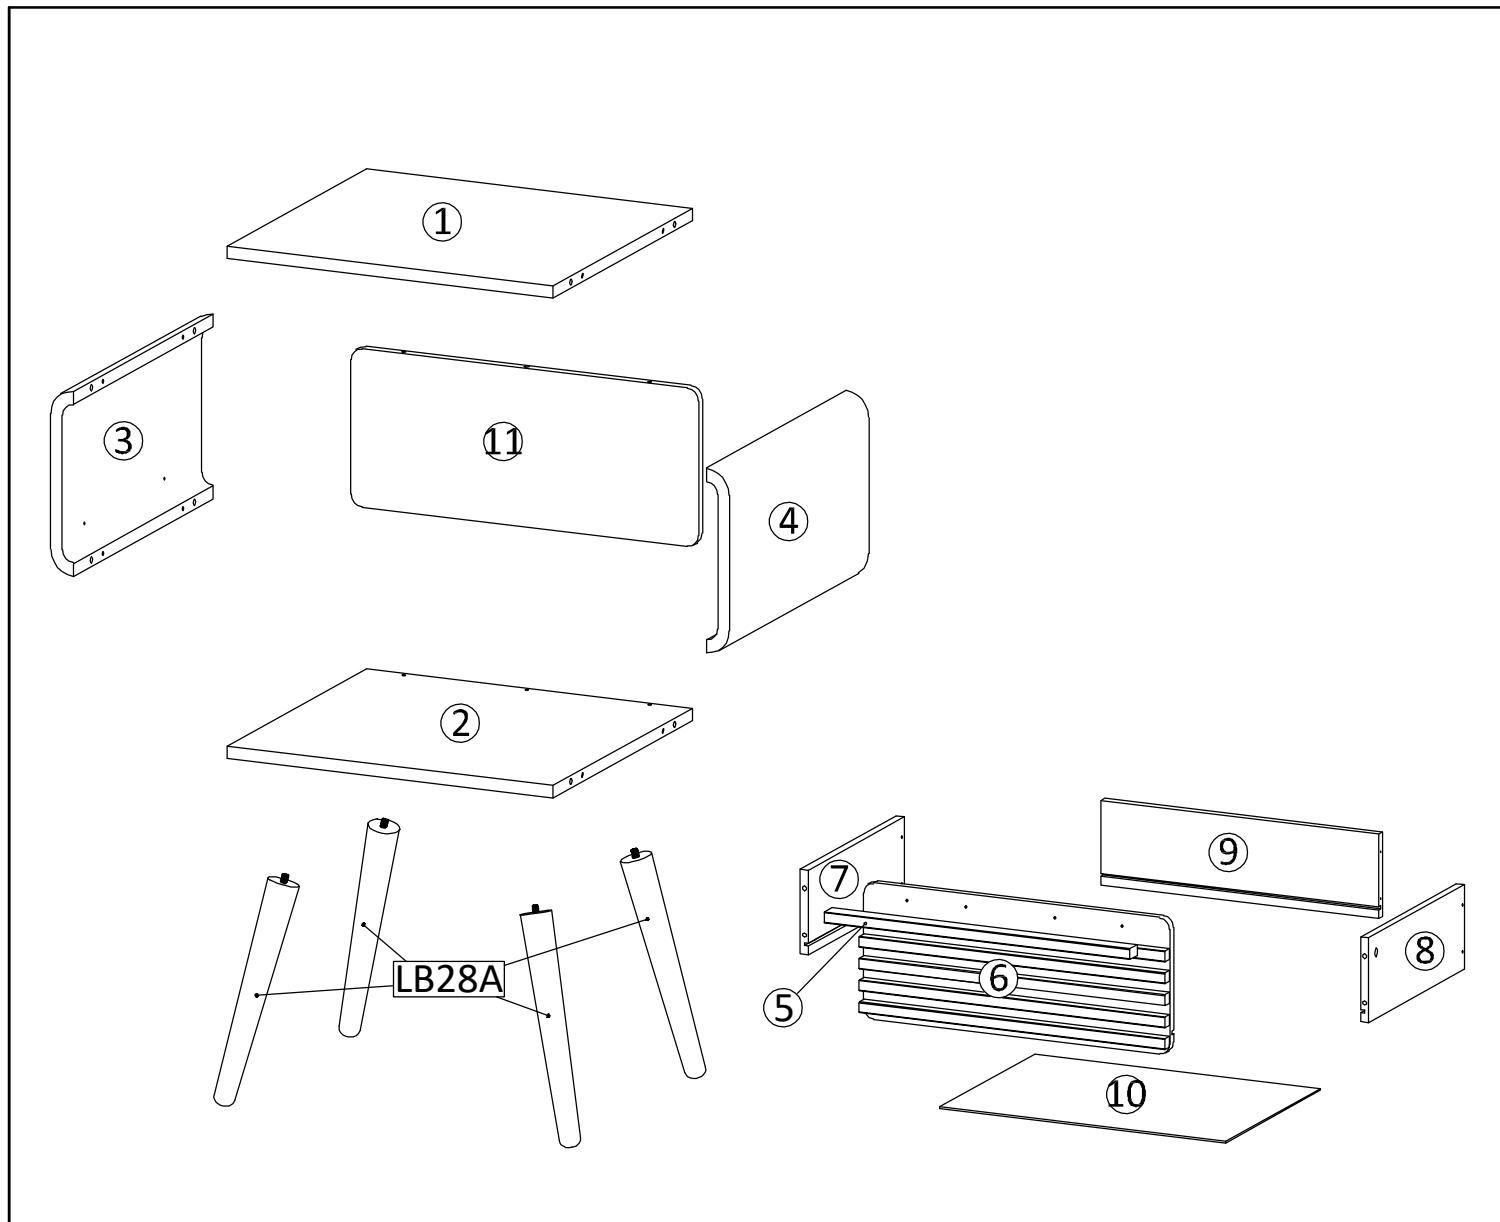

Hardware			
A	x 10	B	x 2
C	x 8	D	x 4
E	x 8	F	x 6
G	x 4	H	x 24
I	x 6	J	x 4
K	x 1	RM30A	x 1
PM1	x 4		



SET-UP TIME : 60 MINUTES






NUMBER OF PERSONS : 02







TOOLS :


1

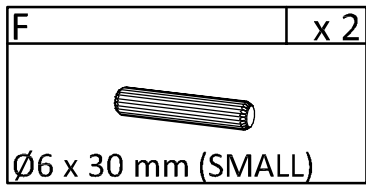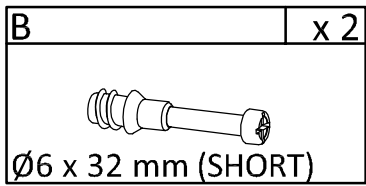
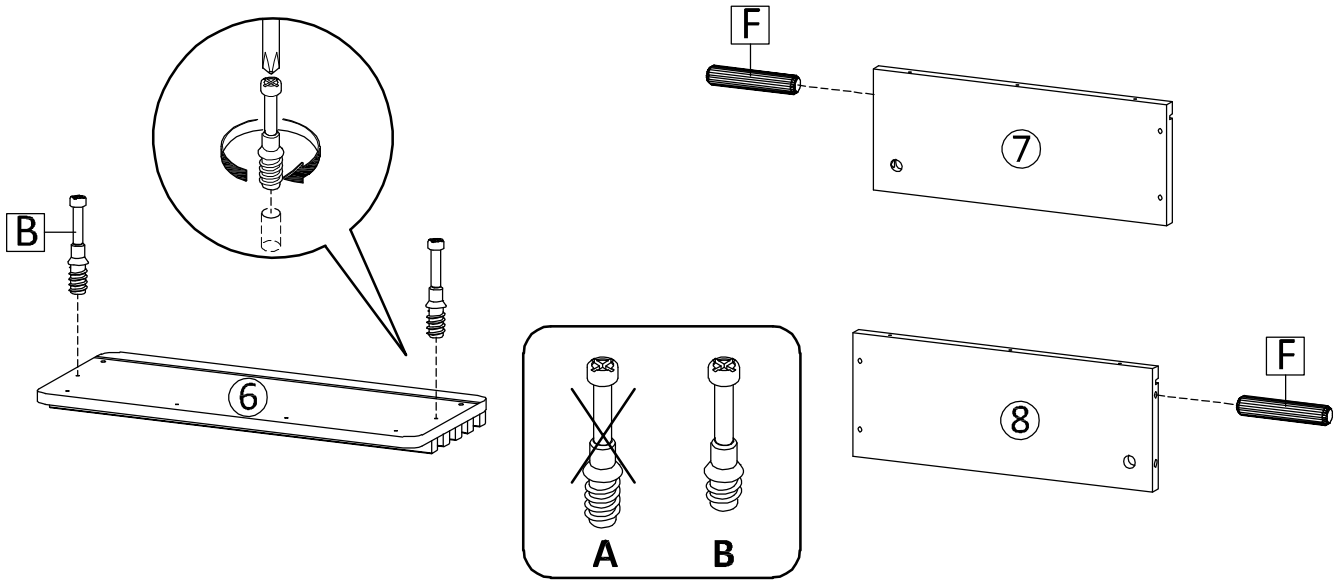


2

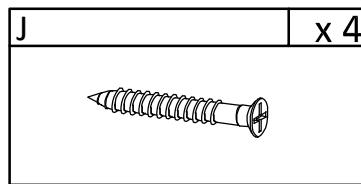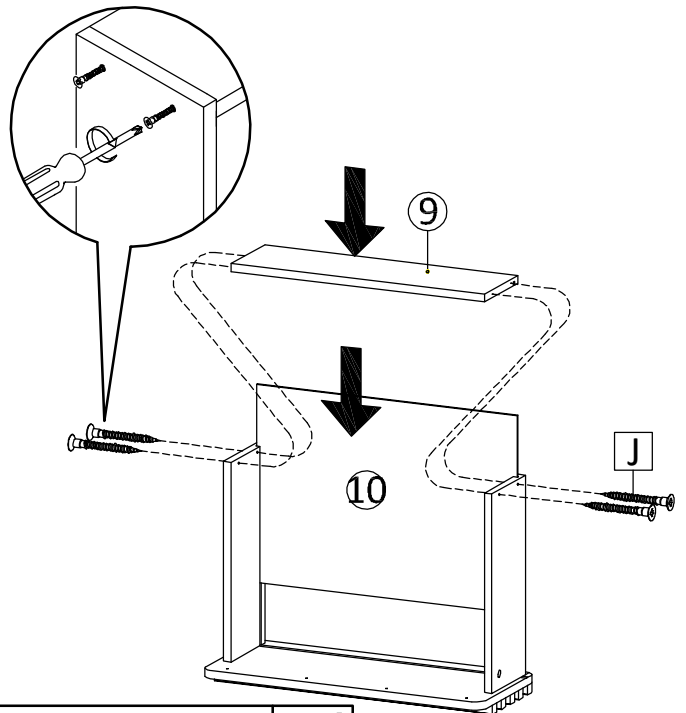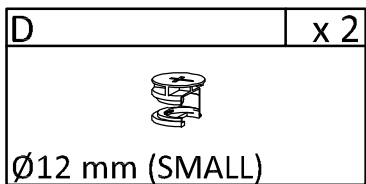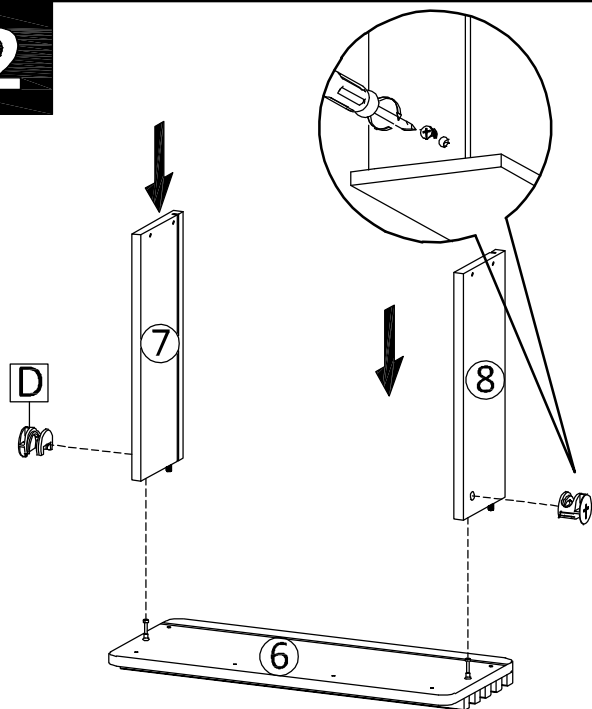



3

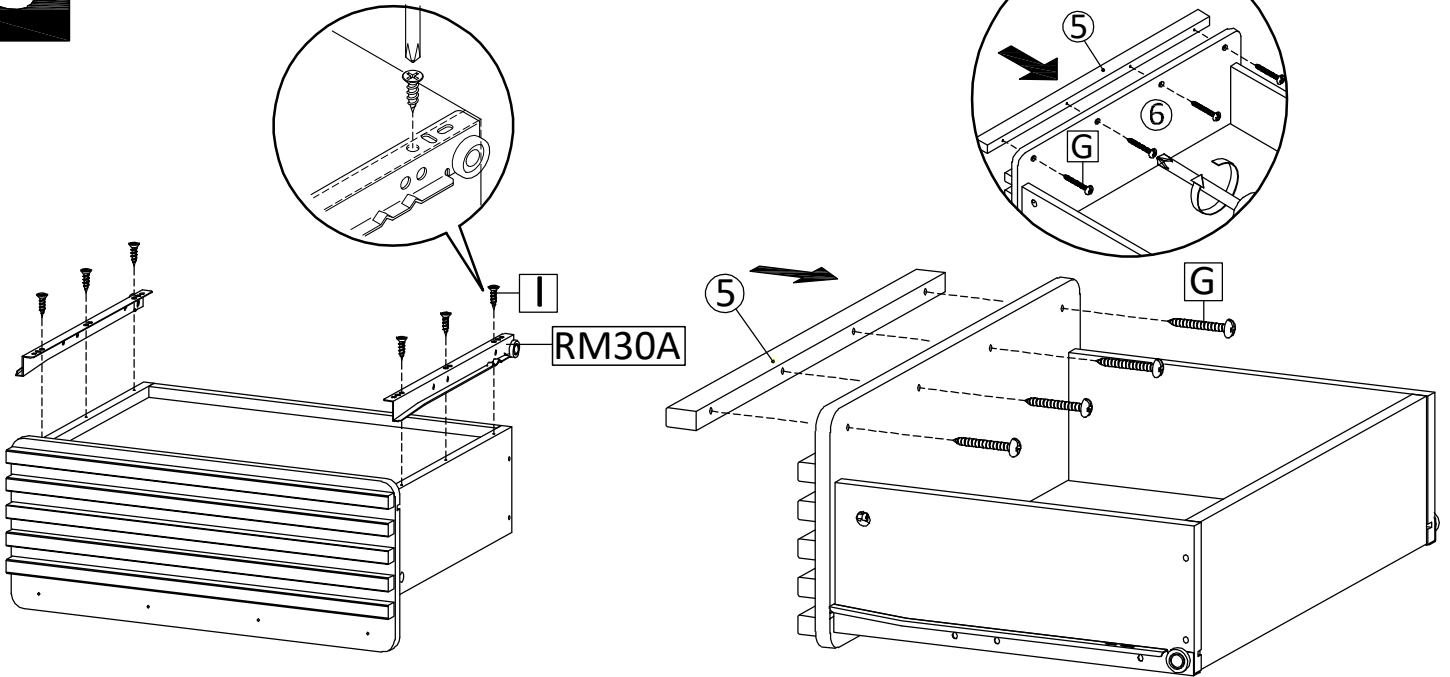

G	x 4	I	x 6	RM30A	x 1
					


4


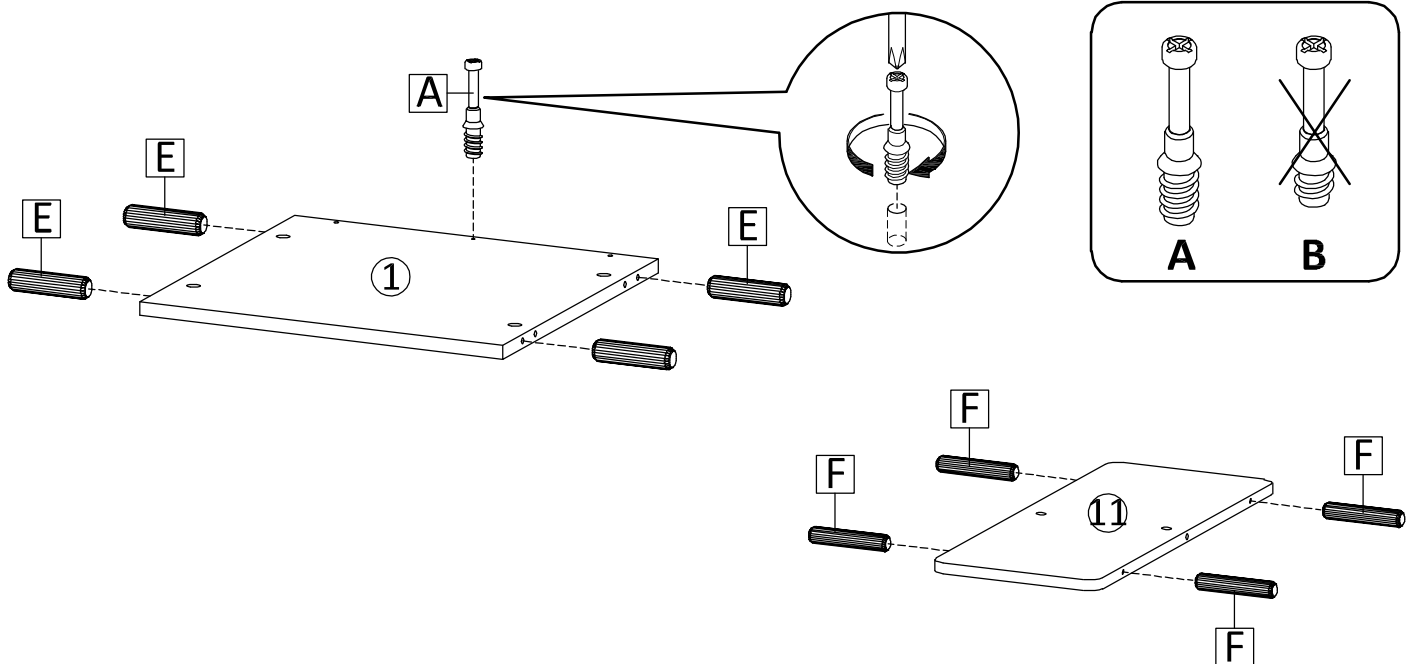


A	x 1	E	x 4	F	x 4
					
Ø6 x 35 mm (LONG)		Ø8 x 30 mm (BIG)		Ø6 x 30 mm (SMALL)	


5



Attention (Leg Mitres) Assembly Position

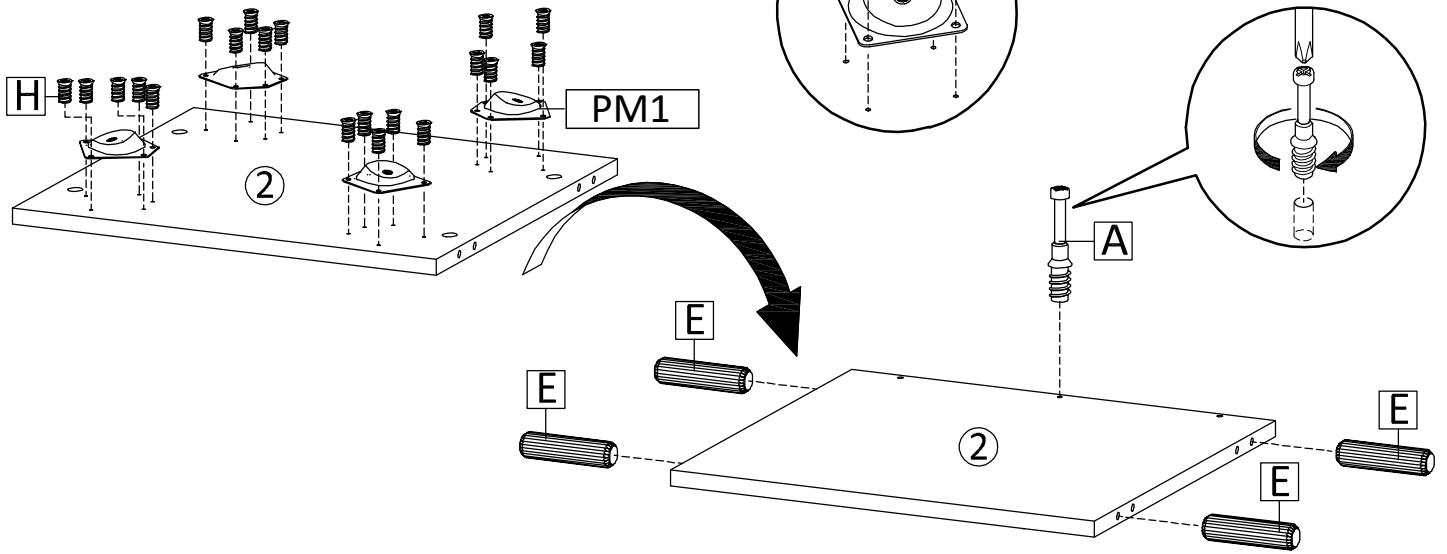


A	x 1	E	x 4	H	x 20	PM1	x 4
 Ø6 x 35 mm (LONG)		 Ø8 x 30 mm (BIG)					

6

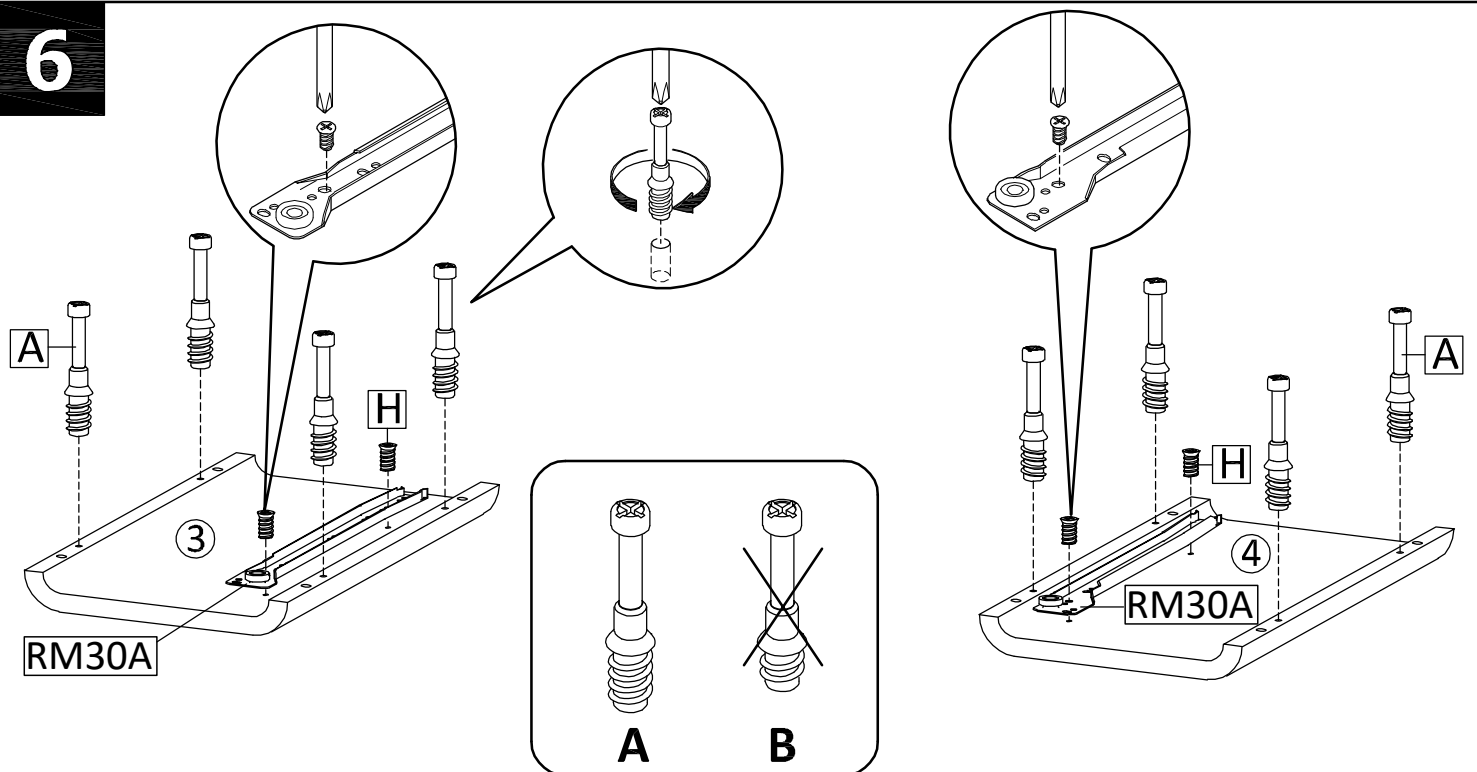

A	x 8	H	x 4	RM30A	x 1
 Ø6 x 35 mm (LONG)					


7

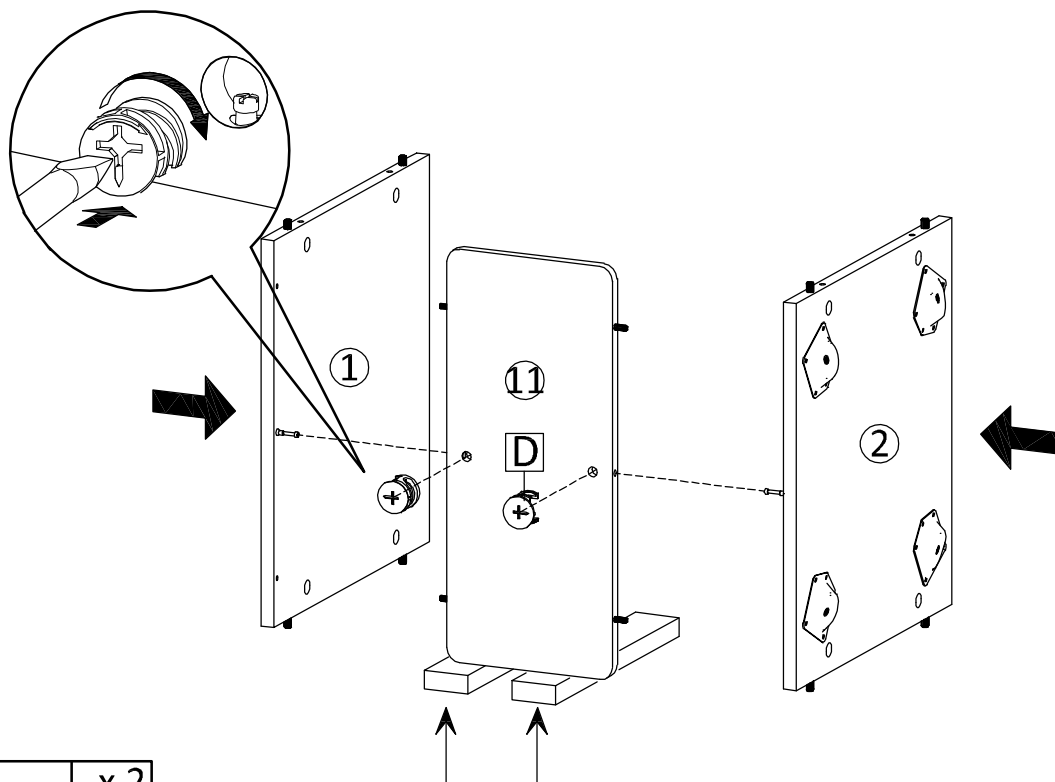

D	x 2
	
Ø12 mm (SMALL)	

USE EPS FROM THE PACKAGING MATERIAL


8

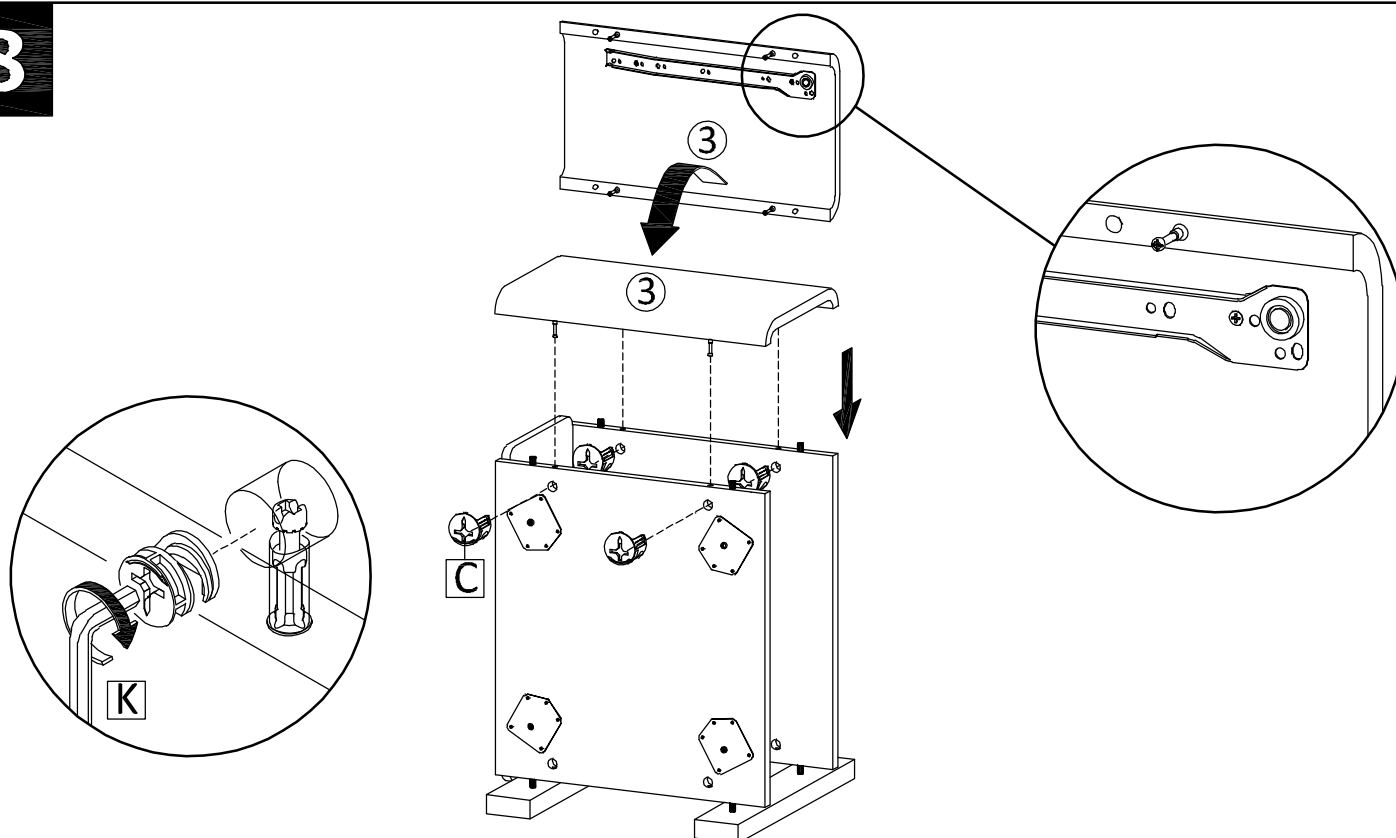

C	x 4
	
Ø15 mm (BIG)	


K	x 1
	

9


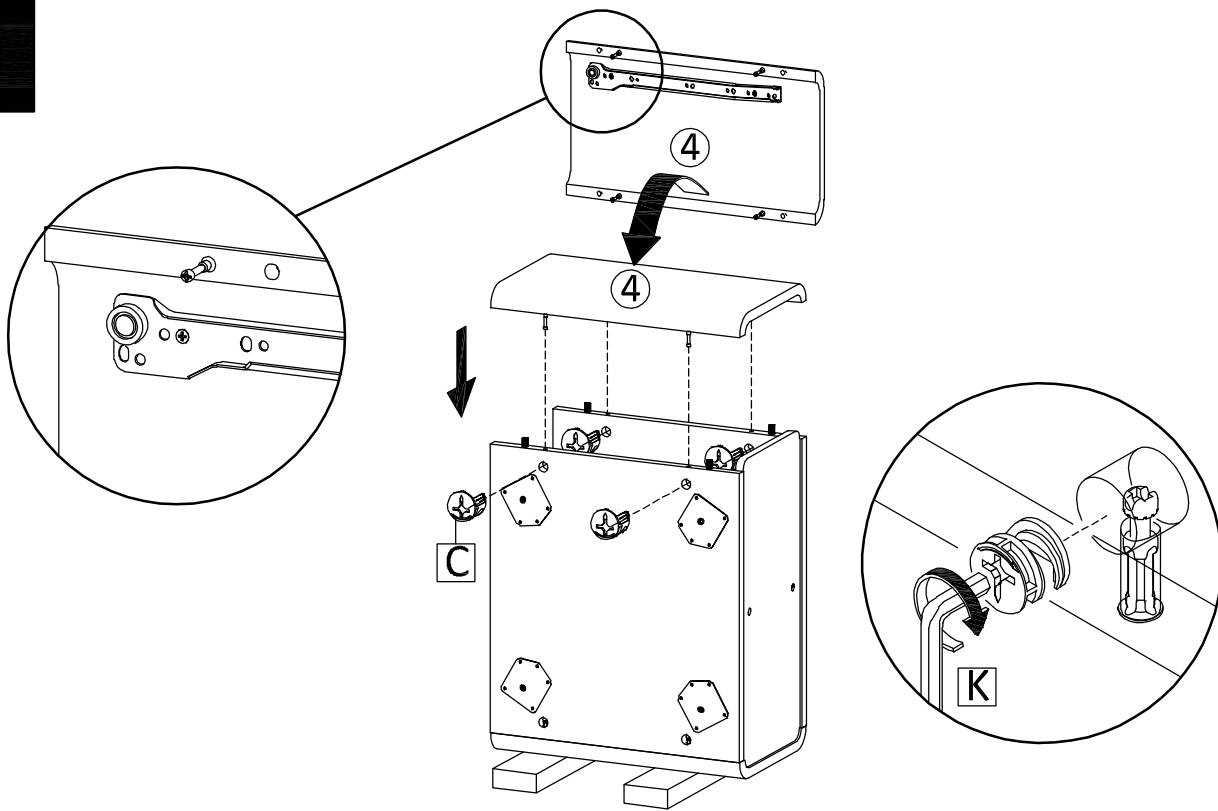


C	x 4	K	
 Ø15 mm (BIG)			

10

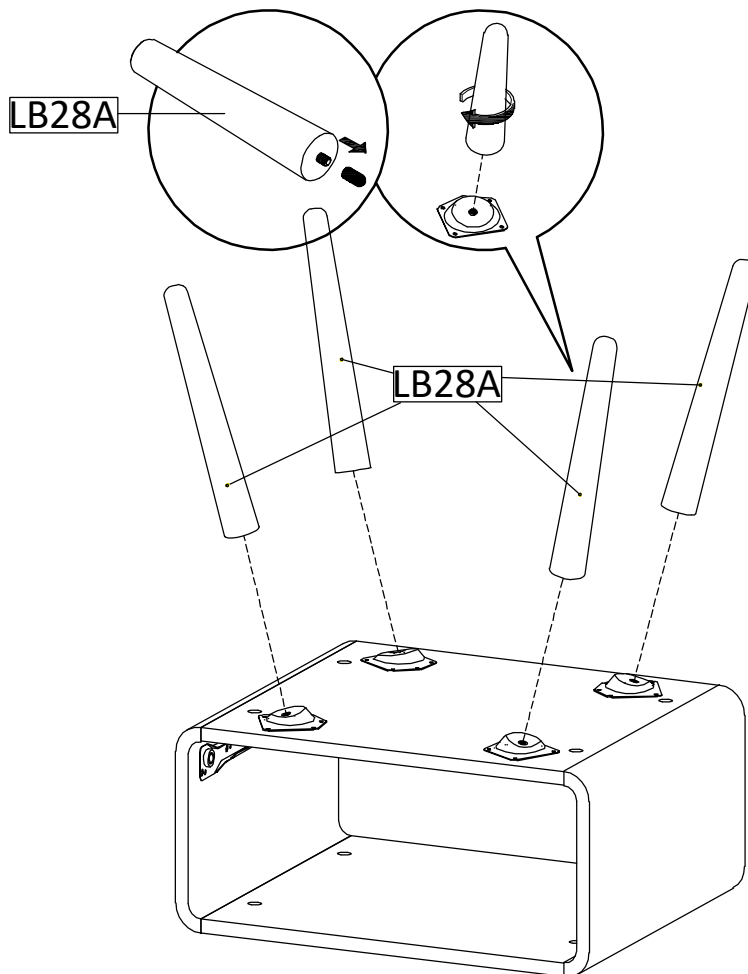

11

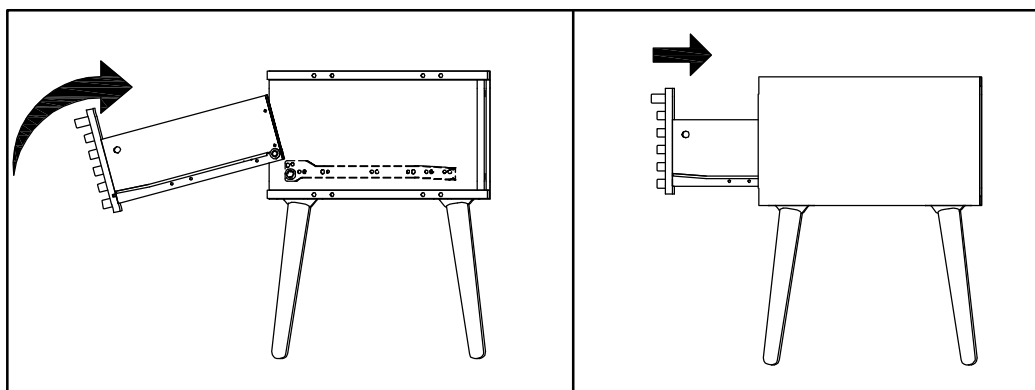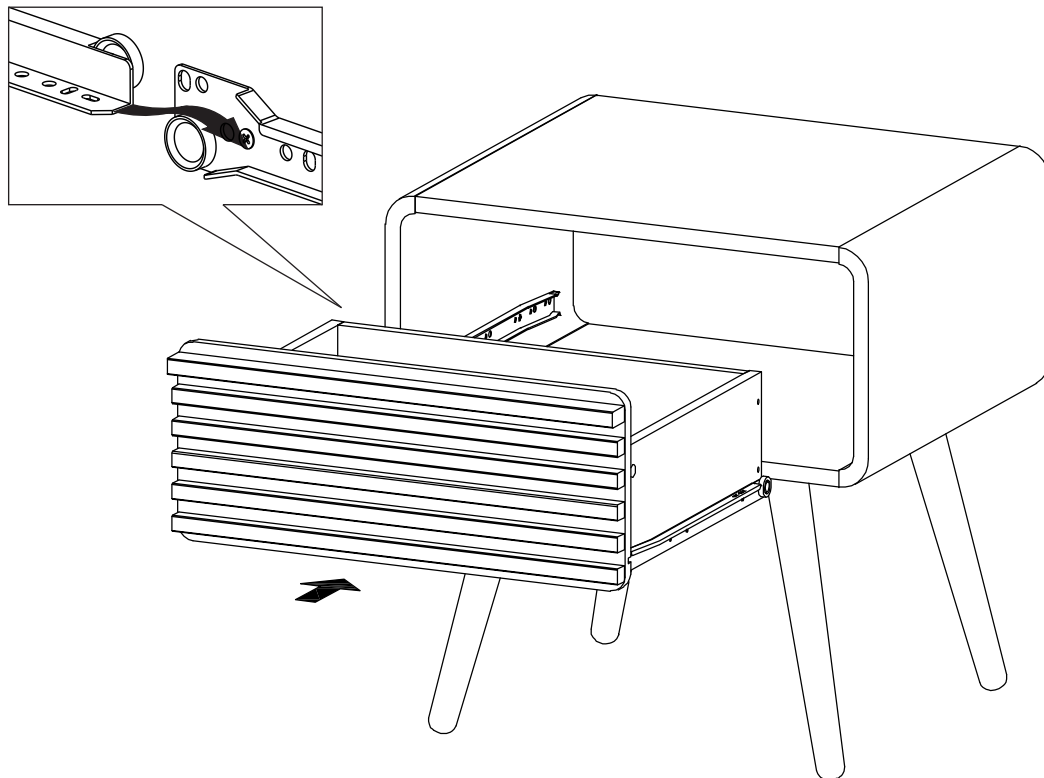

12

