ASSEMBLY INSTRUCTIONS

PAGE: 1/4 MODEL : GHSC-1408

(9)

(6)

 $|\otimes\rangle$

(4)

(5)

(10)

Before you begin, please follow assembly instructions carefully, then follow them step by step.

Read instruction carefully . See Furniture Parts list and Hardware List for guidance . Be sure you have all parts before you start assembling . Place and assemble furniture on a clean flat soft surface, such as carpet or rug to pervent being scratched.

PART LIST		QTY
1	TOP PANEL	1 PC
2	BOTTOM PANEL	1 PC
3	SIDE PANEL (L)	1 PC
4	SIDE PANEL (R)	1 PC
5	CENTER PANEL	1 PC
6	BACK PANEL	1 PC
7	SHELF PANEL (L)	4 PCS
8	SHELF PANEL (R)	4 PCS
9	DOOR PANEL (L)	1 PC
10	DOOR PANEL (R)	2 PCS

SELF-PREPARED TOOLS: Tools below are NOT included in package.				
SCREWDRIVER	HAMMER			
POWER DRILL				

LA DDWA DE				
HARDWARE				
Α	MINI FIX A1 A2 MC A3	6 SETS		
В	M8 X 30MM WOOD DOWEL	12 PCS		
С	M6 X 50MM CSK CAP WOOD SCREW	6 PCS		
D	M4 X 25MM C.B SCREW	6 PCS		
Е	M3.5 X 16MM C.B SCREW	40 PCS		
F	ALLEN KEY M4	1 PC		
G	5/8 NAIL 0	35 PCS		
Н	5/8 HINGES	6 PCS		
ı	METAL SHELF SUPPORT	32 PCS		
J	PVC HANDLE 108-160	3 PCS		
K	PVC SQUARE LEG 5038	4 PCS		
L	TIPPING PACK OI LI 1 LS LS LS LS	2 SETS		



Please ensure that all surfaces and edges with colours/laminations are facing forward/outward.



PAGE: 2/4


SCREWDRIVER

REQUIRED

MODEL: GHSC-1408



(Repeat 4 times.)
- Insert hardware **B** onto panel **(3)**, **(4)** and **(5)**.

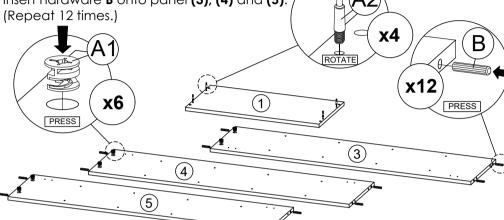



STEP 2


- Attach panel (3), (4) and (5) to panel (1).

- Insert all hardware **A2** into **A1**.

- Rotate all **A1** until tight.





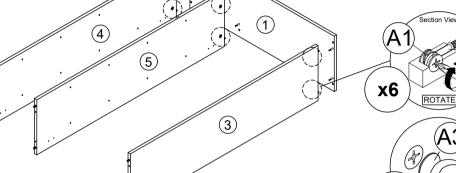


* In this step hardware A1, A2 and B are pre-inserted.

STEP 3

Connect panel (2) to panel (3), (4) and (5) by using hardware C and F. (Repeat 6 times)

* Ensure the arrows on hardware A1 point towards mounting positions.

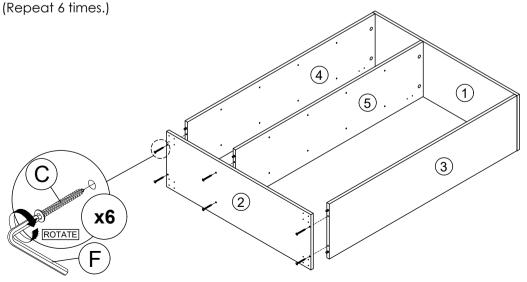


* In this step hardware **B** are pre-inserted.

STEP 4

- Fix hardware **K** into panel **(2)** with hardware **E**. (Repeat 4 times for each hardware.)

- Cover back the hardware **K**.

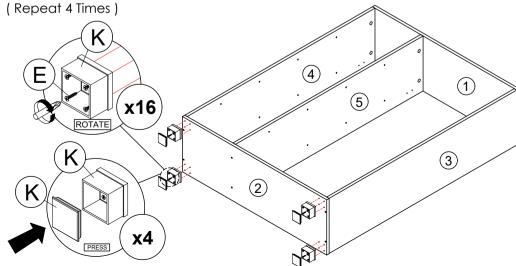



x6

SCREWDRIVER

REQUIRED

HARDWARE



PAGE: 3/4

MODEL: GHSC-1408

STEP 5


Assemble panel (6) to entire body with hardware G. (Repeat 35 times.)




STEP 6

- Insert hardware I into mounting positions on panel (3), (4) and (5) by hand. (Repeat 32 times.)

- Assemble the panel (7) and (8) into between panel (3), (4) and (5).

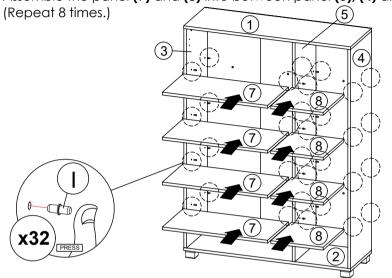

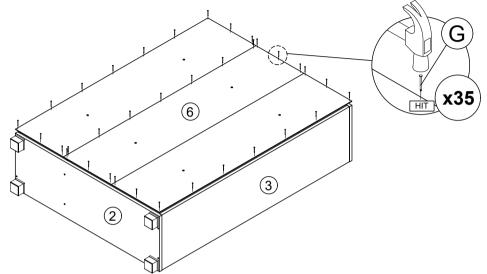


STEP 7

- Fix hardware H onto panel (9) and (10) by using hardware E. (Repeat 2 times for each hardware.)



- Fix hardware J onto panel (9) and (10) by using hardware D.

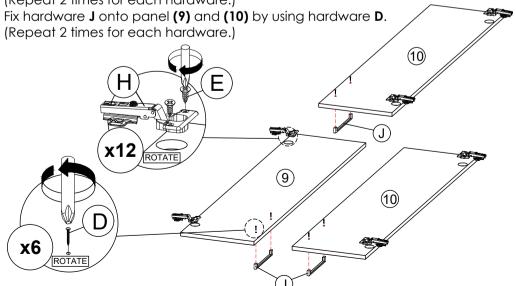


STEP 8

- Fix hardware H into panel (3), (4) and (5) by using hardware E. (Repeat 2 times for each hardware.)



- Tighten or loosen the screw to adjust position of panel (9) and (10). (Do only when needed.)

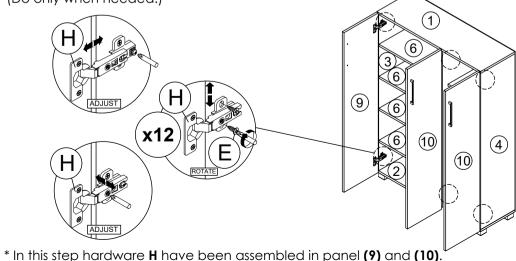

MODEL: GHSC-1408 **ASSEMBLY INSTRUCTIONS** PAGE: 4/4 STEP 9 STEP 10 SCREWDRIVER REQUIRED **POWER** HAMMER DRILL Assemble hardware L1 into panel (1) and (6) - Mark and use the power drill REQUIRED REQUIRED by using hardware L2. to drill a hole on the wall. (Repeat 2 times.) - Hit hardware L3 into the wall. (Repeat 2 times.) (1) (1) **x2** (6) (9) (3) (10) (4) (10) STEP 11 STEP 12 SCREWDRIVER - Assemble hardware L1 to L3 by using hardware L4. REQUIRED - Connect two of the hardware L1 by using hardware L5. - Tighten the hardware L5. (Repeat 2 times.) (Repeat 2 times.) (1) (1)(9) (9) (10) (10)

(4)

(10)

4

x2

(10)