


SIDEBORD

ASSEMBLY INSTRUCTIONS

A. SIDEBOARD 1PC

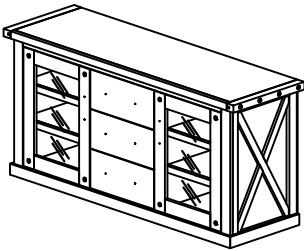

B. LEGS 1PC



B. LEGS 1PC



B. LEGS 1PC




B. LEGS 1PC




C. SUPPORT LEG 1PC



SIDEBOARD ASSEMBLED

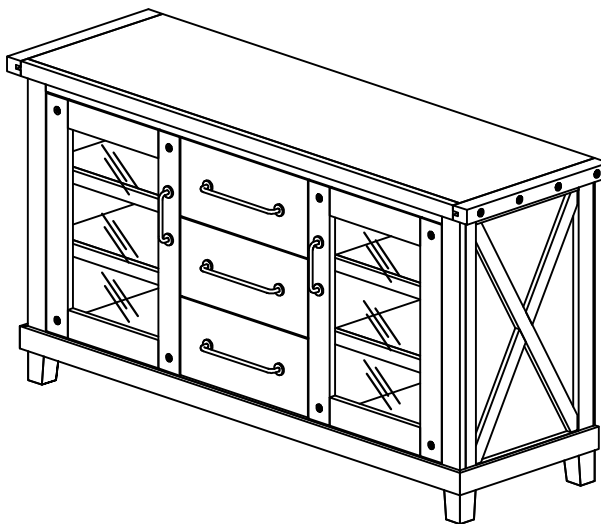


HARDWARE ARE PACKED IN BOX

1	ALLEN BOLT M6 x 50 MM	04 PCS	2	WASHER M6	04 PCS	3	ALLEN KEY (4MM)	01 PC	4	HANDLE	02 PCS	5	BOLT (M4 x 25 MM)	04 PCS
														


TOOL REQUIRED

PHILLS HEAD SCREW
DRIVER NOT PROVIDED





STEP 1:

FASTEN THE LEG (B) TO THE DRESSER (A), WITH BOLTS (1) AND WASHERS (2).

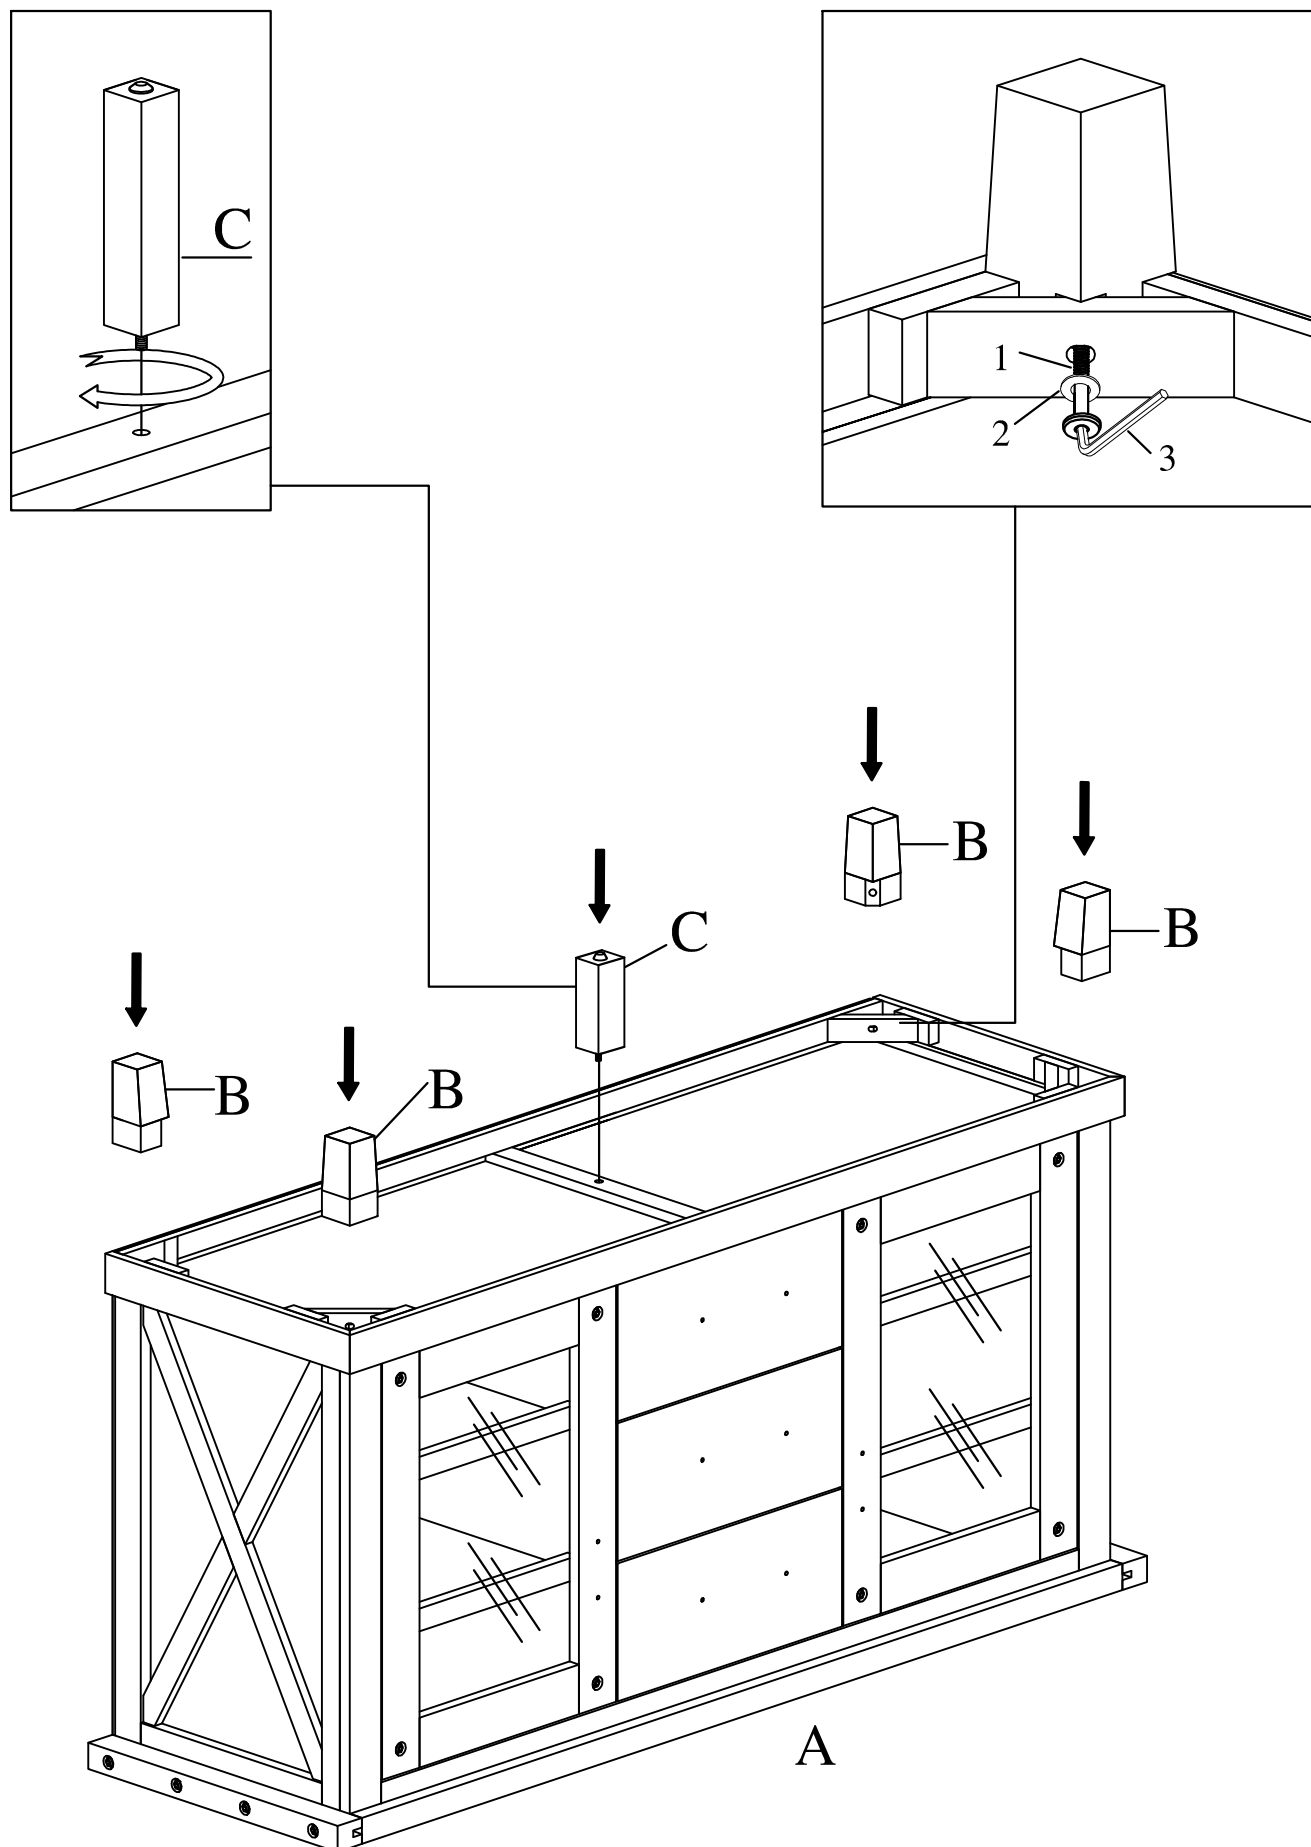



STEP 2:

PULL OUT AND REMOVE HANDLE.

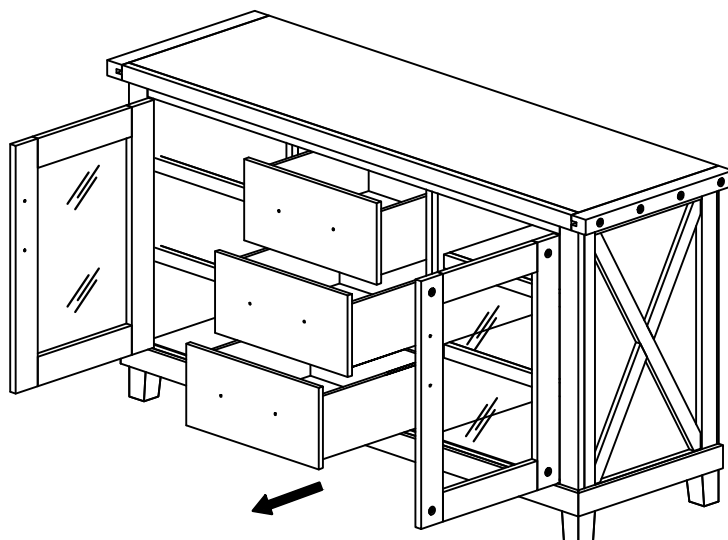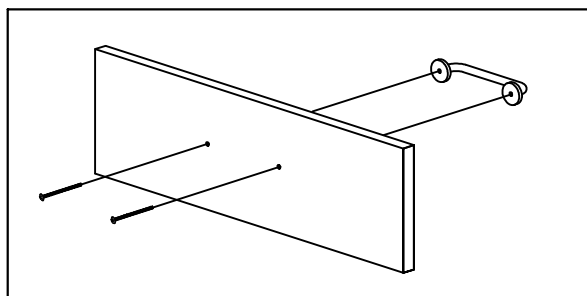

STEP 3:

ASSEMBLE HANDLE.

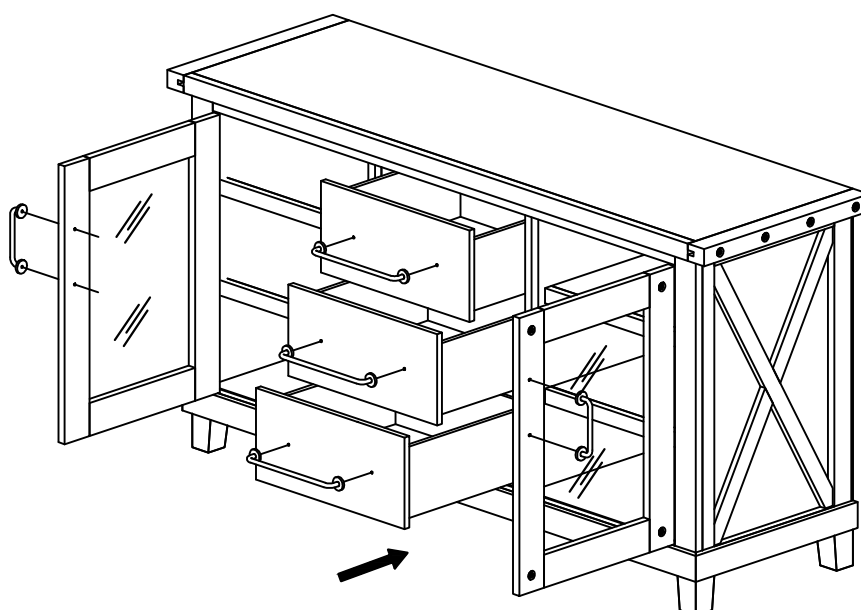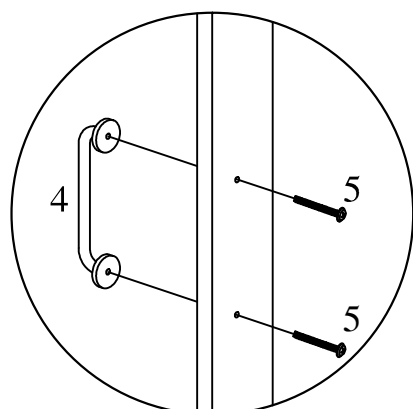

STEP 4:

ASSEMBLY COMPLETE.

