


SKU: KHD-LT-Q07/KHD-YT-Q07-White

Lot No.: YT-No.4

Bed Frame Assembly Instruction

#Number System
Easy assembly by following 1,2,3...

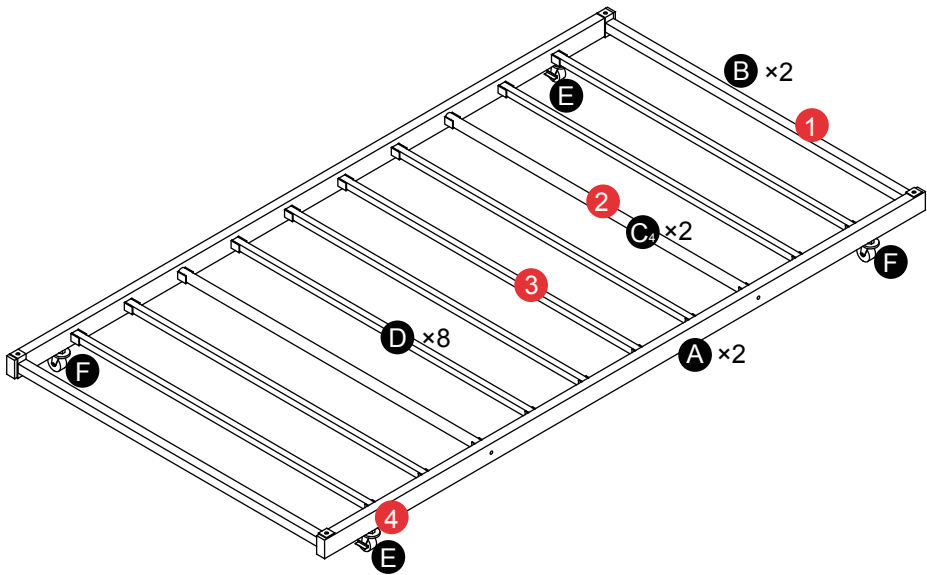

Componets

| | | |
|---|--|---|
| A | | 2 |
| B | | 2 |
| C | | 2 |
| D | | 8 |
| E | | 2 |
| F | | 2 |

Screws & Tools


| | | | |
|---|--|---------|---|
| 1 | | M6*60mm | 4 |
| 2 | | M6*45mm | 4 |
| 3 | | M6 | 4 |
| 4 | | M5 | 1 |
| 5 | | M10/M13 | 1 |
| 6 | | M14 | 1 |

Tips Check all the components & screws before assembly. Do not install in case part is missing, email us at: support@vecelo.com. We will resend within 24 hours.

Return Policy

We believes you will absolutely love your Metal platform bed. But if for some reason you want to return the foundation, please contact us directly before you decide to return your product. Our customer service organization can answer most concerns and assist you with any questions you may have about your new foundation, please email us first at: support@vecelo.com. The item must be return within 30 days of delivery for a full refund. The item must be returned in good condition, in original box, with all original proof of purchase, parts and accessories.

Trouble shooting:

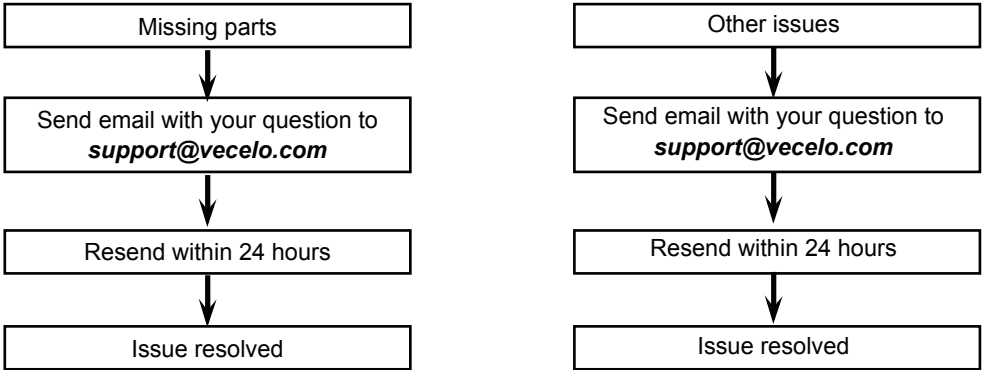

1


Connect A to B

1

M6*60mm
4pcs

3

M6
4pcs

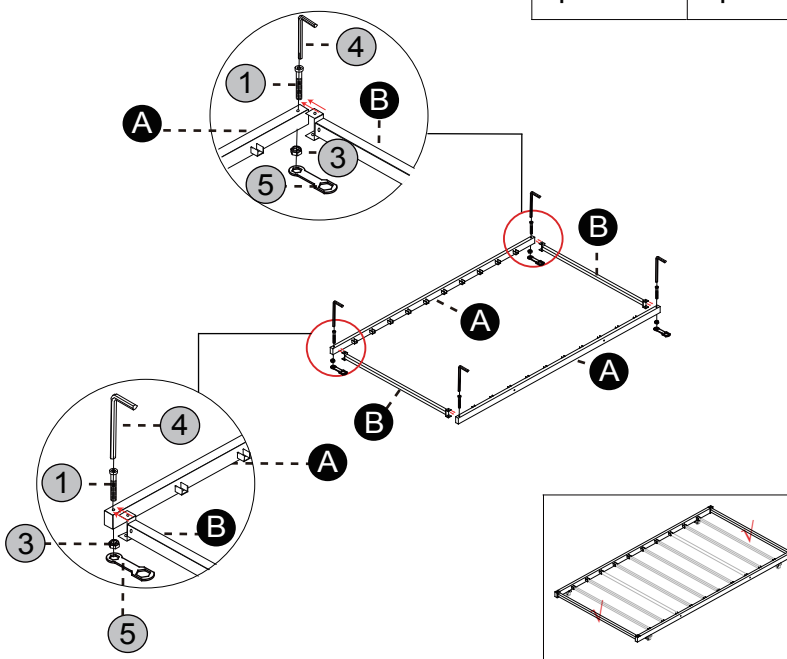


2

Connect C₄ to A

2


M6*45mm
4pcs

Note: C Part with screw holes

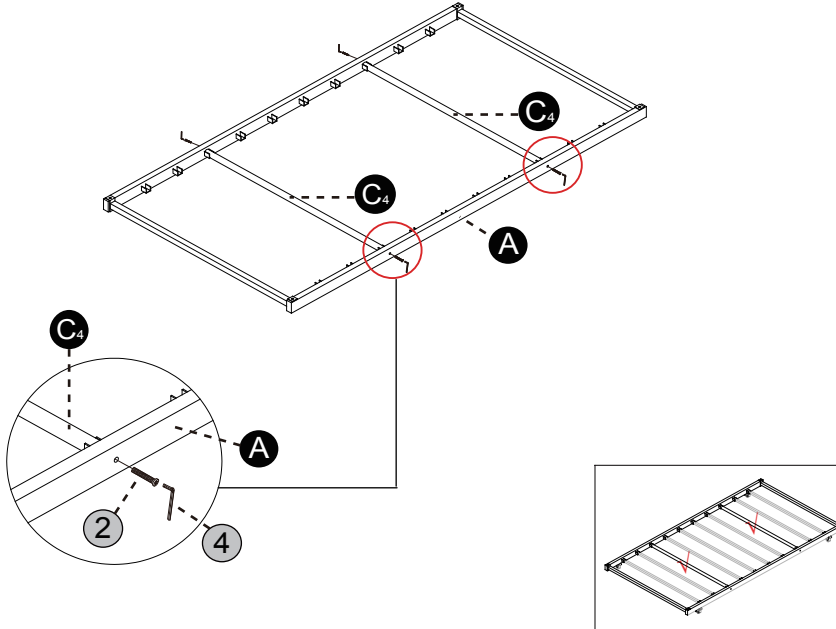

3


Buckle all the slats up

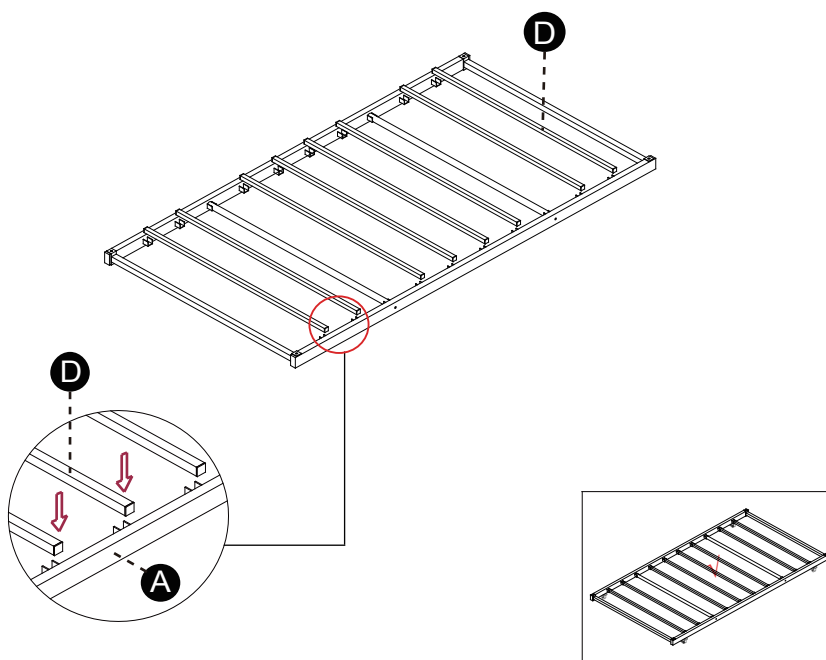

4


Connect E & F to A

Wheels with brake need to be installed diagonally

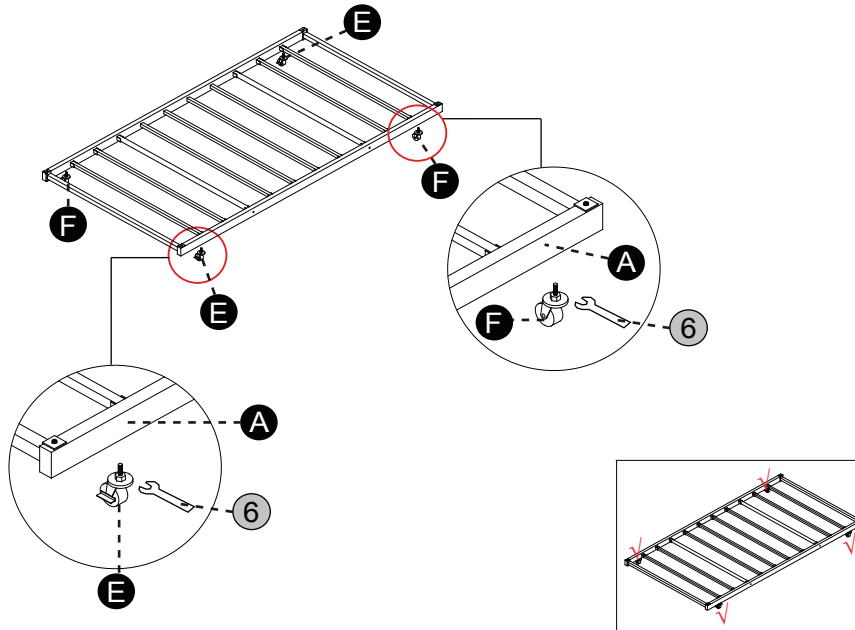

5

Check and tighten all screws

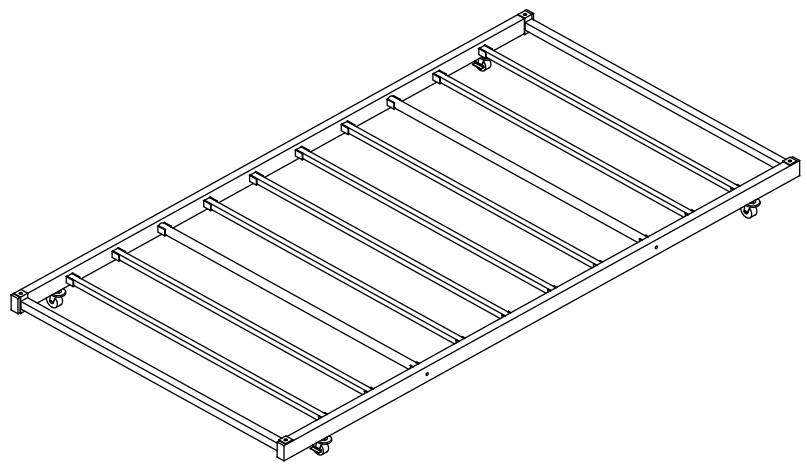

CAUTIONS!



How to find us?

Customer Service

Email: support@vecelo.com

Website: www.vecelo.com