



LATERAL FILE ASSEMBLY INSTRUCTIONS

A. LATERAL FILE 1PC

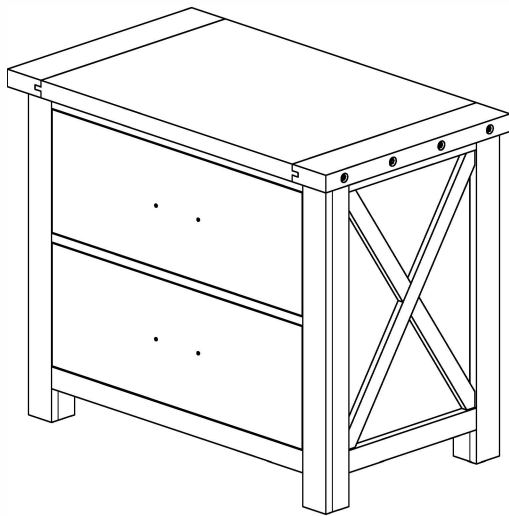

LATERAL FILE
ASSEMBLED


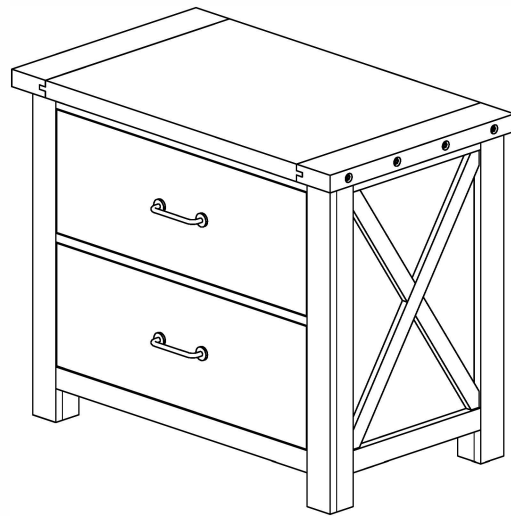


HARDWARE ENCLOSED IN BOX

1	HANDLE U128	02 PCS	2	BOLT (M4 x 35 MM)	04 PCS	
<p>TOOL REQUIRED</p> <p>PHILLIPS HEAD SCREW DRIVER NOT PROVIDED</p>						

STEP 1:

PULL OUT THE FILE DRAWERS, AND ATTACH THE HANDLE (1) WITH TWO BOLTS (2). REPEAT THIS STEP FOR BOTH DRAWERS.

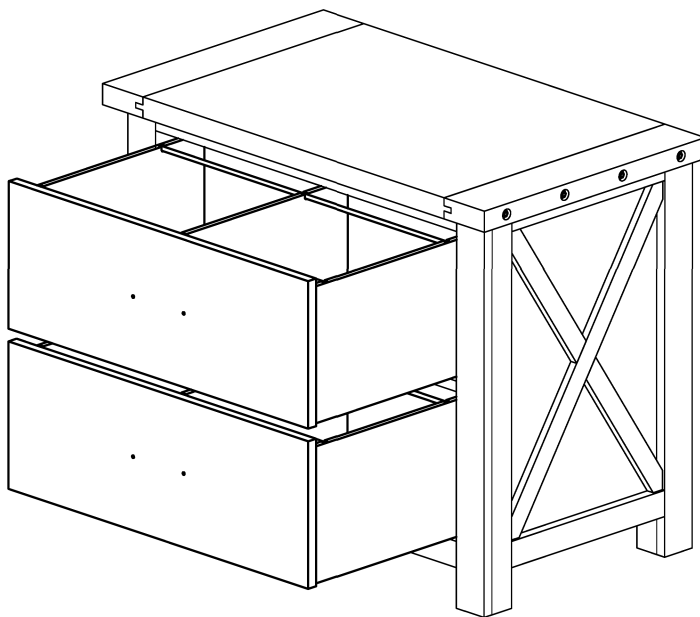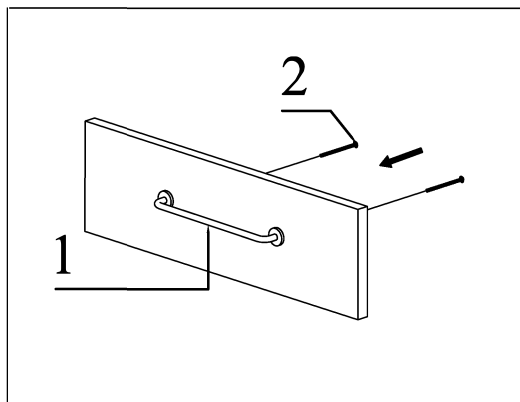

STEP 2:

ASSEMBLY COMPLETE.

