


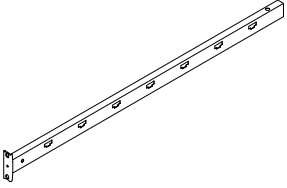
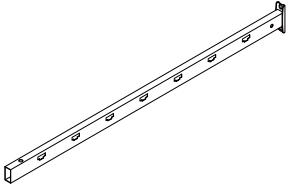
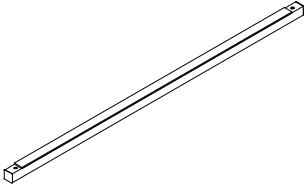
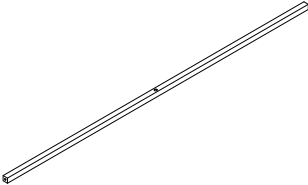
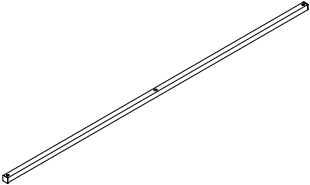



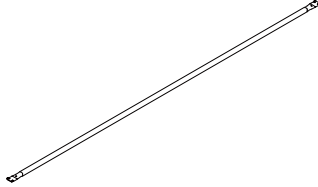








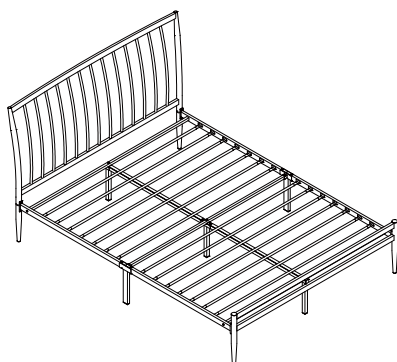


ASSEMBLY INSTRUCTIONS

METAL QUEEN BED


A Headboard	B Footboard	C Headboard Leg	D Front Rail Section
			
1PC	1PC	2PCS	2PCS
E Rear Rail Section	F Center Rail	G Front & Rear Support Bar	H Center Support Bar
			
2PCS	2PCS	2PCS	1PC
I Rail Support Leg	J Center Support Leg	K Front & Rear Support Leg	L Slat
			
2PCS	1PC	2PCS	14PCS
M Slat Connector	N Bolt 1/4" x 19mm	O Bolt 5/16" x 19mm	P Bolt 5/16" x 48mm
			
28PCS	2PCS	8PCS	5PCS
Q Bolt 1/4" x 35mm	R Bolt 5/16" x 55mm	S Bolt 5/16" x 34mm	T Allen Key 4mm
			
6PCS	2PCS	2PCS	1PC

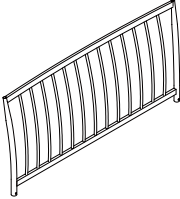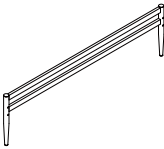


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.

1


Attach Headboard Leg (C) to Headboard (A) using Bolt (N) with Allen Key (T).

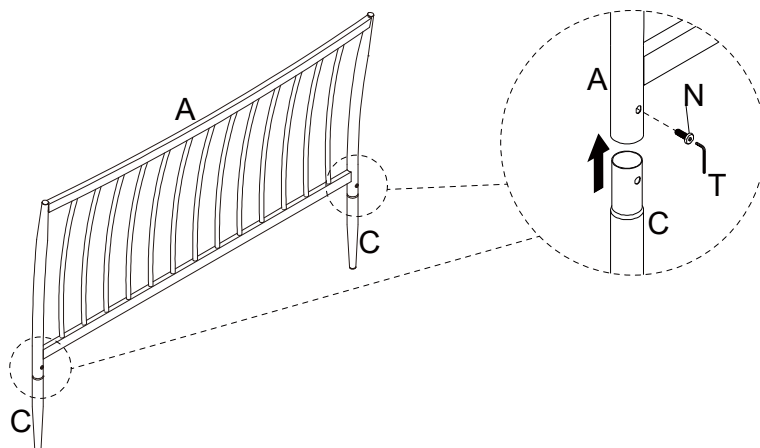**2**

Attach Rail Support Leg (I) to Front & Rear Rail Section (D & E) using Bolt (P) with Allen Key (T).

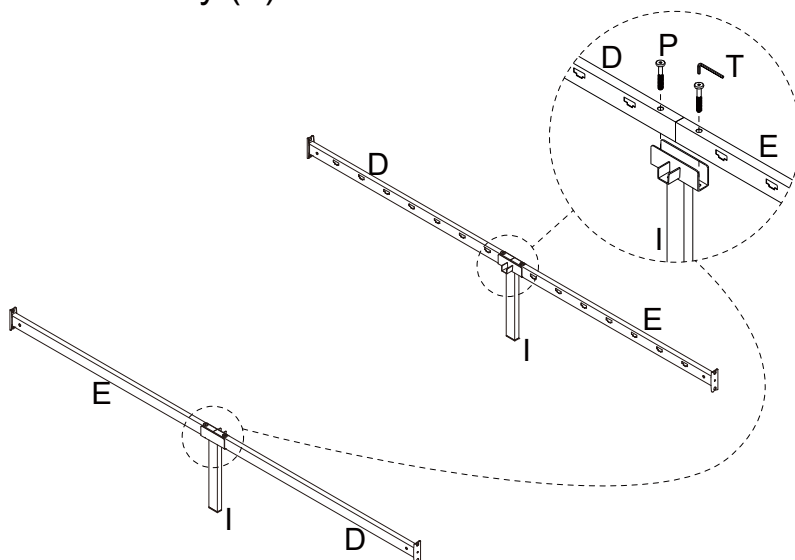
**3**

Attach Front & Rear Rail Section (D & E) to Headboard (A), Footboard (B) and Headboard Leg (C) using Bolt (O) with Allen Key (T).

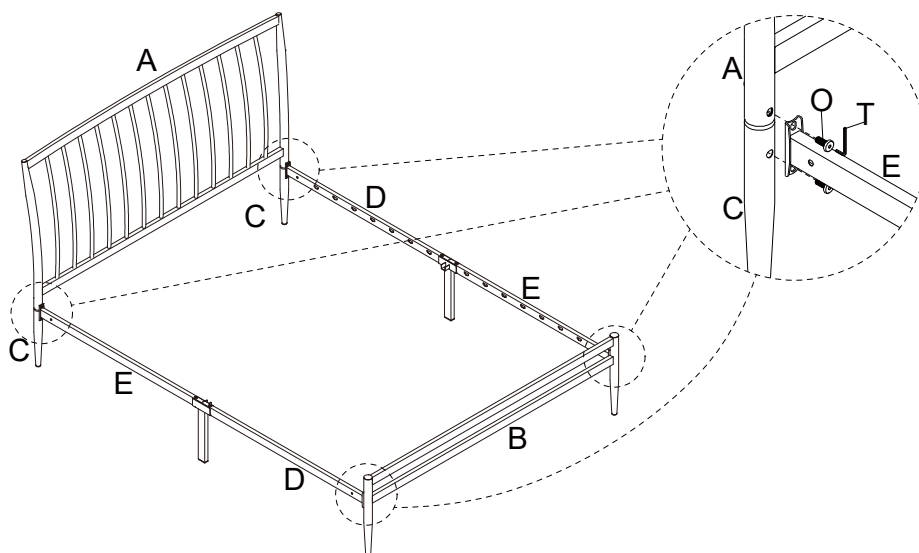


4

Attach Center Support Bar (H) to Rail Support Leg (I) using Bolt (Q) with Allen Key (T). Then attach Front & Rear Support Bar (G) to Front & Rear Rail Section (D & E) using Bolt (Q) with Allen Key (T).

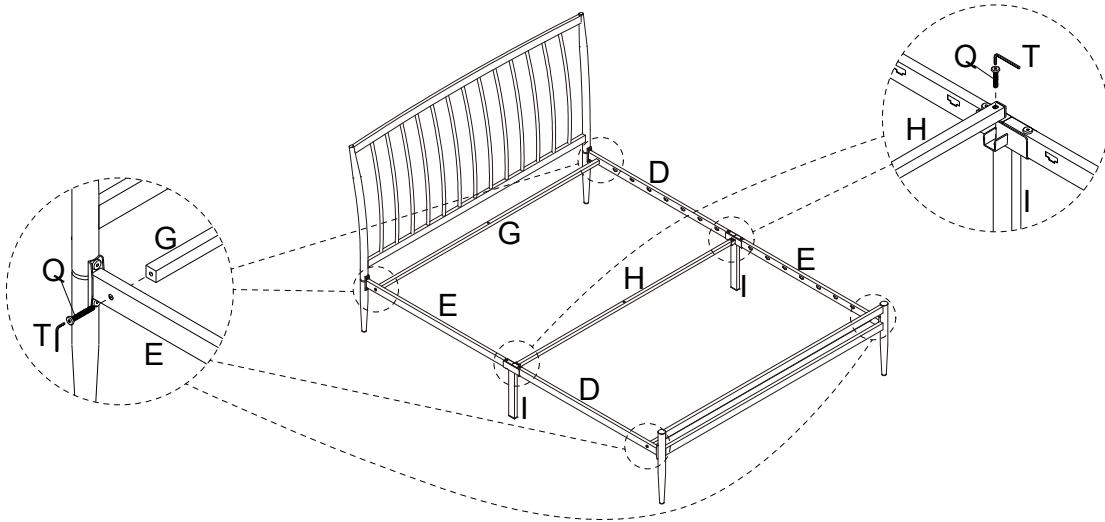


5

Attach Center Rail (F) and Front & Rear Support Leg (K) to Front & Rear Support Bar (G) using Bolt (R) with Allen Key (T). Then attach Center Support Leg (J) to Center Rail (F) and Center Support Bar (H) using Bolt (S & P) with Allen Key (T).

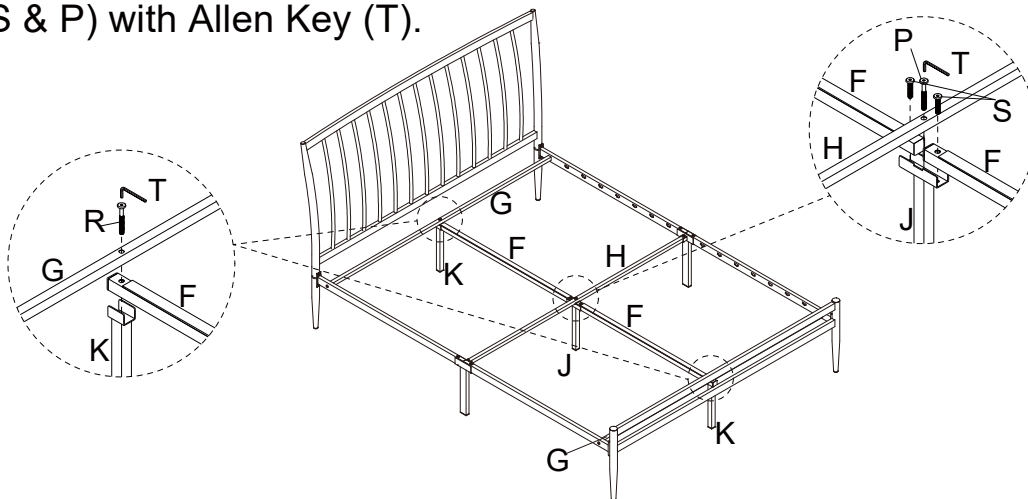

6

Insert Slat (L) into Front & Rear Rail Section (D & E) as shown. Then lock Slat Connector (M) to fix Slat (L).

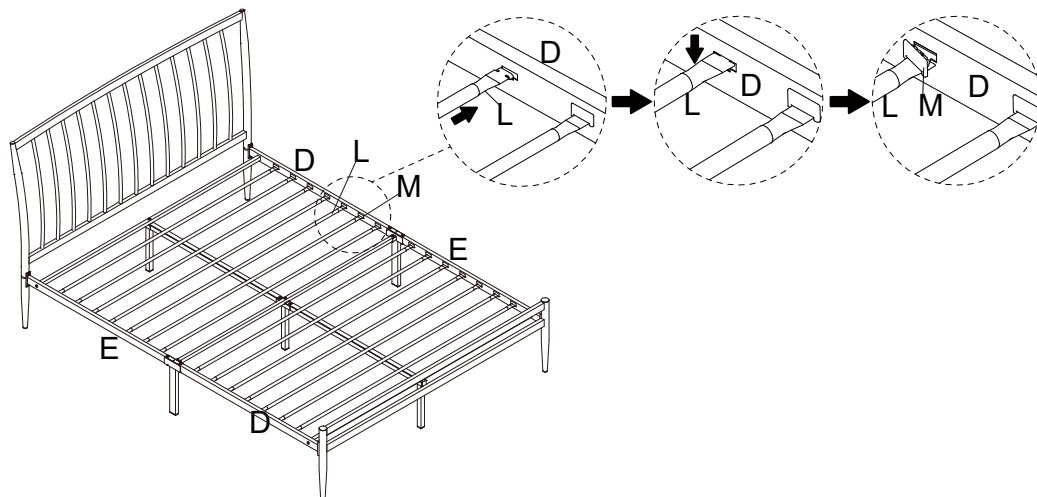

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.