


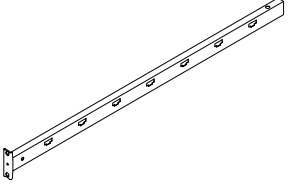
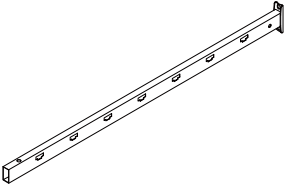
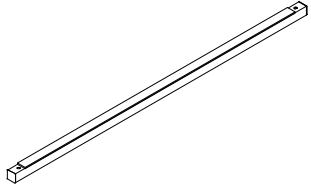
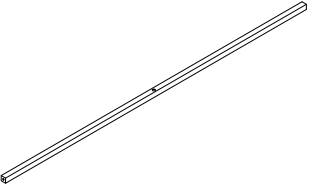
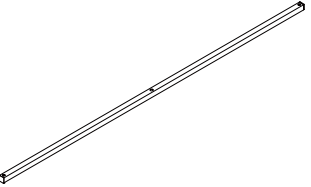



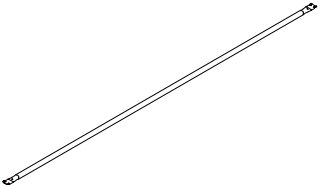








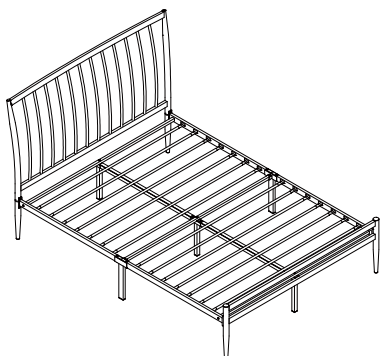


ASSEMBLY INSTRUCTIONS

METAL FULL BED


A Headboard  1PC	B Footboard  1PC	C Headboard Leg  2PCS	D Front Rail Section  2PCS
E Rear Rail Section  2PCS	F Center Rail  2PCS	G Front & Rear Support Bar  2PCS	H Center Support Bar  1PC
I Rail Support Leg  2PCS	J Center Support Leg  2PCS	K Front & Rear Support Leg  2PCS	L Slat  14PCS
M Slat Connector  28PCS	N Bolt 1/4" x 19mm  2PCS	O Bolt 5/16" x 19mm  8PCS	P Bolt 5/16" x 48mm  5PCS
Q Bolt 1/4" x 35mm  6PCS	R Bolt 5/16" x 55mm  2PCS	S Bolt 5/16" x 34mm  2PCS	T Allen Key 4mm  1PC

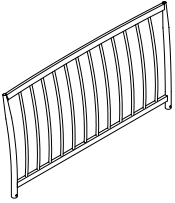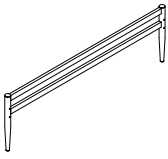

This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


1

Attach Headboard Leg (C) to Headboard (A) using Bolt (N) with Allen Key (T).

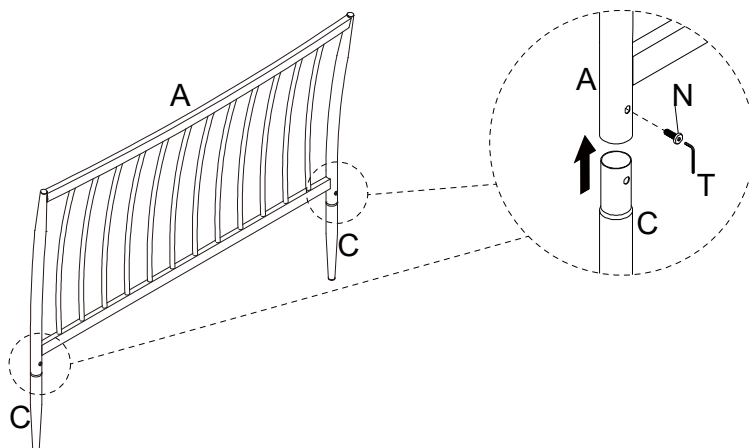


2

Attach Rail Support Leg (I) to Front & Rear Rail Section (D & E) using Bolt (P) with Allen Key (T).

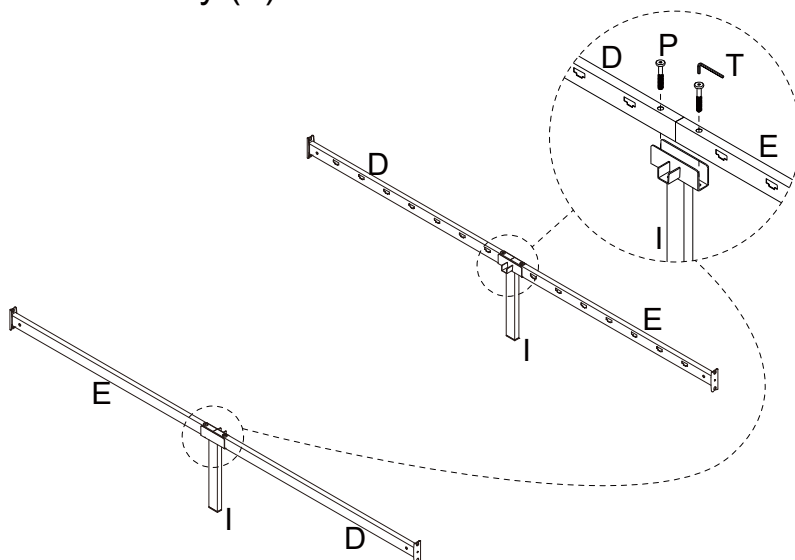


3

Attach Front & Rear Rail Section (D & E) to Headboard (A), Footboard (B) and Headboard Leg (C) using Bolt (O) with Allen Key (T).

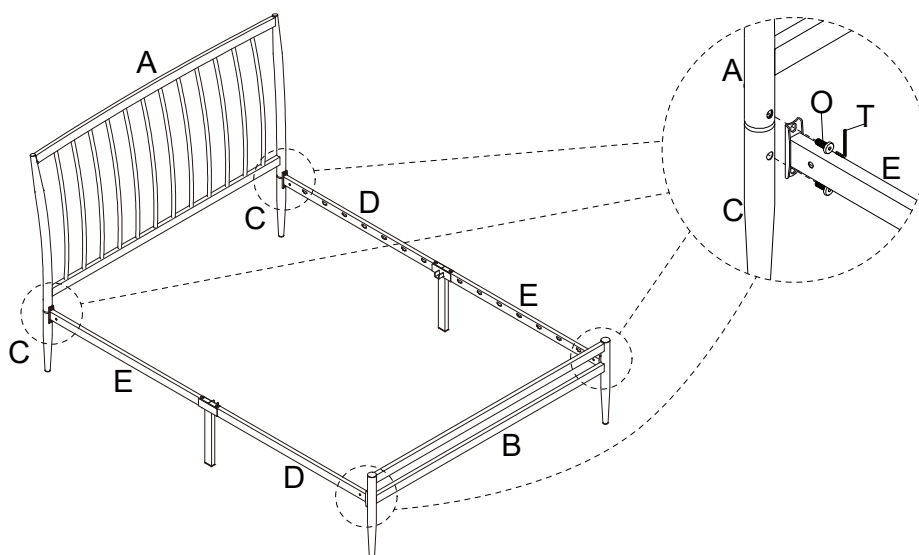


4

Attach Center Support Bar (H) to Rail Support Leg (I) using Bolt (Q) with Allen Key (T). Then attach Front & Rear Support Bar (G) to Front & Rear Rail Section (D & E) using Bolt (Q) with Allen Key (T).

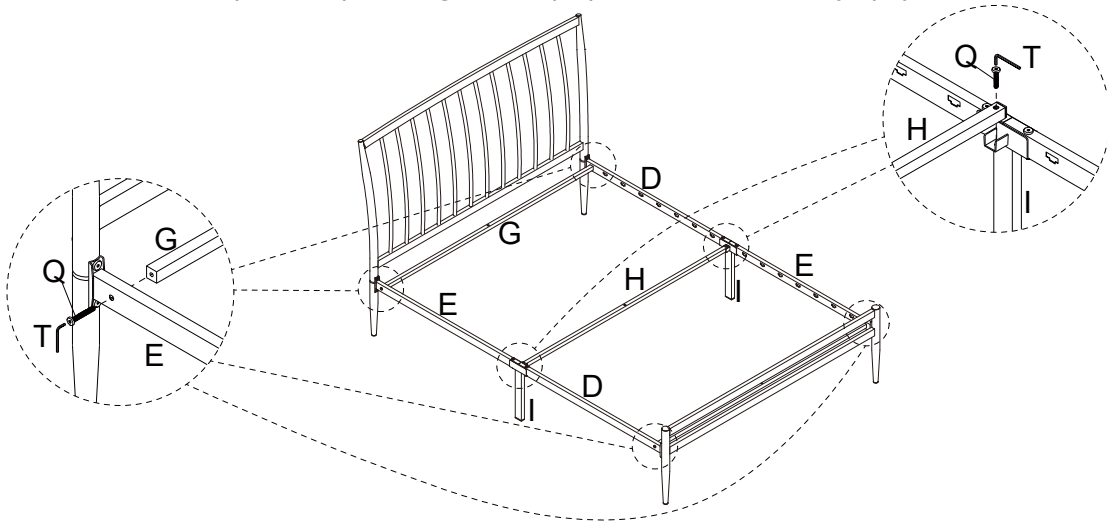


5

Attach Center Rail (F) and Front & Rear Support Leg (K) to Front & Rear Support Bar (G) using Bolt (R) with Allen Key (T). Then attach Center Support Leg (J) to Center Rail (F) and Center Support Bar (H) using Bolt (S & P) with Allen Key (T).

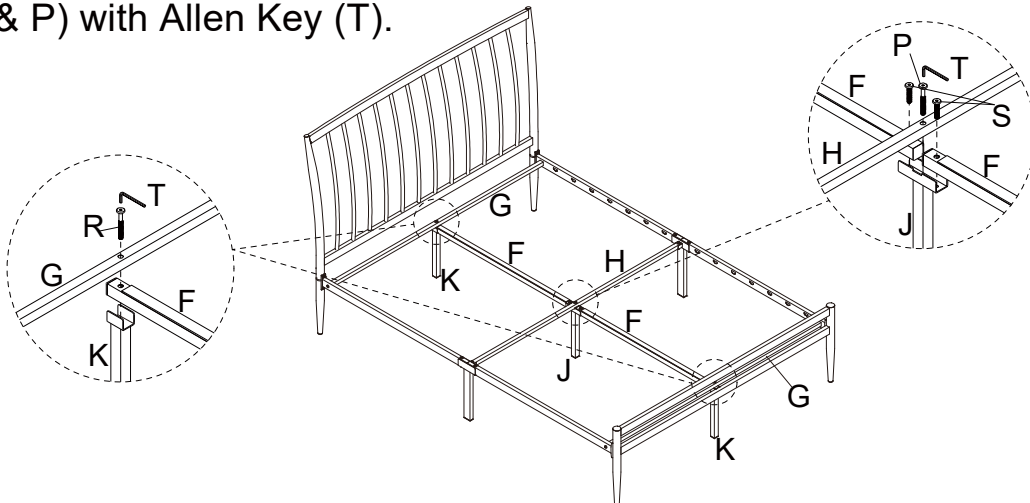

6

Insert Slat (L) into Front & Rear Rail Section (D & E) as shown. Then lock Slat Connector (M) to fix Slat (L).

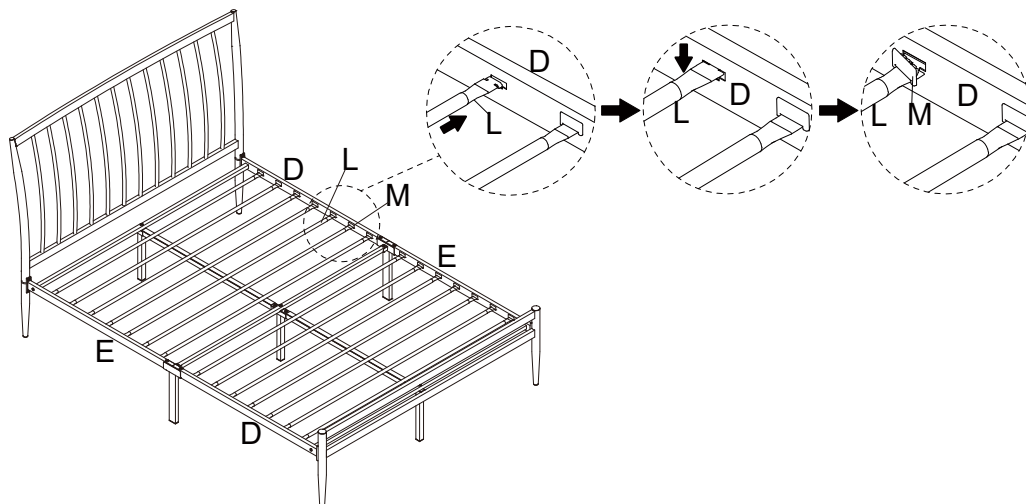

Cleaning & Care

Treat surfaces with care. Surfaces are resistant to scratches but are not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.