



Model : CF 8031-D (5')

Assembly Instruction


Step 1: Unzip the black non-woven fabric on the back of headboard and take out all the parts out.

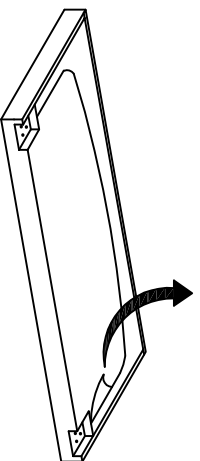

Step 2: Fix the headboard and footboard with legs as shown.

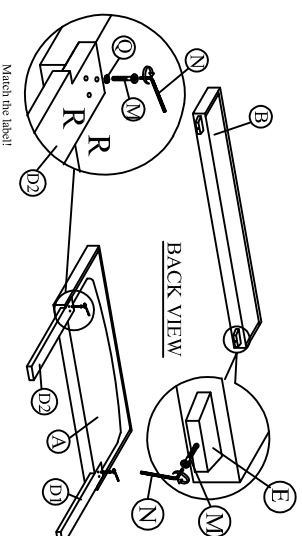


Step 3: Attach the JCBB Bolt (J) to the headboard bracket and footboard bracket.

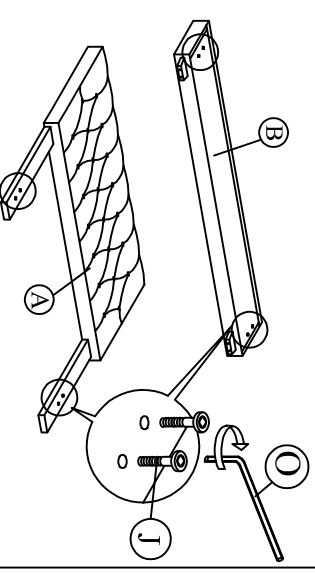


BACK VIEW

FRONT VIEW

Step 5: Attach the side wing (T) to the headboard (A).

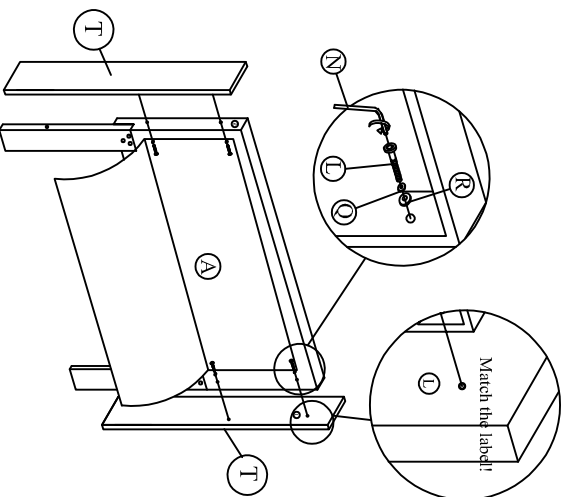


Step 5: Attach the side rail support wood (G) to the side rail (C).

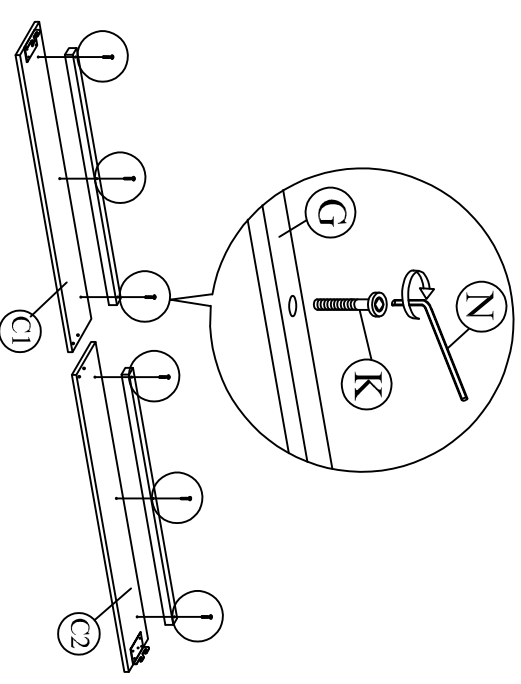


Attention: Zip the black non-woven fabric after tighten the Screw !!

A	Headboard	1pc
B	Footboard	1pc
C	Side Rail	4pcs
D	Headboard Legs	2pcs
E	Footboard Legs	2pcs
F	Side Rail Legs	2pcs
G	Side Rail Support Wood	4pcs
H	Slat	4pcs
I	Support Legs	4pcs
J	JCBB M8 x20	8pcs
K	JCBB M6 x 30	20 pcs
L	JCBB M6 x 40	8 pcs
M	JCBB M6 x 50	8 pcs
N	Allen Key 100mm	1pc
O	Allen Key 70mm	1pc
P	CSK Screw 32mm	8pcs
Q	Spring Washers	10pcs
R	Flat Washers	12pcs
S	Adjuster	4pcs
T	Side Wing	2pcs


Step 6: Attach the side rail leg (F) to the side rail (C) .

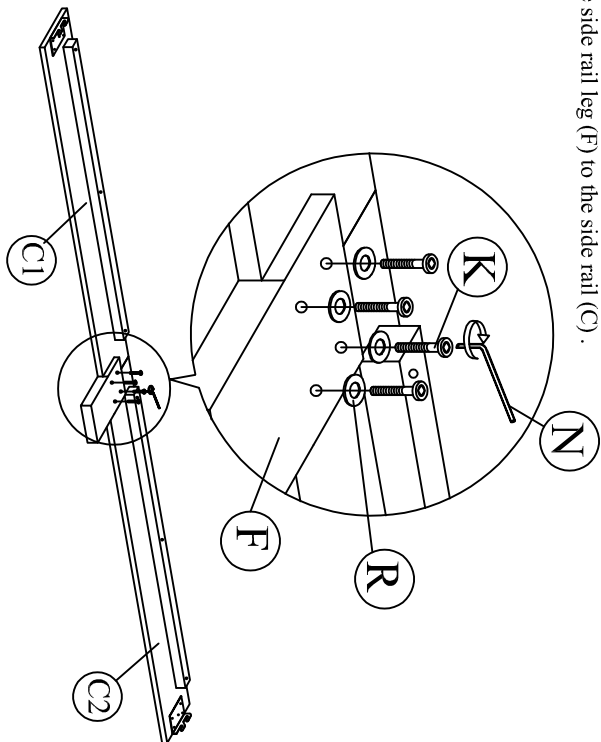

Step 7: Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

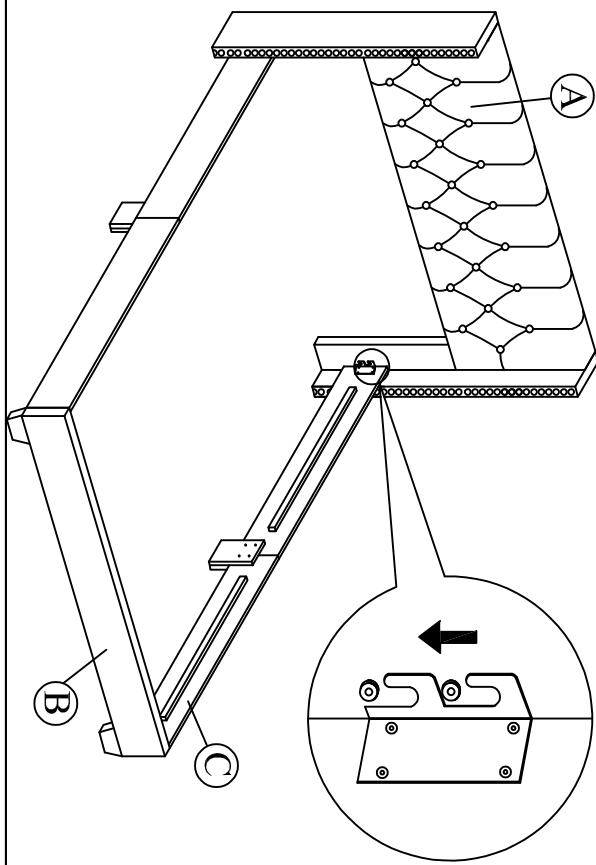

Step 8: Attach the support legs (I) to the slats (H).

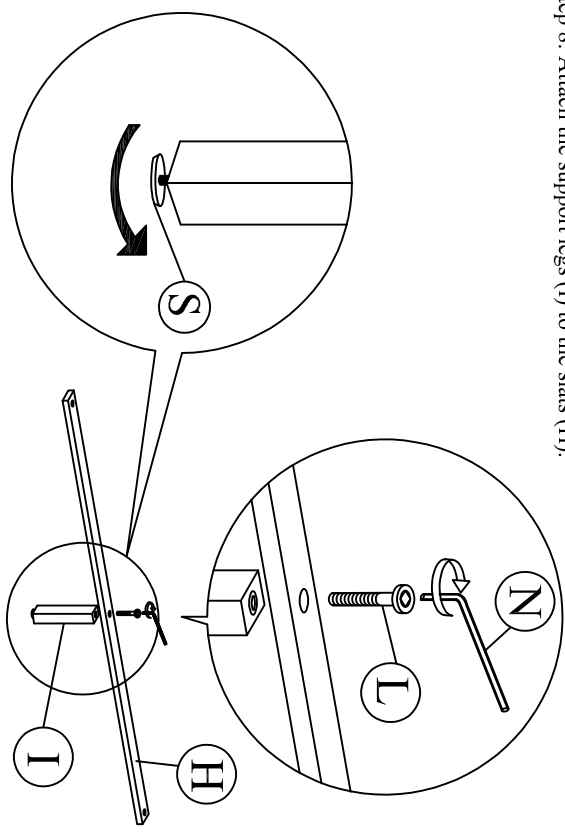

Step 9: Tighten the 4 Corner with Allen Key (O). Install the bed slats to side rail. Tighten the slats with CSK screw. The distance of the slats should be sufficient to obtain desirable bed stability.

