


ASSEMBLY INSTRUCTION


MODEL : CF 9118 (5)

Step 1 : Unzip the black non-woven fabric on the back of headboard (A) and take out the side wing (S).

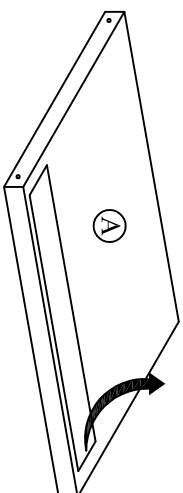


Back View !!


Step 2 : Install the legs (D) to footboard (B) and headboard (A).

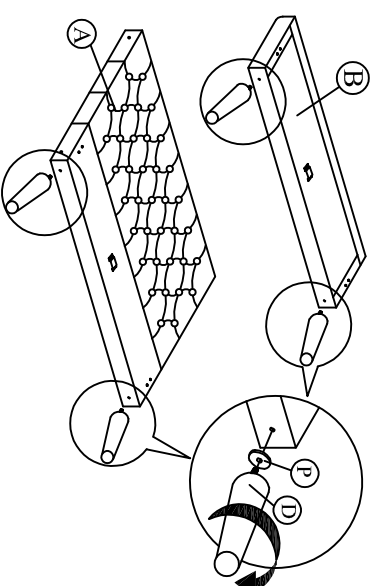

Step 3 : Tighten the side wing (S) to headboard (A) as shown. Tighten the legs (D) to footboard (B) as shown.

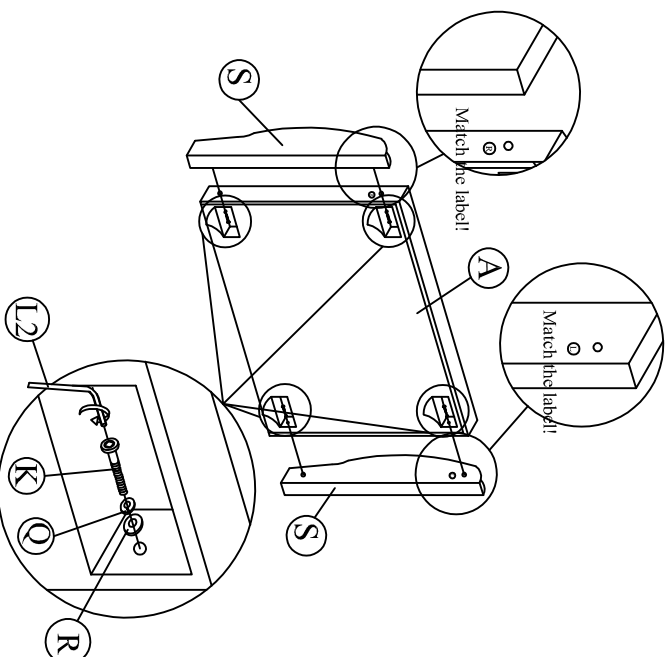


Step 4 : Attach side rail (C) to footboard (B) and headboard (A) by pushing the bracket down to fit it.

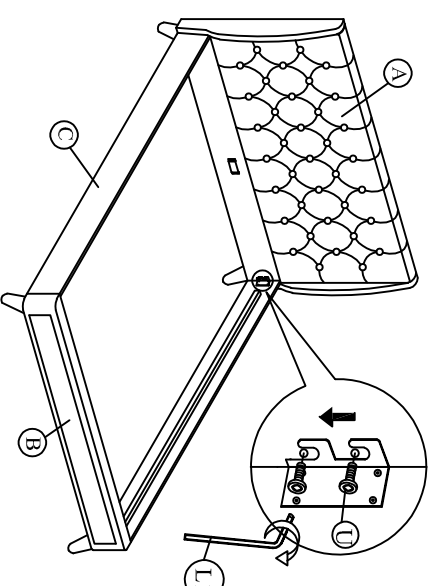


A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Legs	4 pcs
E	Center Rail	1 pc
F	Support Leg	2 pcs
G	Slit	28 pcs
H	Middle Holder	14 pcs
I	End Holder	28 pcs
J	ICBC M6 X 40	2 pcs
K	ICBC M6 X 50	4 pcs
L	L1 M5 X 70mm M4 X 65mm	1 pc
M	CSK M4 X 25mm	2 pcs
N	CSK M4 X 32mm	3 pcs
O	Stiffener Slat (3 Holes)	1 pc
P	NO 35 Washers	4 pcs
Q	Spring Washer	4 pcs
R	Flat Washer	4 pcs
S	Side Wing	2 pcs
T	Adjuster	2 pcs
U	ICBC M8 X 20	8 pcs

Step 5 : Attach the support legs (F) to the center rail (E) of the bed as shown.

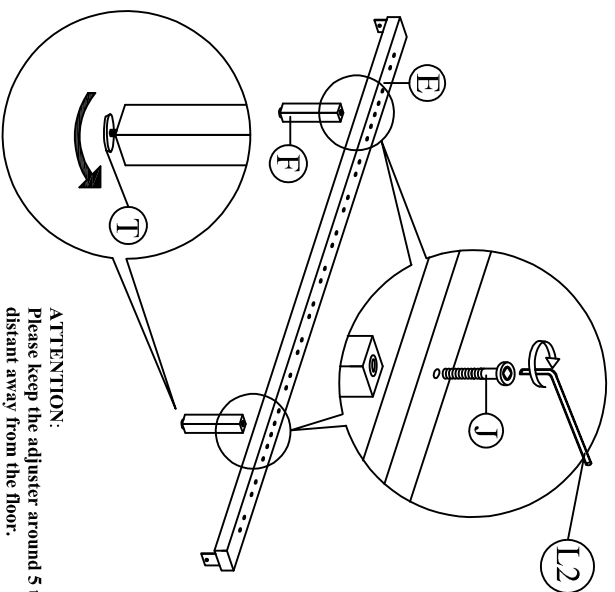

ATTENTION:
Please keep the adjuster around 5 to 8 mm distant away from the floor.

Step 6 : Slide the center rail (E) to the headboard (A) and footboard (B). Tighten screws (M) using screw driver (not included) to the headboard (A) and footboard (B).

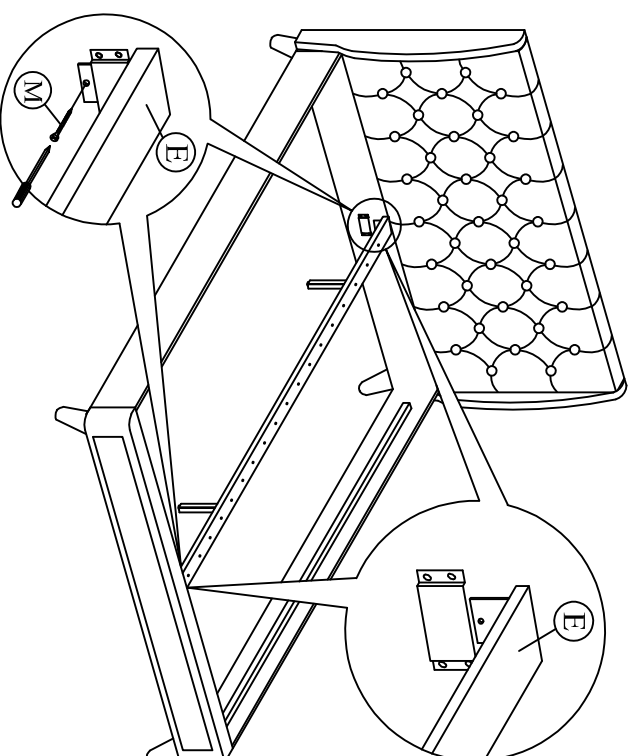

Step 7 : Affix the Stiffener Slat (O) to the side rail support wood and the center rail (E). Tighten all the 4 corner, follow by assembly of the slat holders with LVL slats as shown.

