


MODEL : CF 9125
(46" & 5')


ASSEMBLY INSTRUCTION

A	Headboard	1 pc
B	Footboard	1 pc
C	Side Rail	2 pcs
D	Headboard Legs Right (R) Left (L)	2 pcs
E	Support Leg	4 pcs
F	Legs	5 pcs
G	Slat	8 pcs
H	ICBB M6 X 30	8 pcs
I	ICBC M6 X 40	4 pcs
J	ICBC M6 X 50	8 pcs
K	ICBC M6 X 70	5 pcs
L	L1 L2 M4 x 100mm M4 x 70mm	1 pc
M	CSK M4 x 32mm	16 pcs
N	Spring Washer	8 pcs
O	Flat Washer	8 pcs
P	Adjuster	4 pcs


Step 1 : Open the footboard drawer (B) and take out all the part out.

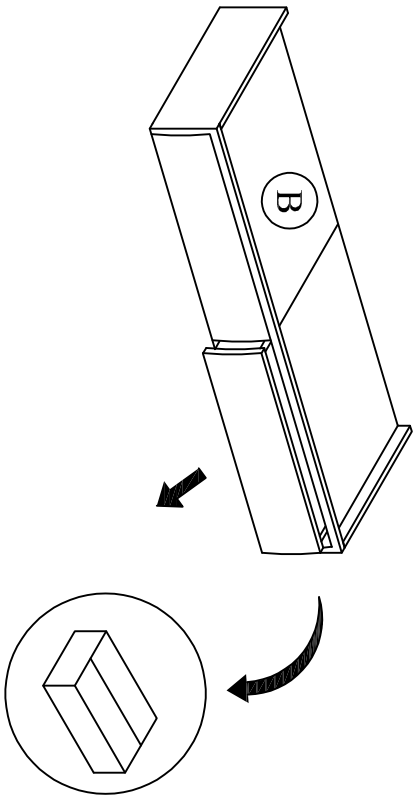


Step 2 : Fix the headboard (A) and headboard legs (D) with legs as shown.

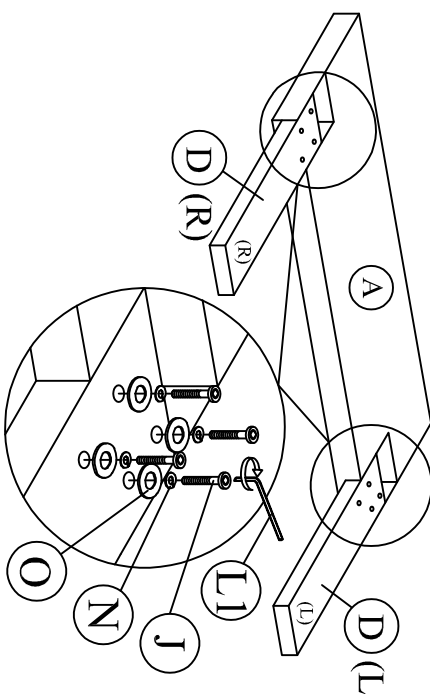


Step 3 : Tighten the legs (F) to both headboard (A) and footboard (B) as shown.

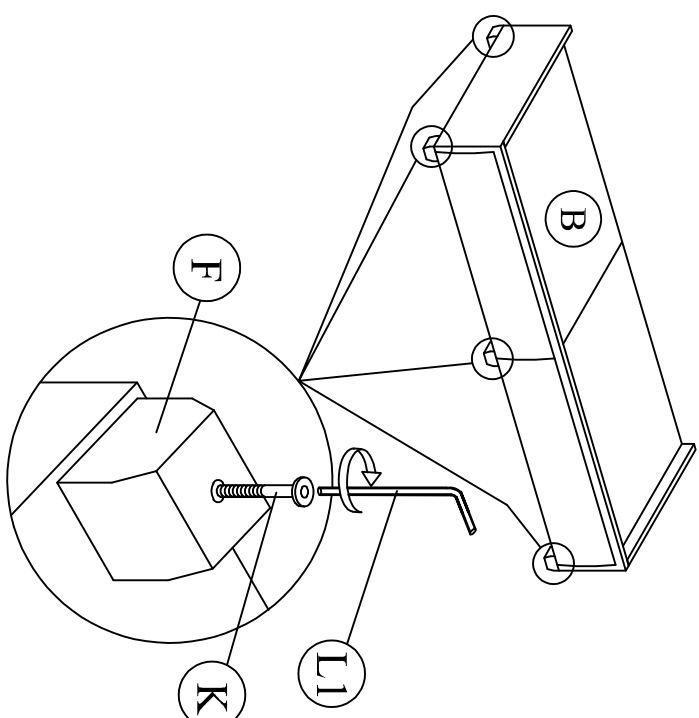

Step 4 : Attach side rail (C) to headboard (A) and footboard (B) by pushing the bracket down to fit it.

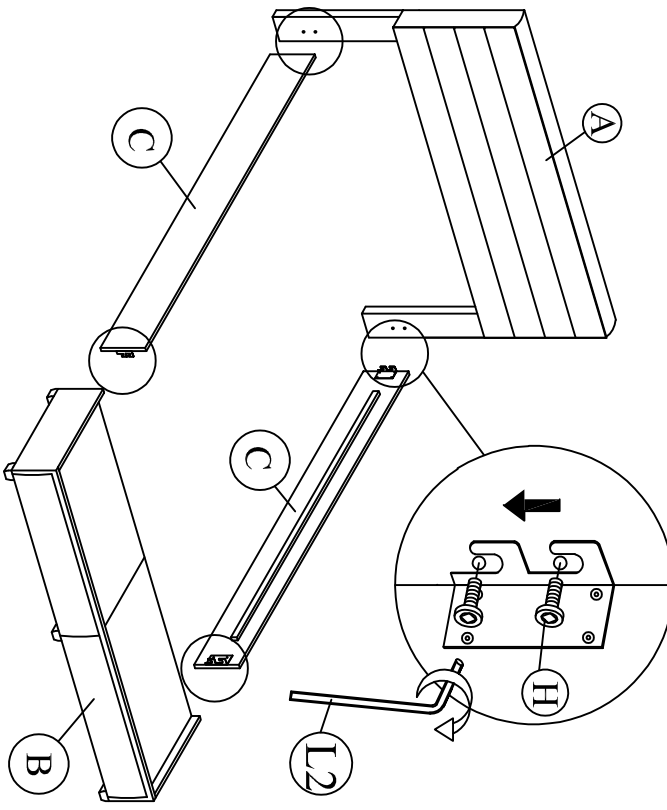

Step 5 : Attach the support legs (E) to the slats (G) of the bed as shown.

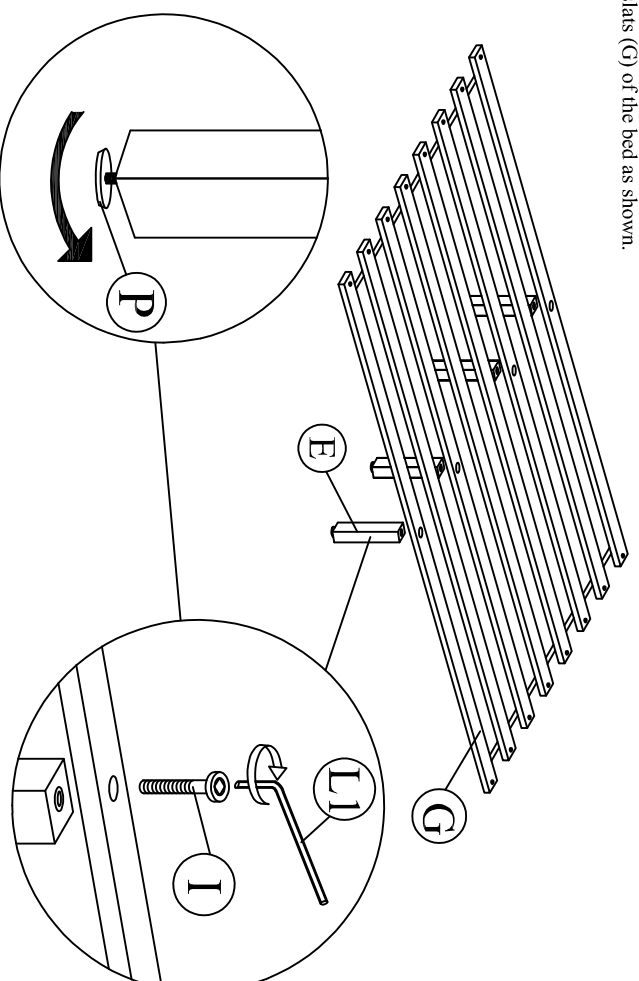

Step 6 : Affix the Slat (G) to the side rail support wood. Tighten all the 4 corner.

