





MANHATTAN
COMFORT

130GMC

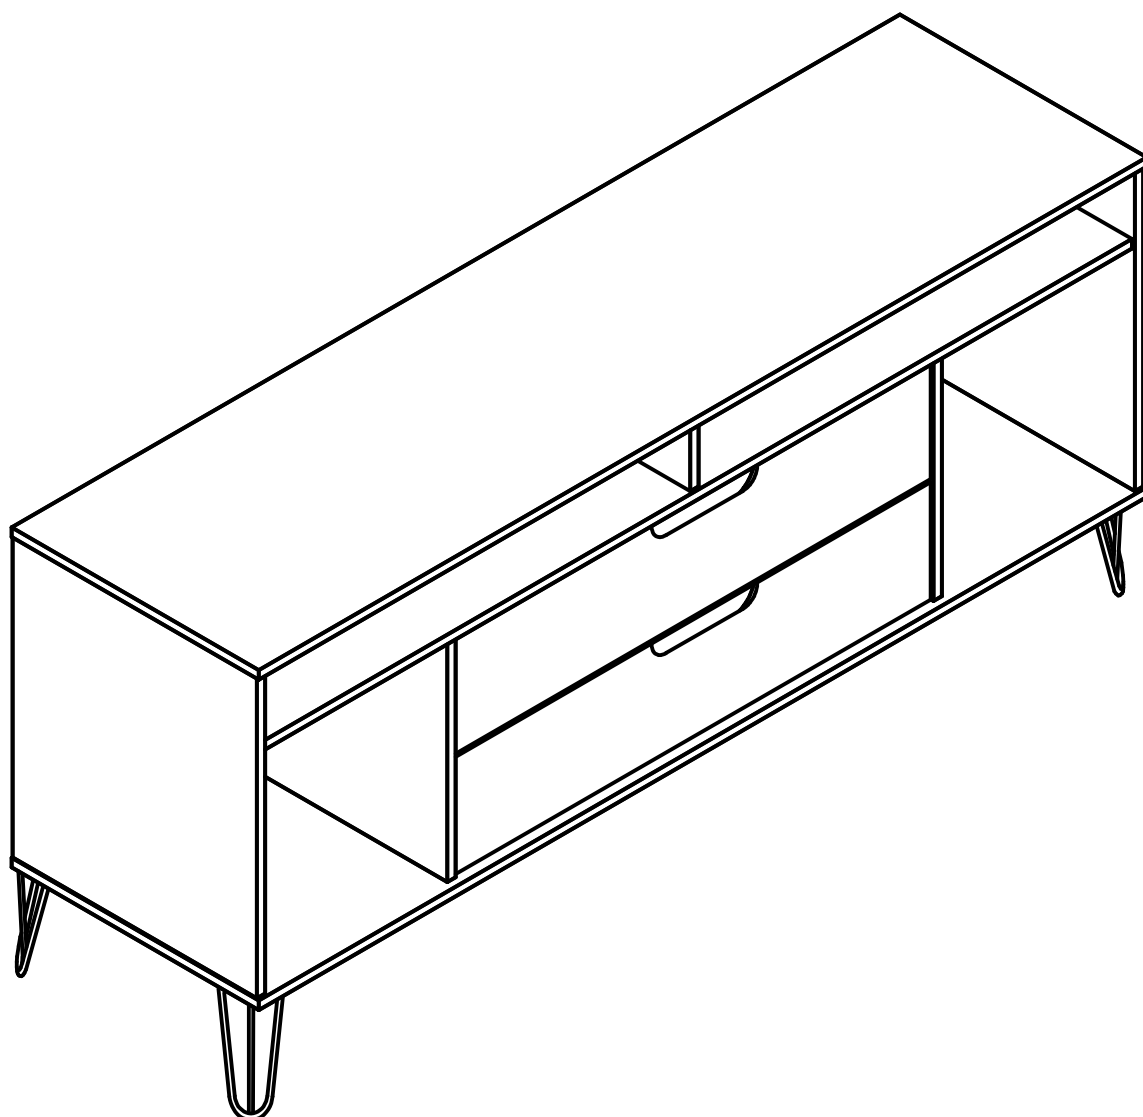

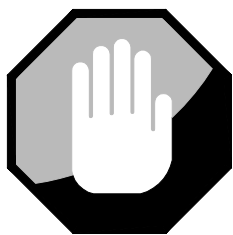


STOP!

Before beginning the assembly process, ensure all boxes and parts have been delivered.


ATTENTION: BEFORE START ASSEMBLING TAKE A PICTURE OF THE LABELS ON THE PACKAGES, THIS WILL BE REQUIRED IN CASE THE PRODUCT HAS ANY ASSISTANCE DEMAND.

FOR BEST RESULTS:

- Do not throw away packaging materials until assembly is complete.
- Assemble item on a soft surface, such as cardboard or carpet, to protect finish.
- Proper assembly requires two people.

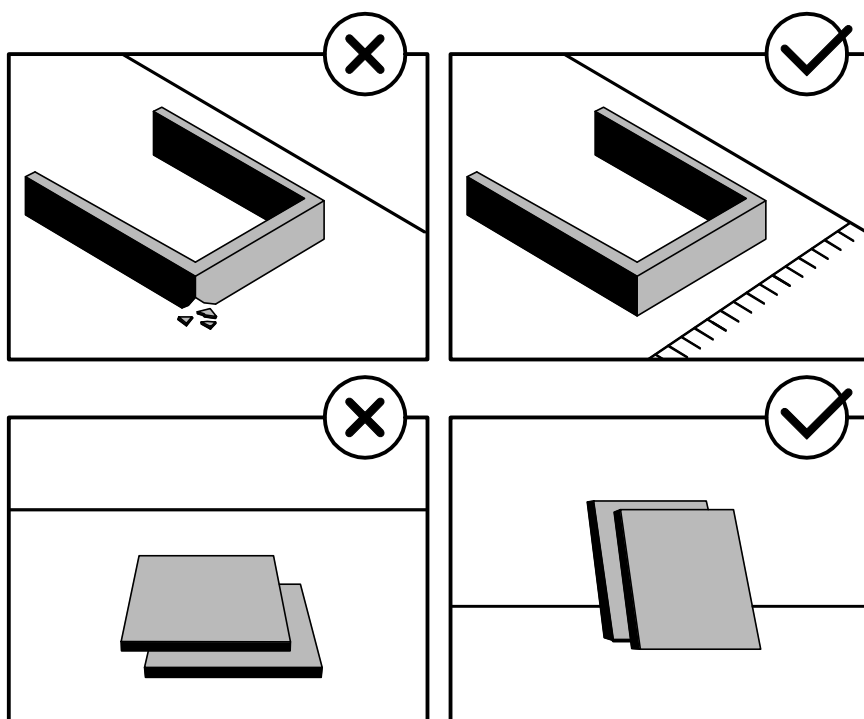

TOOLS REQUIRED

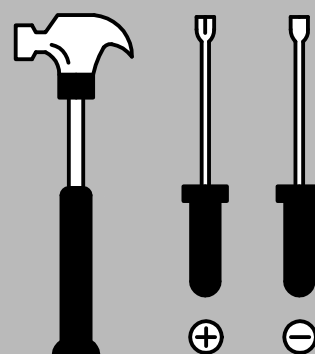

SUPPORT SITE




View our assembly video online
WWW.MANHATTANCOMFORT.COM





Stuck? Question? We are here to help.
tel: **908-888-0818**
e-mail: **help@manhattancomfort.com**







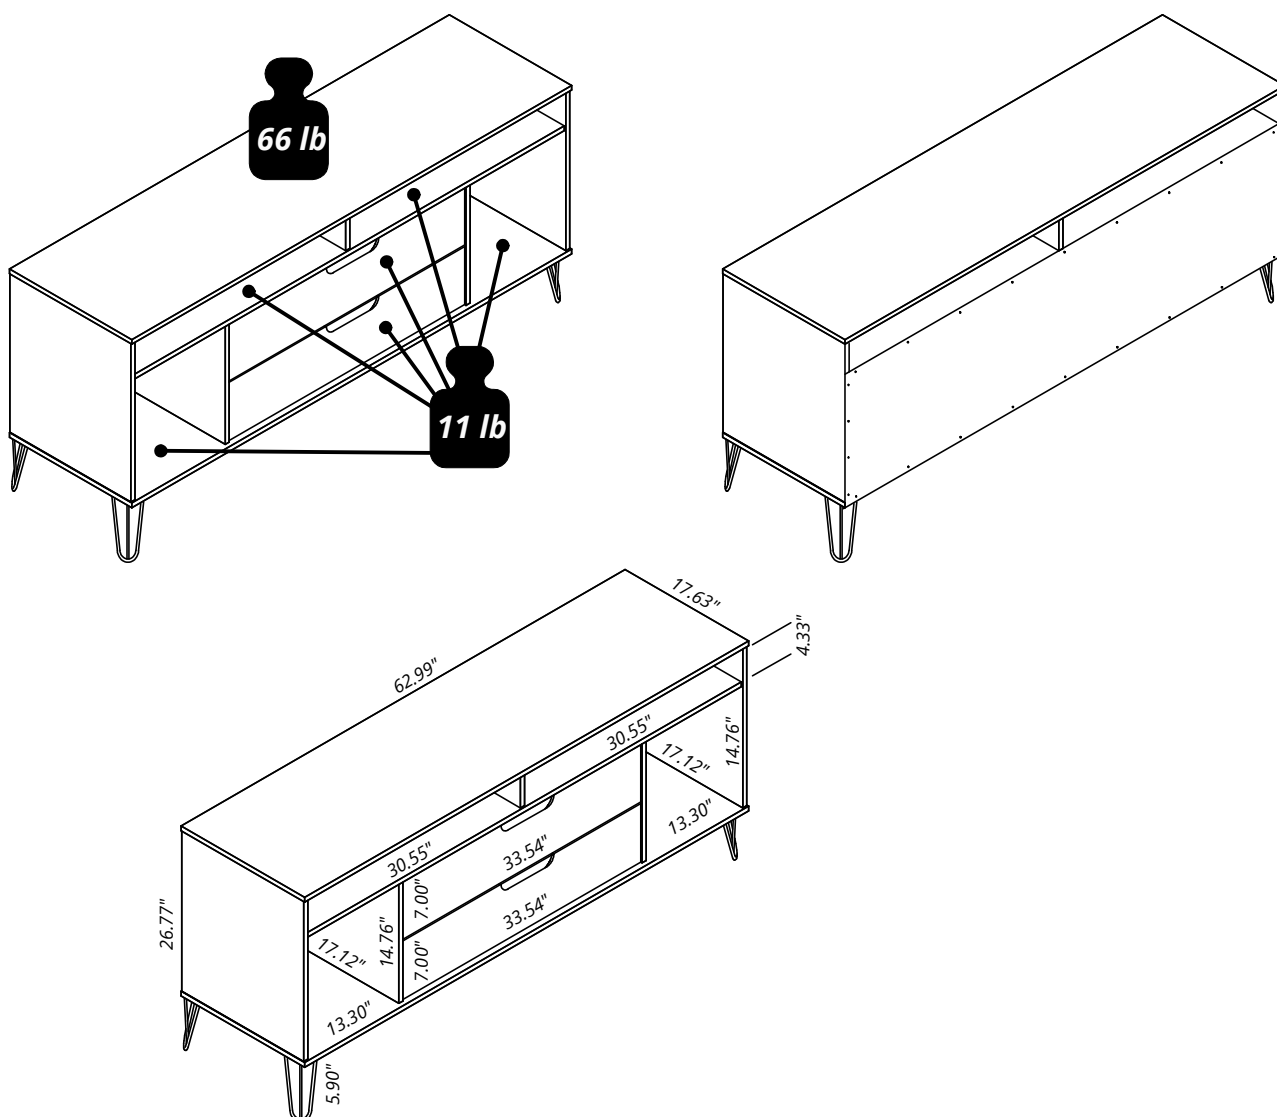


Prepare the room before starting the assembly, leaving it completely clean and the area in good condition to start the work.
Use the cardboard of the packaging to separate and support the parts removed from the boxes.

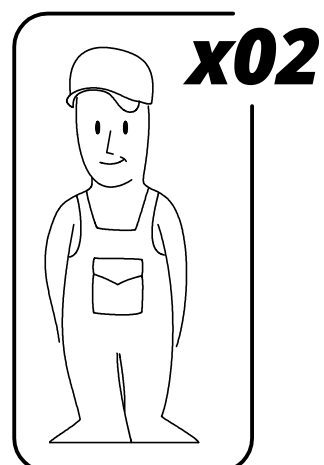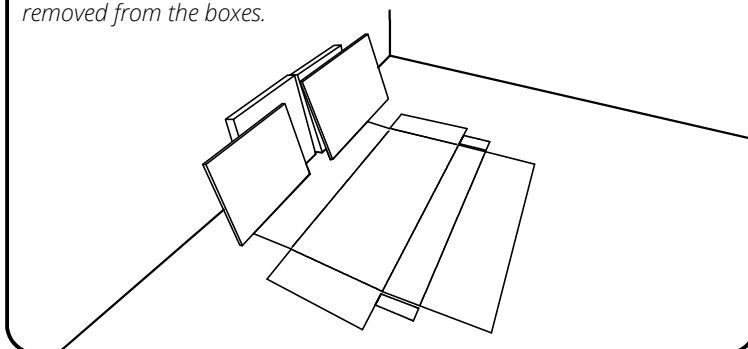

Recommended tools (not included)

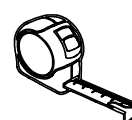

Parts

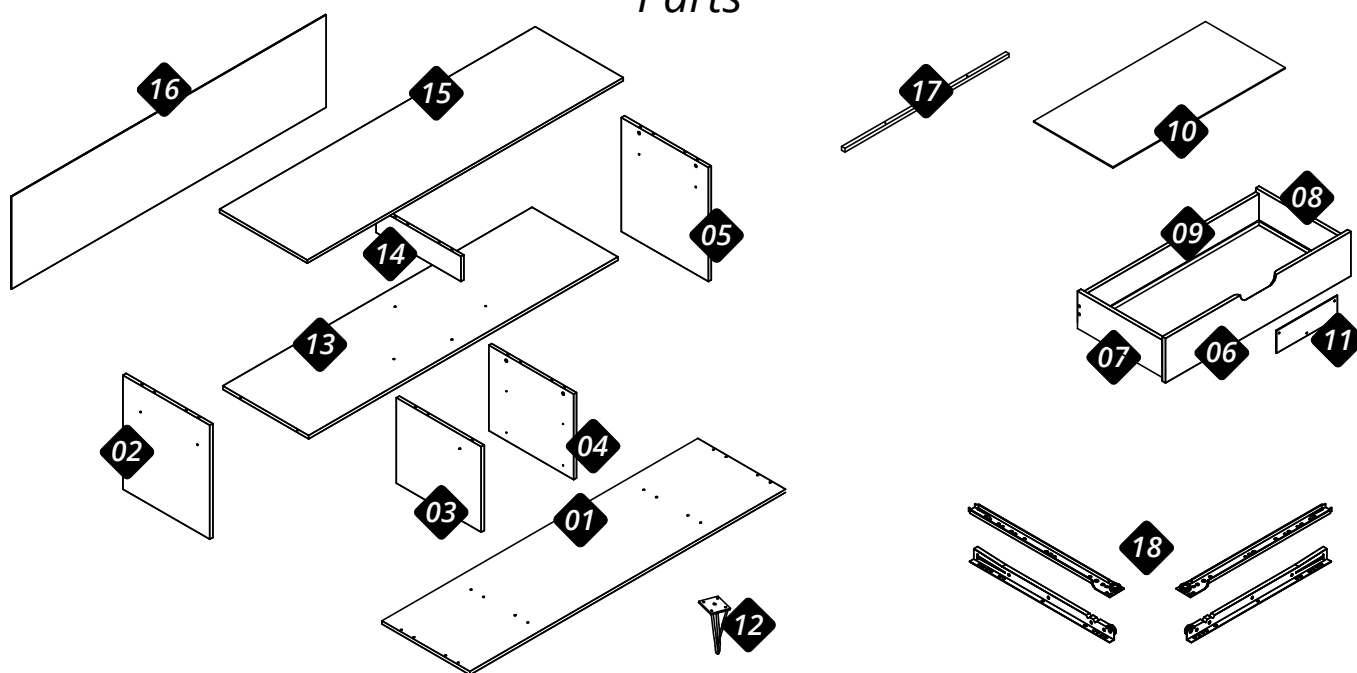

N°	Description	Qty.	Box
01	Base board	01	01
02	Left side panel	01	02
03	Left partition panel	01	02
04	Right partition panel	01	02
05	Right side panel	01	02
06	Front of the drawer	02	01
07	Left side panel of the drawer	02	02
08	Right side panel of the drawer	02	02
09	Rear panel of the drawer	02	01
10	Base of the drawer	02	01
11	Decorative apply	02	01
12	Feet	06	02
13	Central board	01	01
14	Central partition	01	01
15	Top board	01	01
16	Rear panel	01	01
17	Steel bar	01	01
18	Slides	02	02

Hardware (box 2/2)


A = 24x




B = 22x



C = 18x



D = 18x




E = 18x



F = 34x




G = 26x




H = 20x




I = 08x




J = 02x



HOW TO IDENTIFY THE SLIDES?

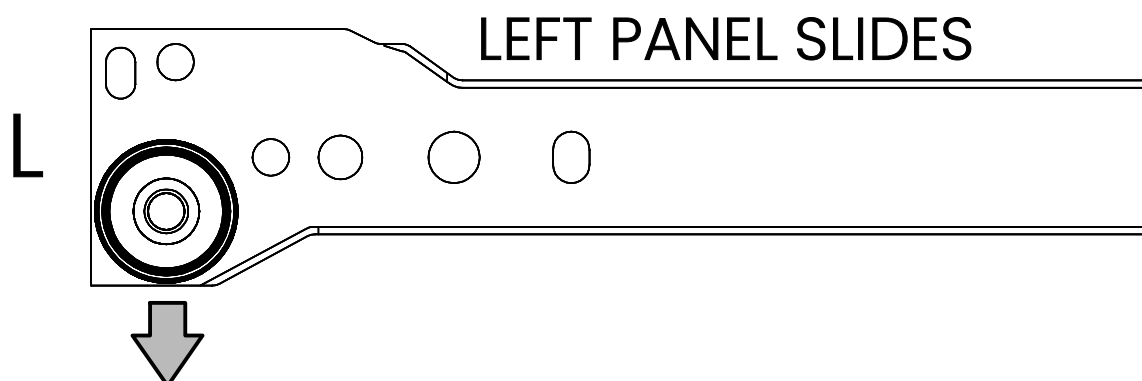


*plastic wheel always pointed to the ground.



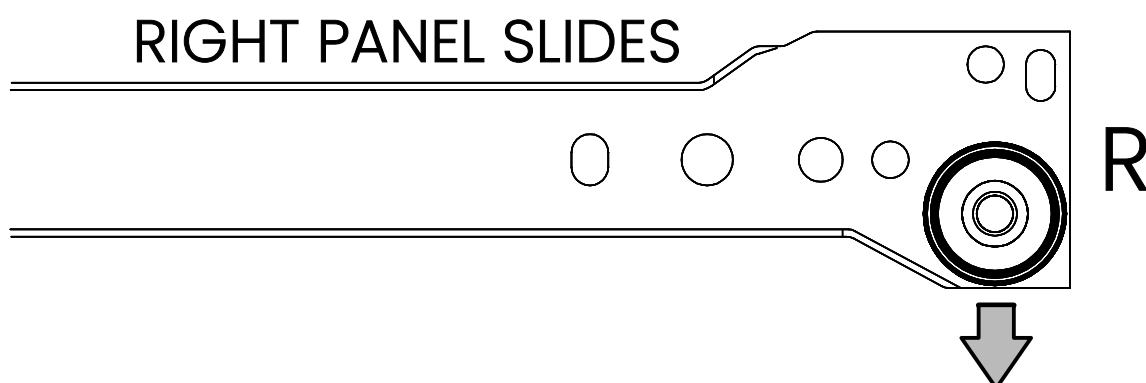


*plastic wheel always pointed to the ground.

WICH HOLES TO ATTACH THE SCREWS?

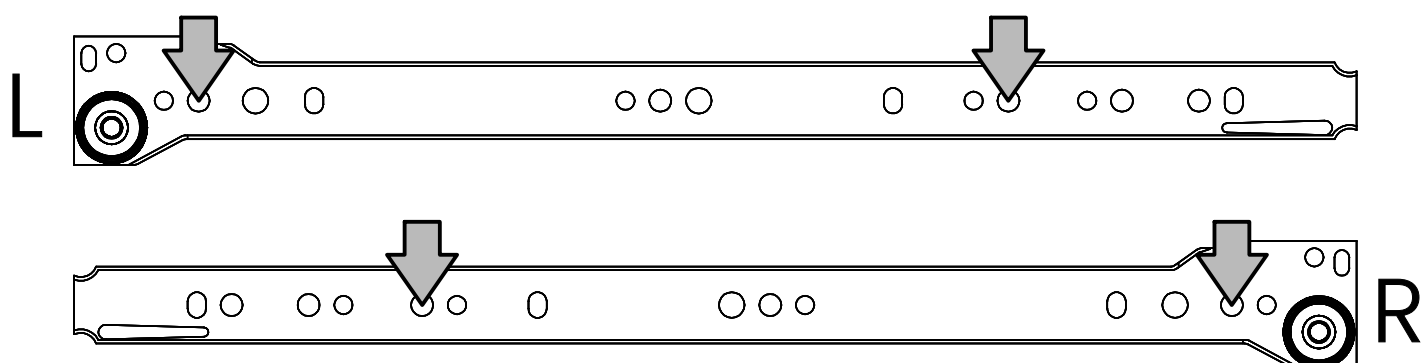


Step 01

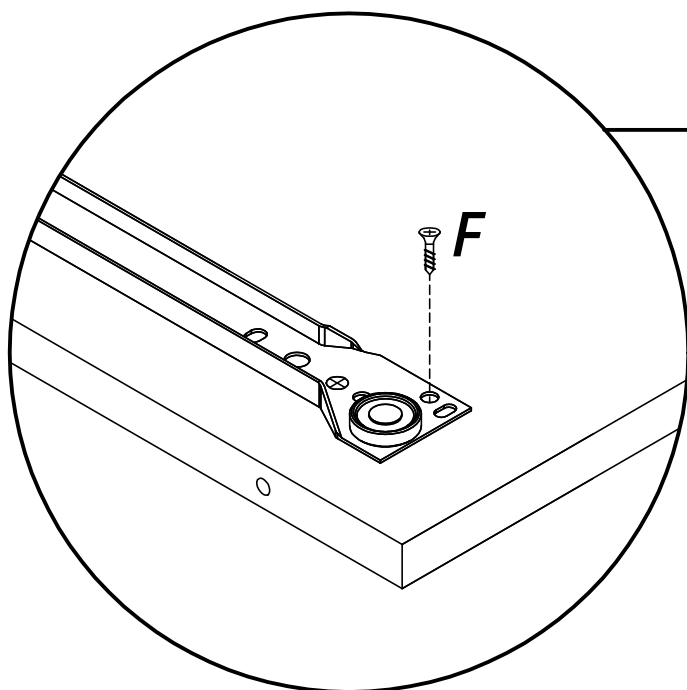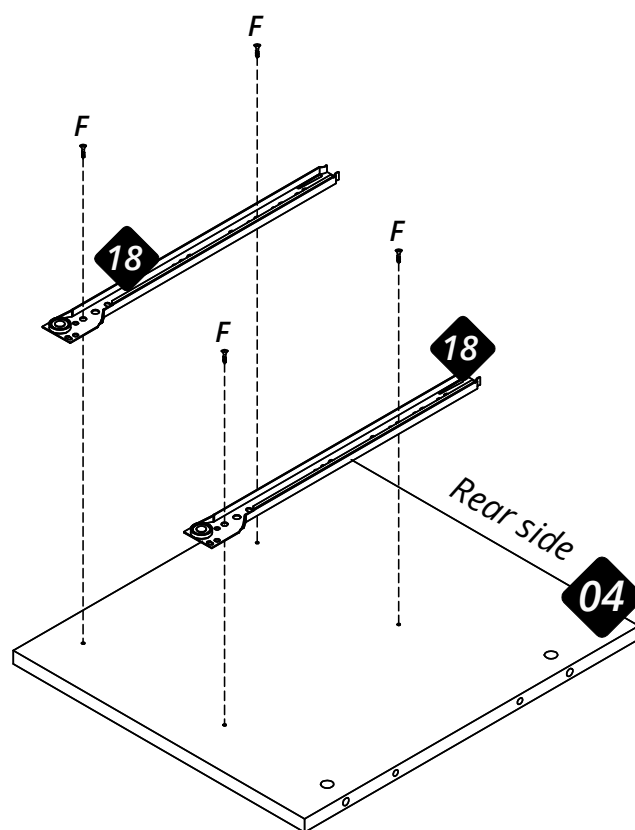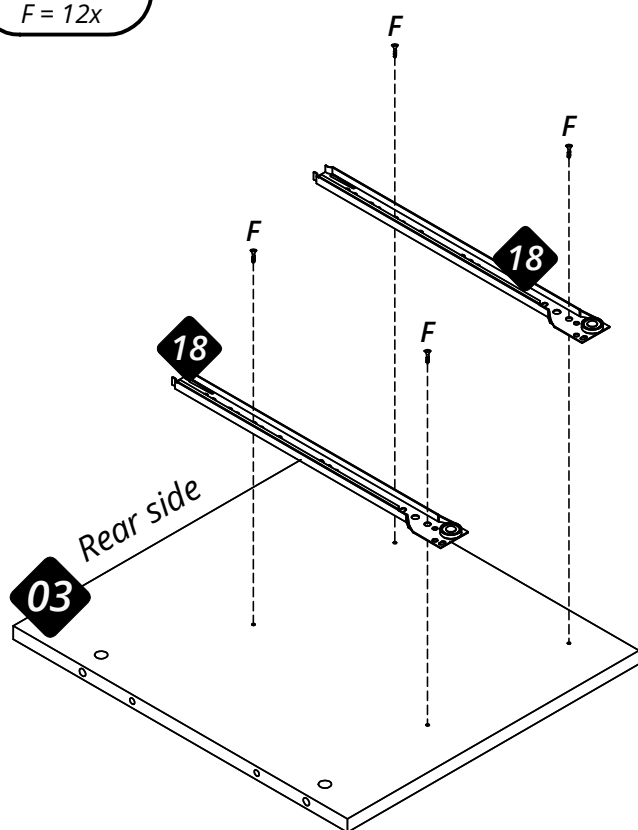 $F = 12x$ **ATTENTION!**


It is mandatory to apply the screw (F), observe there is no hole at this position.

Step 02




C = 18x

Insert the hardware (C) into the parts 02, 03, 04, 05 and 14.

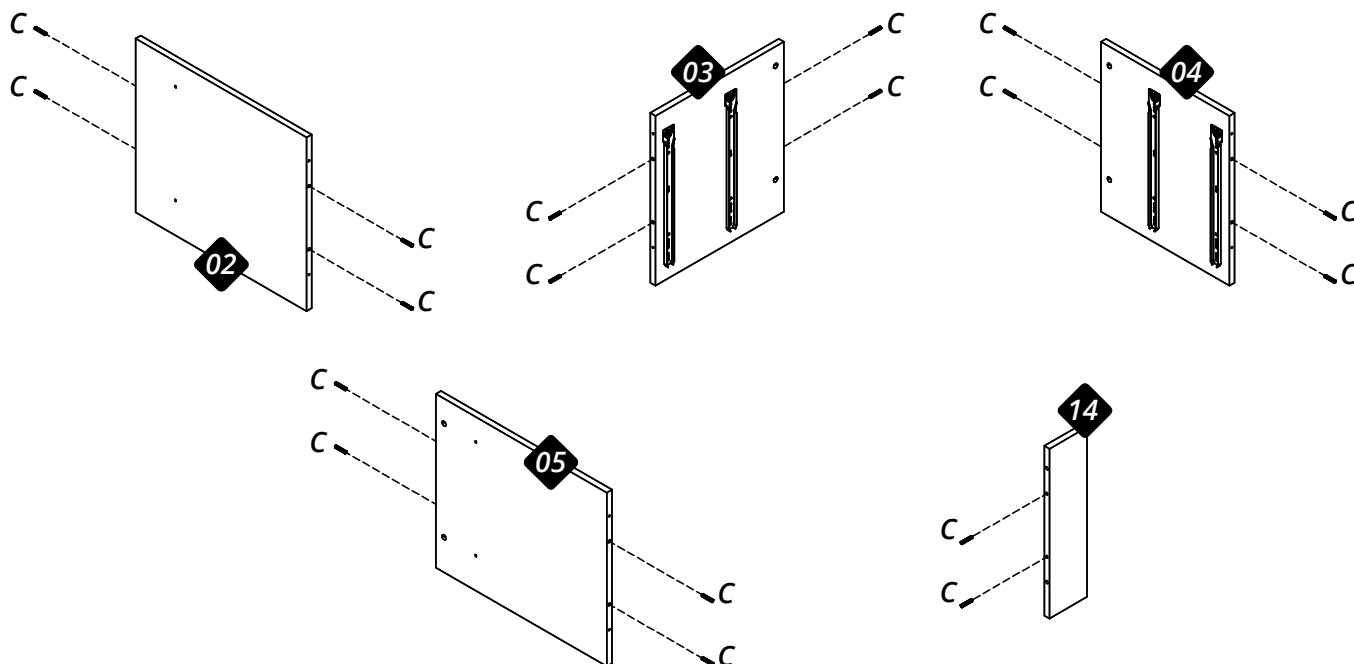



Step 03





B = 04x

Connect the parts 02 and 05 onto the part 01 with the hardware (B).

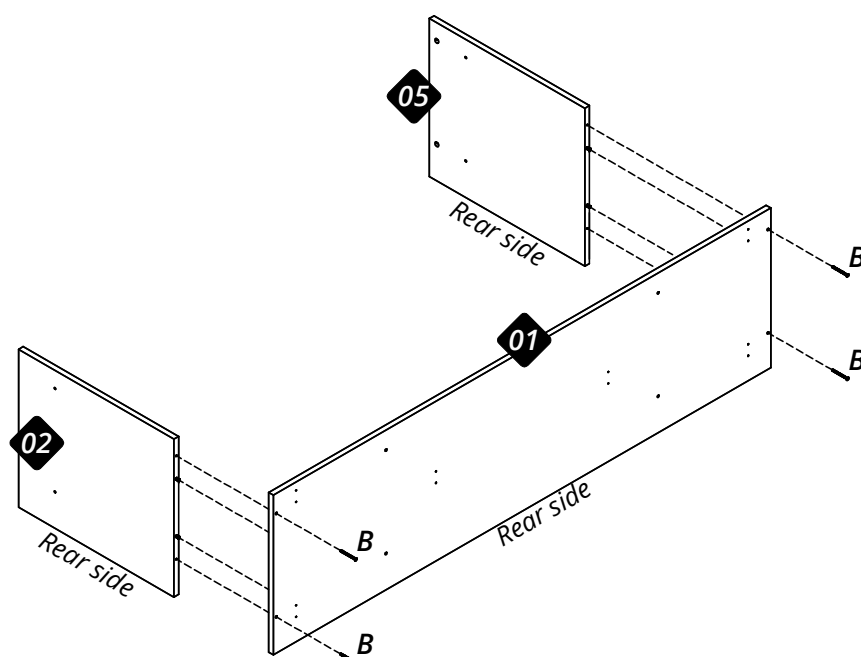


Step 04 $B = 02x$

Connect the part 03 onto the part 01 with the hardware (B).

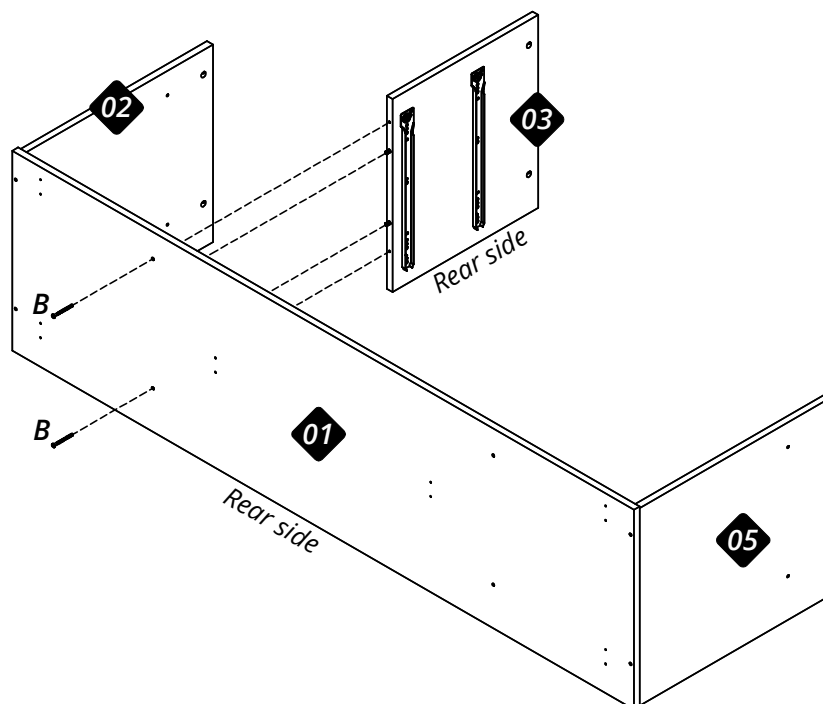
**Step 05** $B = 02x$

Connect the part 04 onto the part 01 with the hardware (B).

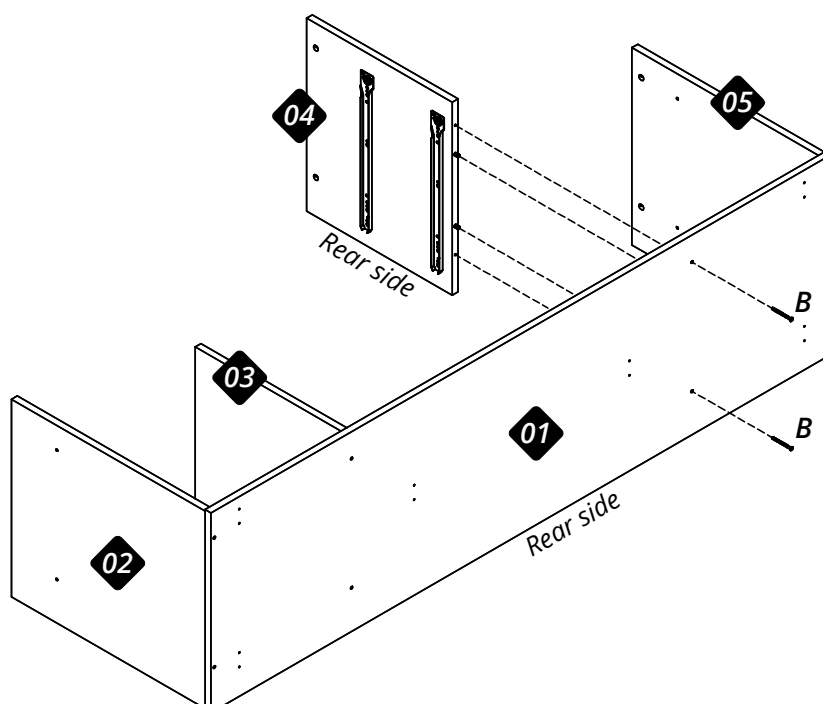


Step 06

*Pay attention to the correct position of the feet.
The arrows refers to the correct hole to align the feet.*

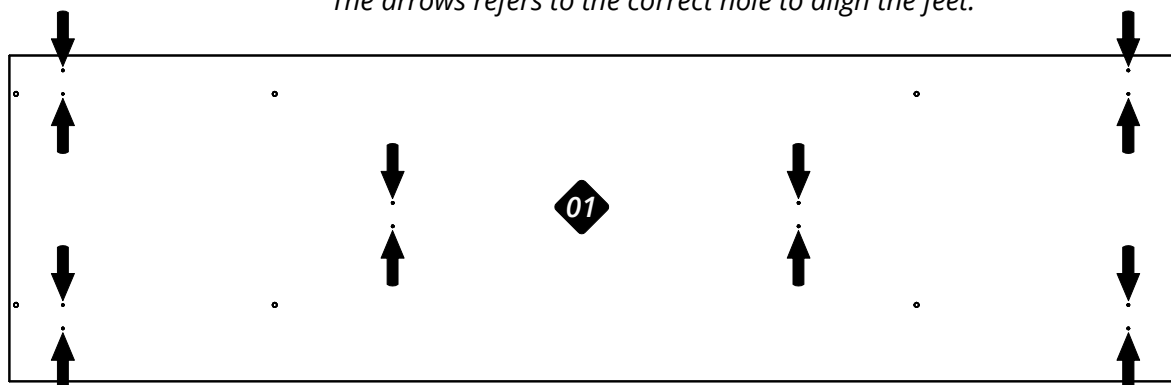

Rear side

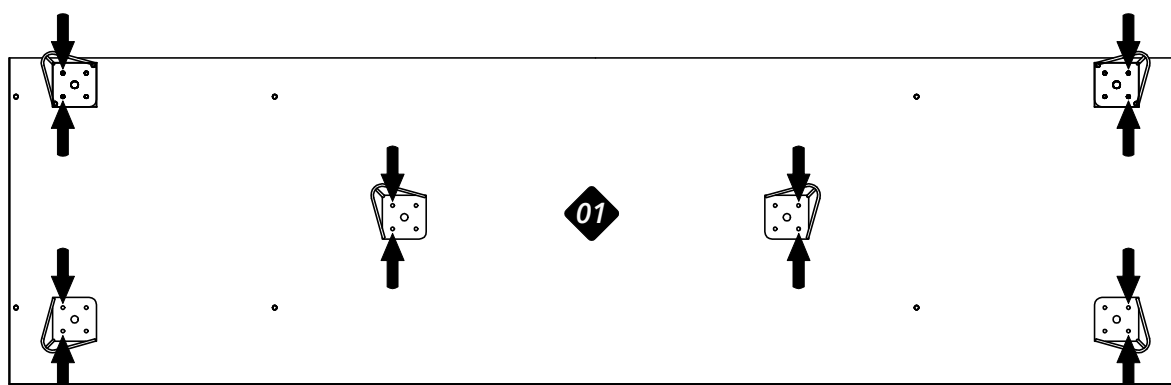


Rear side




$A = 24x$

Connect the parts 12 onto the part 01 with the hardware (A).

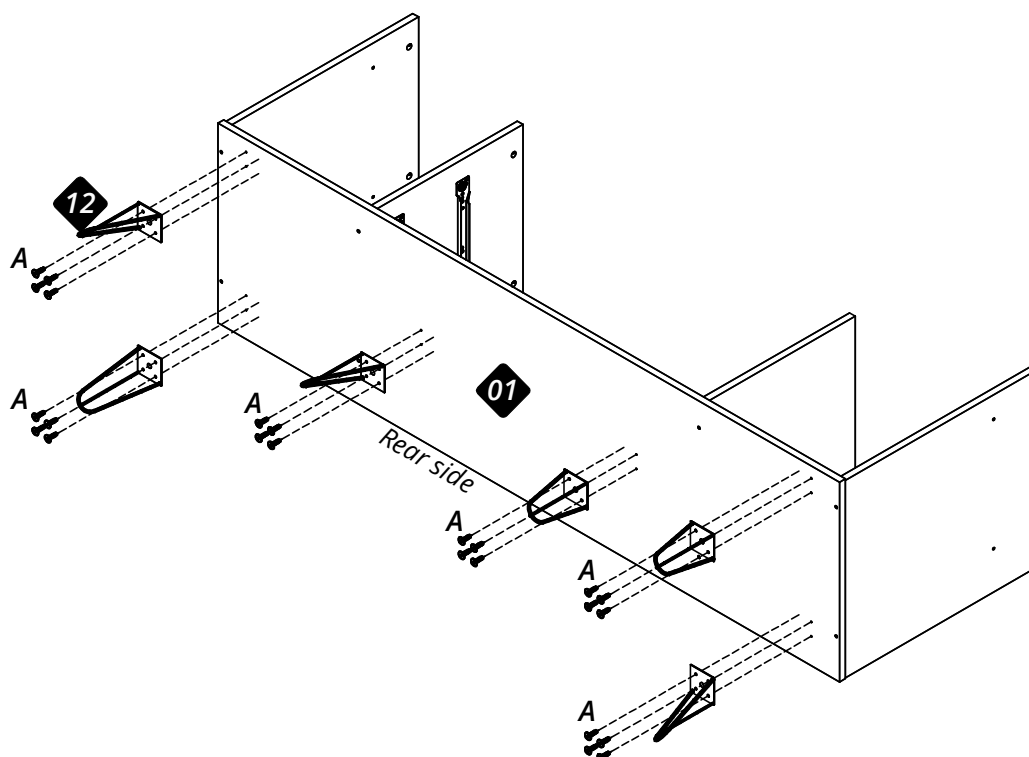

Step 07

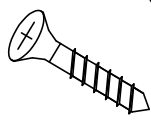

$J = 02x$



Connect the part 17 onto the part 13 with the hardware (J).



$H = 02x$

Apply the hardware (H) onto the hardware (J).

Note that the screws must be facing the board.

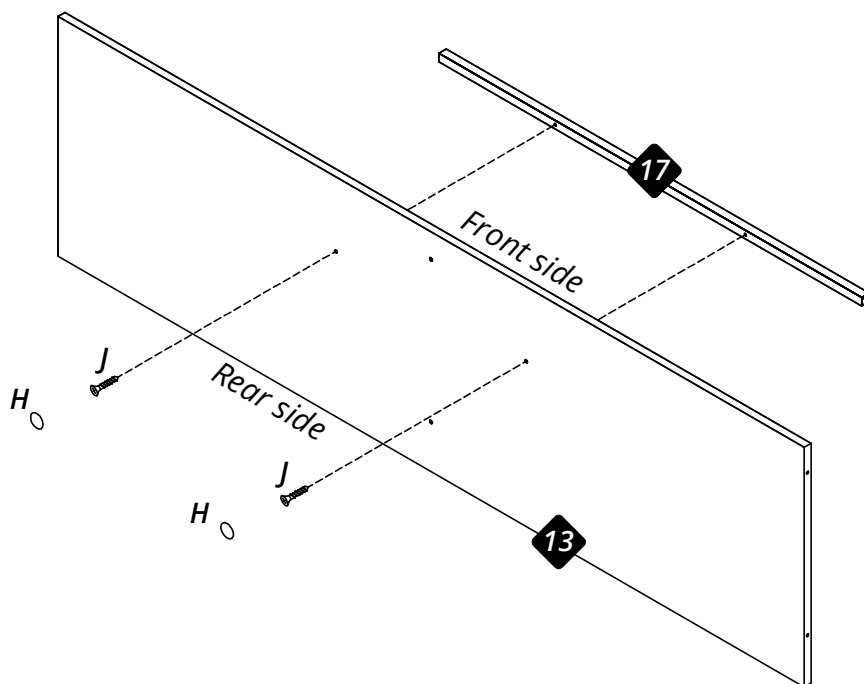
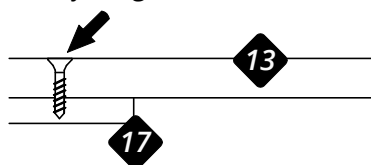


Step 08



$D = 04x$

Apply the hardware (D) into the part 13.

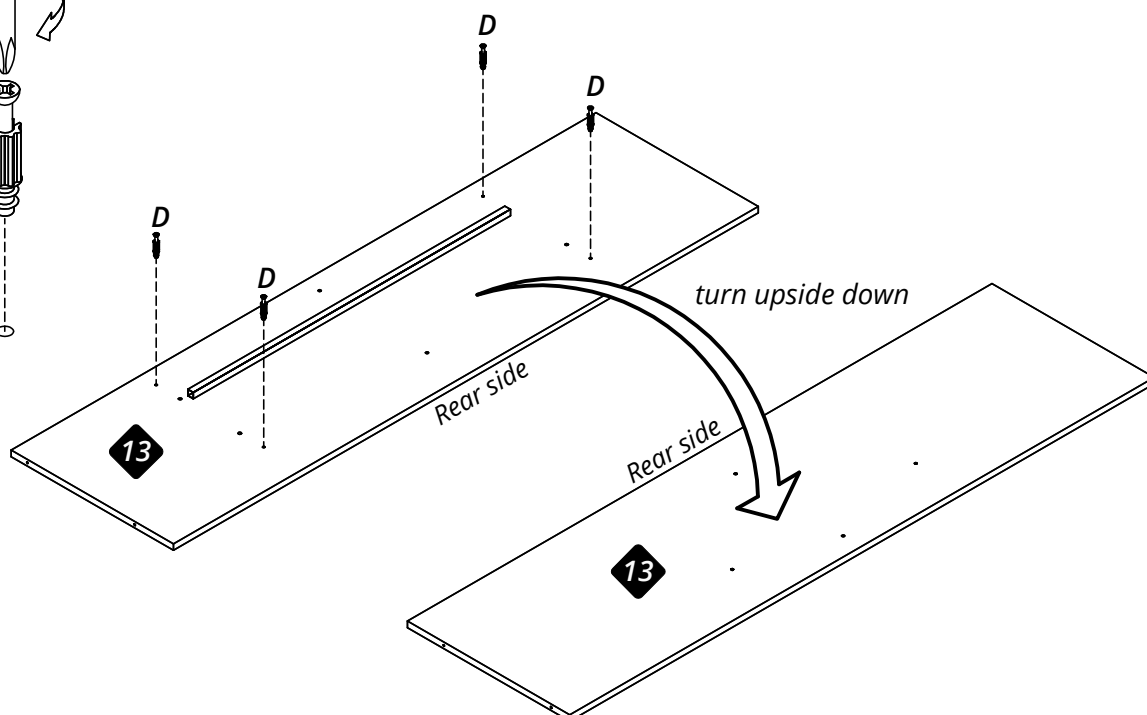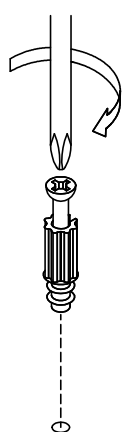

Step 09







$E = 04x$




$H = 04x$

Connect the part 13 onto the parts 03, 04 with the hardware E.

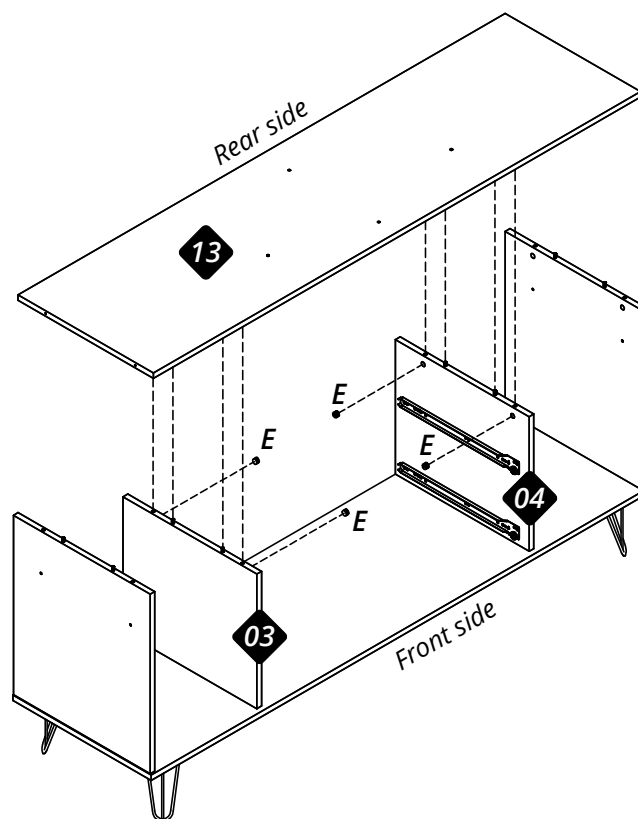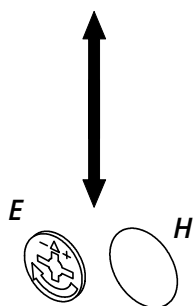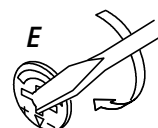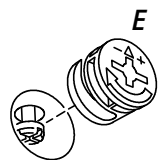


Apply the hardware (H) onto the hardware (E).


Step 10



$B = 04x$


Connect the part 13 onto the parts 02, 05 with the hardware (B).

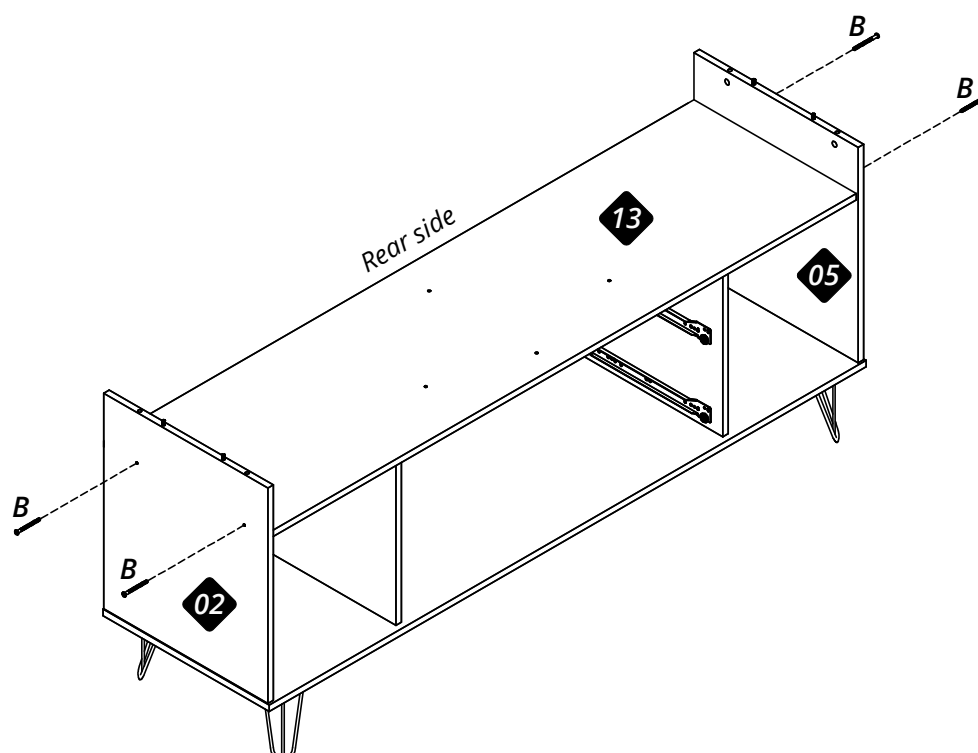

Step 11


B = 02x

Connect the part 14 onto the part 13 with the hardware (B).

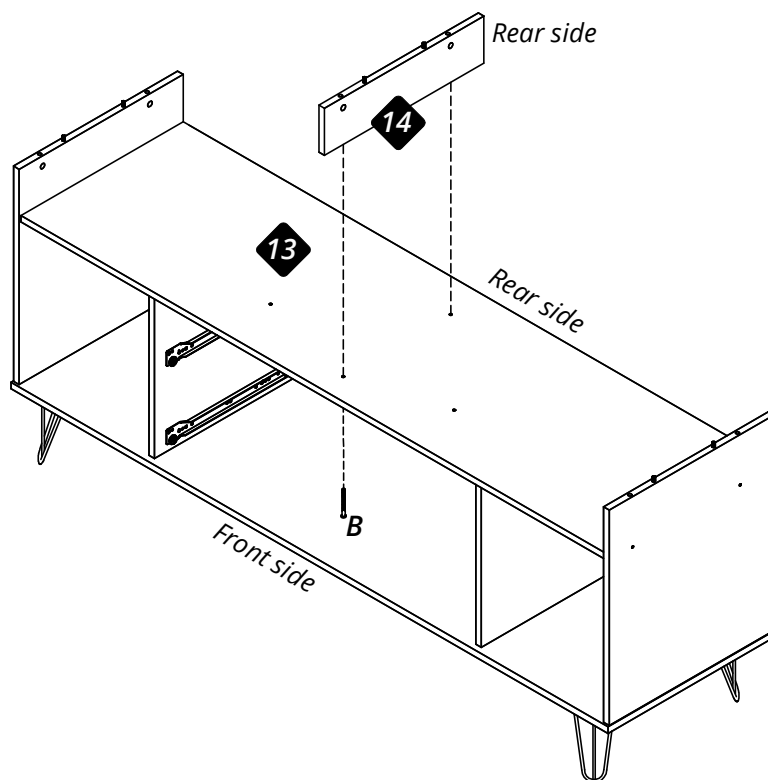**Step 12**

D = 06x

Apply the hardware (D) into the part 15.

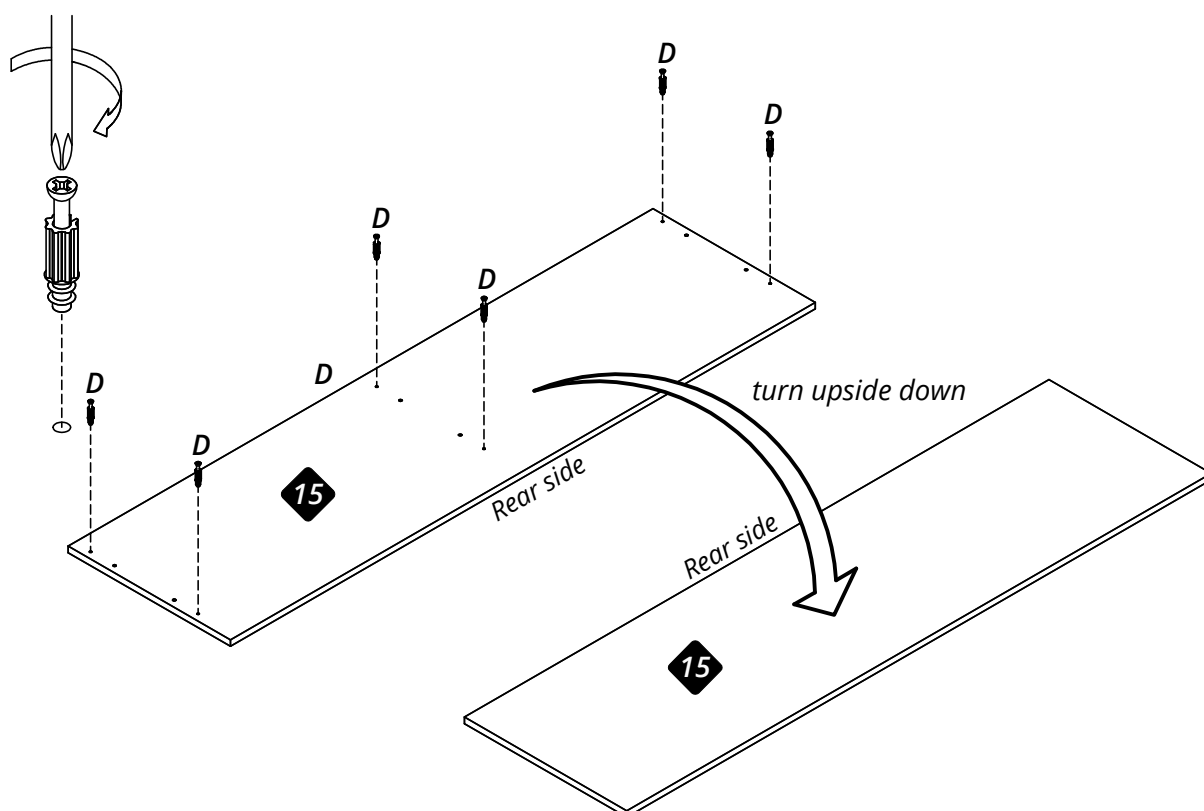

Step 13






$E = 06x$




$H = 06x$


Connect the part 15 onto the parts 02, 05, 14 with the hardware E.

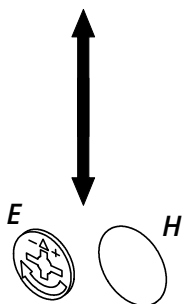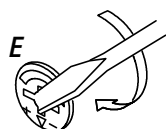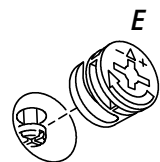

Apply the hardware (H) onto the hardware (E).

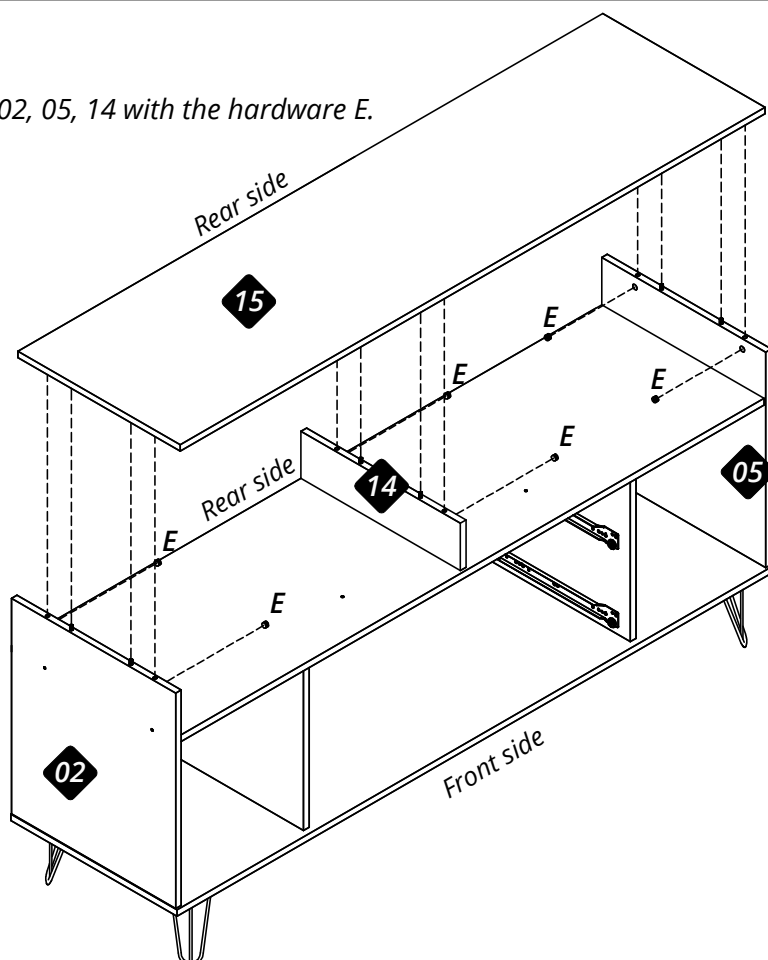


Step 14



$G = 26x$

Connect the part 16 using the hardware (G).

Attention, the part 16 must be connected on the rear side!

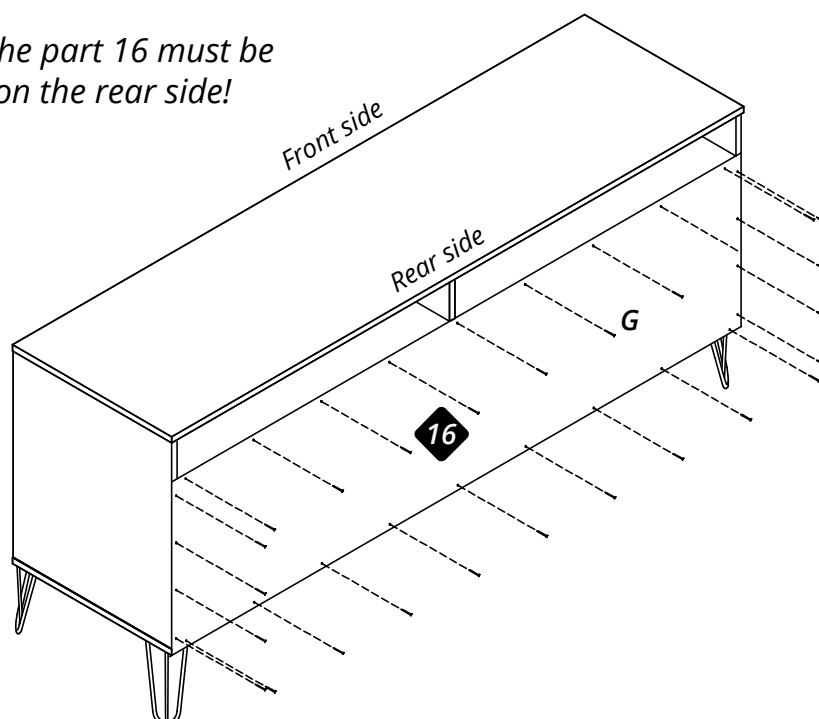

Step 15



$D = 08x$



Apply the hardware (D) into the part 06.



$F = 06x$

Before applying the part 11, observe if your product has the option of matching colors with the front of the drawer (part 06).

Connect the part 11 onto the part 06 with the hardware (F).

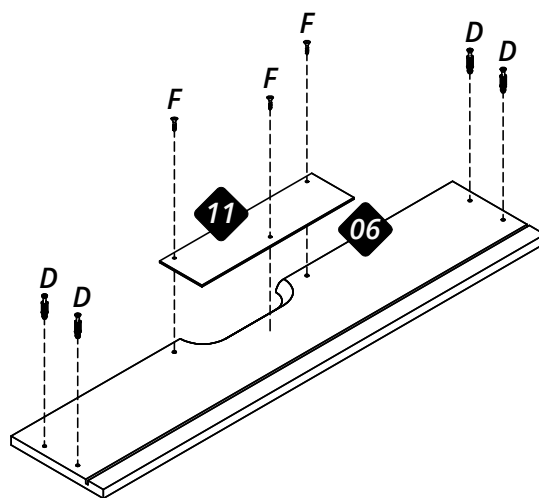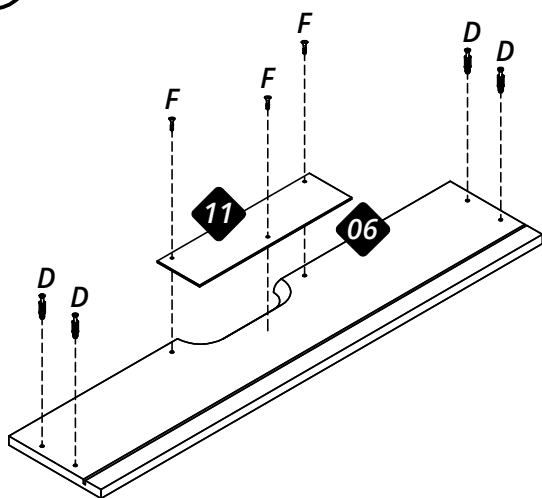

Step 16





$E = 08x$

Connect the parts 07, 08 onto the part 06 with the hardware E.






$H = 08x$

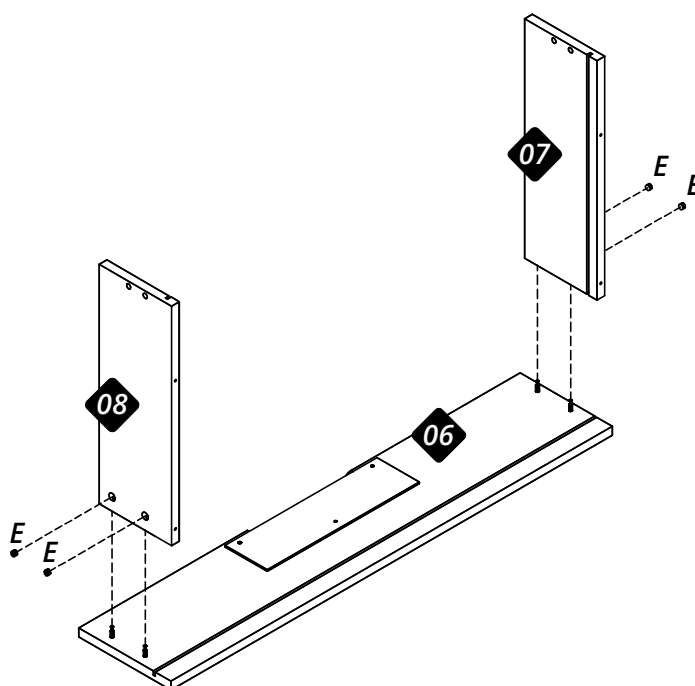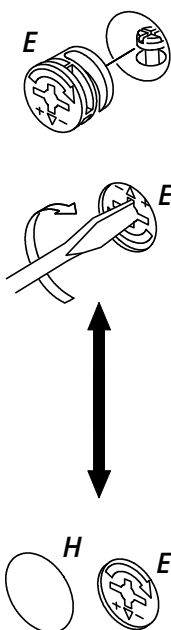


Apply the hardware (H) onto the hardware (E).

Step 17


Apply the part 10 in the groove of the parts 07, 08 until the groove of the part 06.

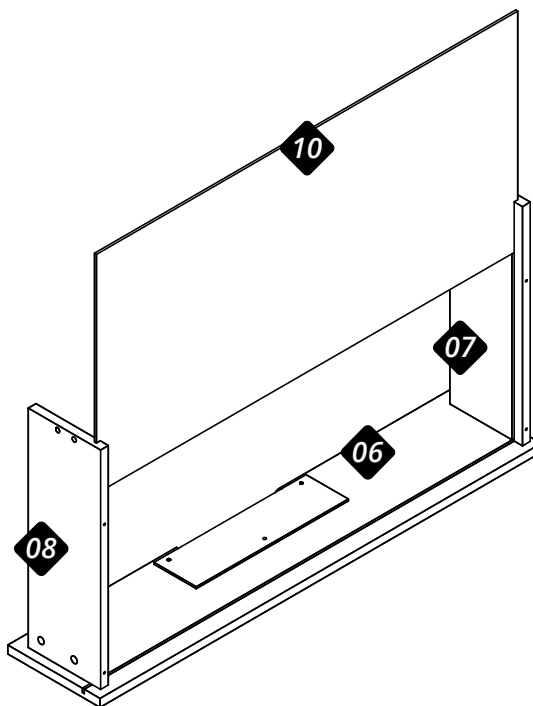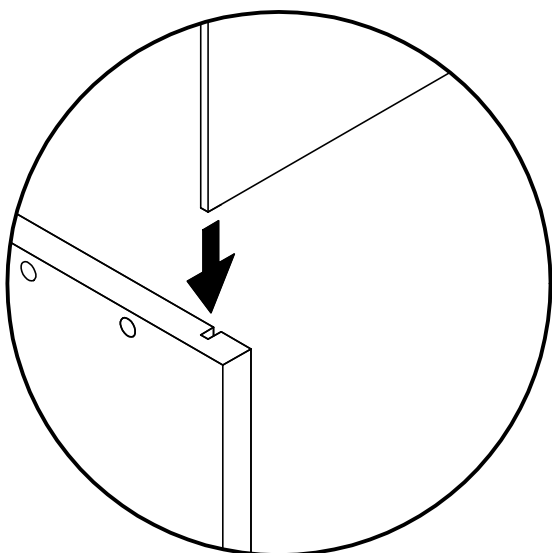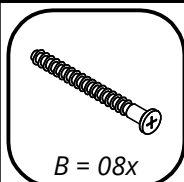**Step 18**

Connect the part 09 onto the parts 07, 08 with the hardware (B).

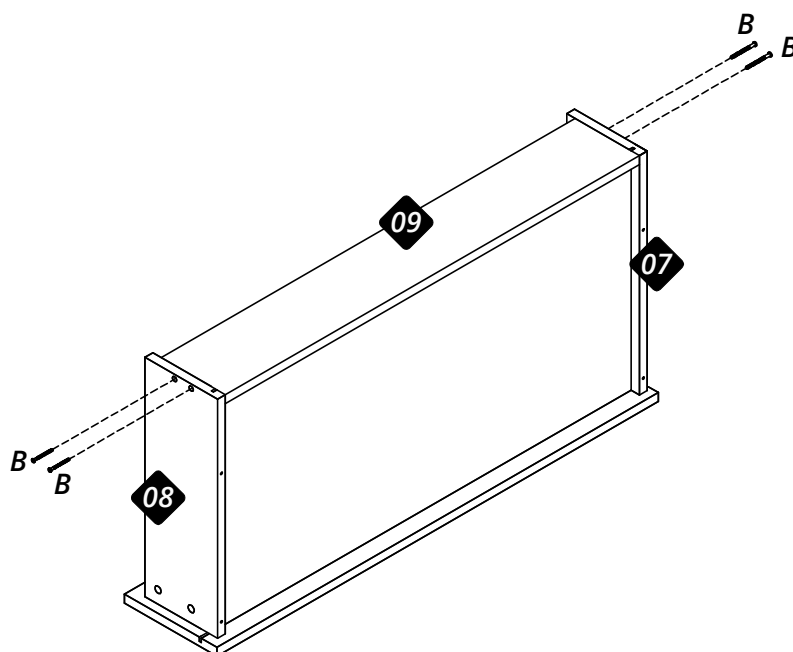

Step 19





$I = 04x$




$F = 04x$

Apply the hardware (I + F) into the groove of the part 06 as shown on detail.

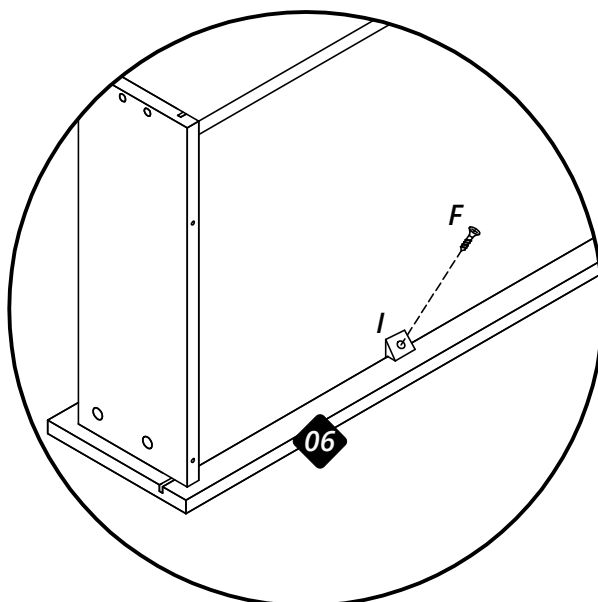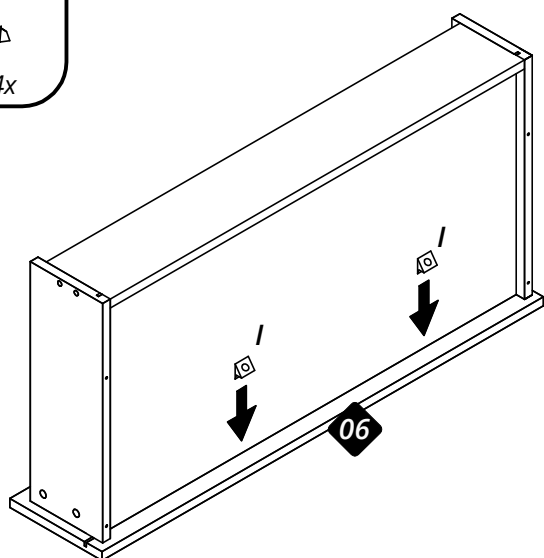

Step 20





$I = 04x$





$F = 04x$

Apply the hardware (I + F) into the groove of the part 09 as shown on detail.

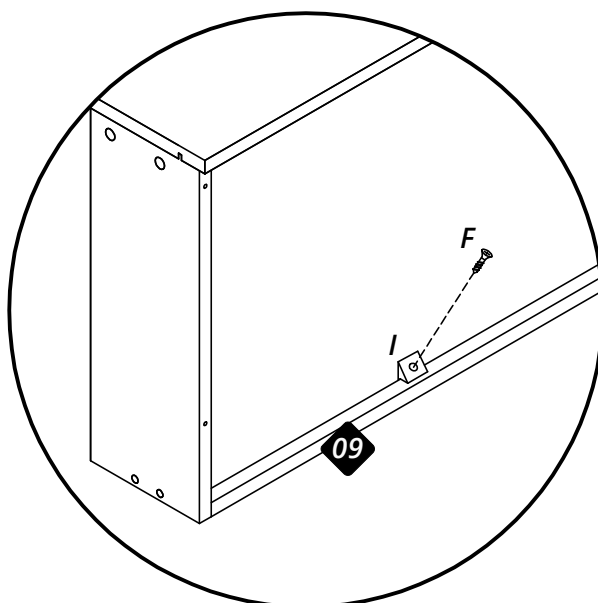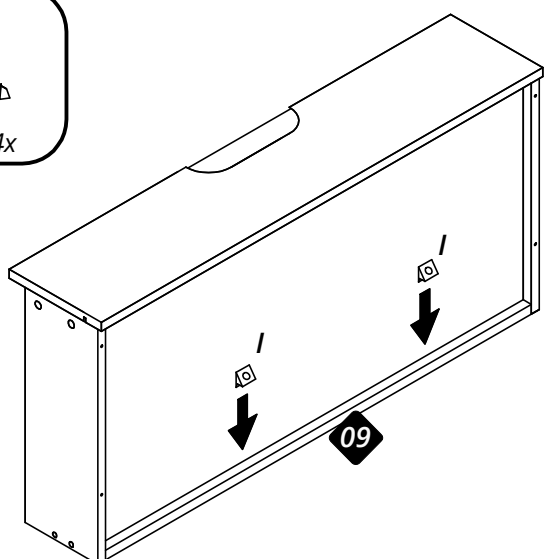


Step 21

You must apply the screws
on the holes
indicated by the arrows.

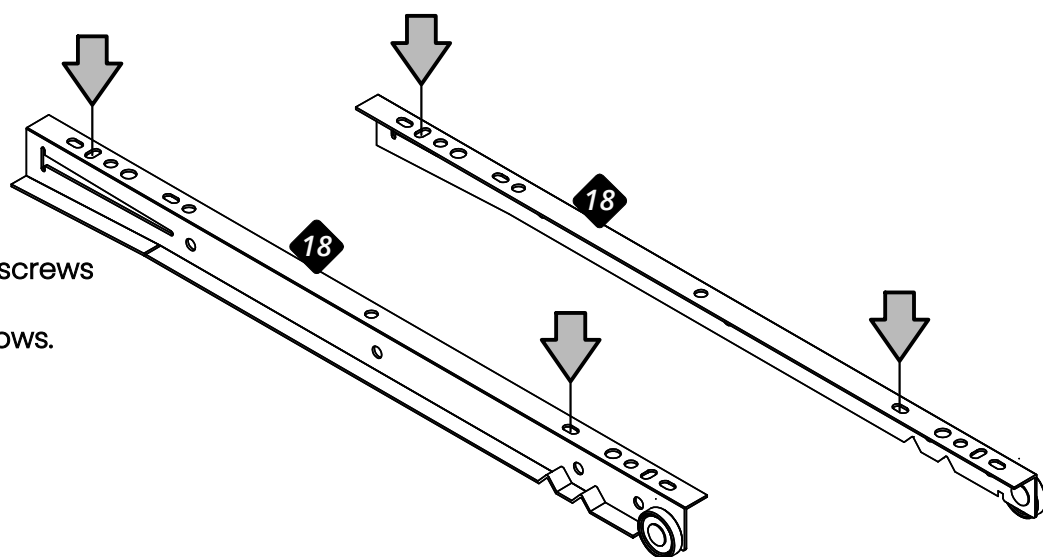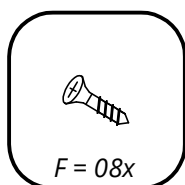

*plastic wheel always pointed
to the rear panel of the drawer
part 09.

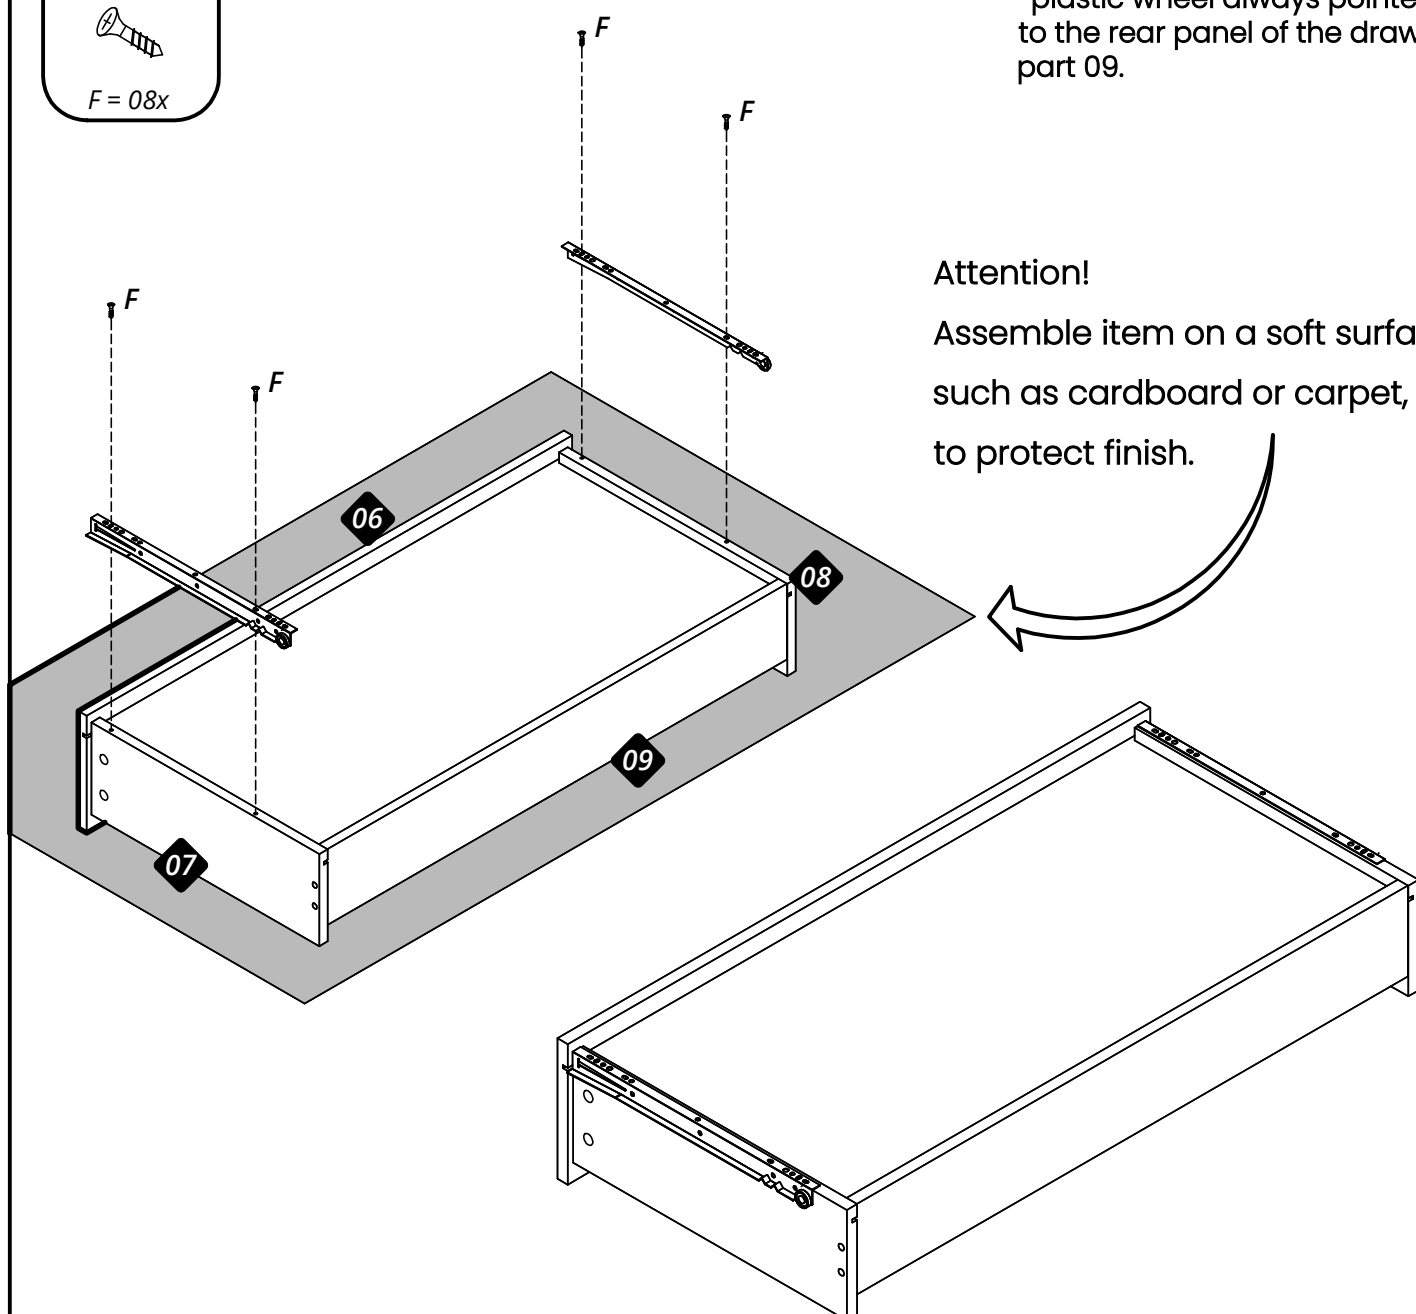


Attention!

Assemble item on a soft surface,
such as cardboard or carpet,
to protect finish.

Step 22

Install the drawers fitting them into the slides fixed on the parts 03 and 04.

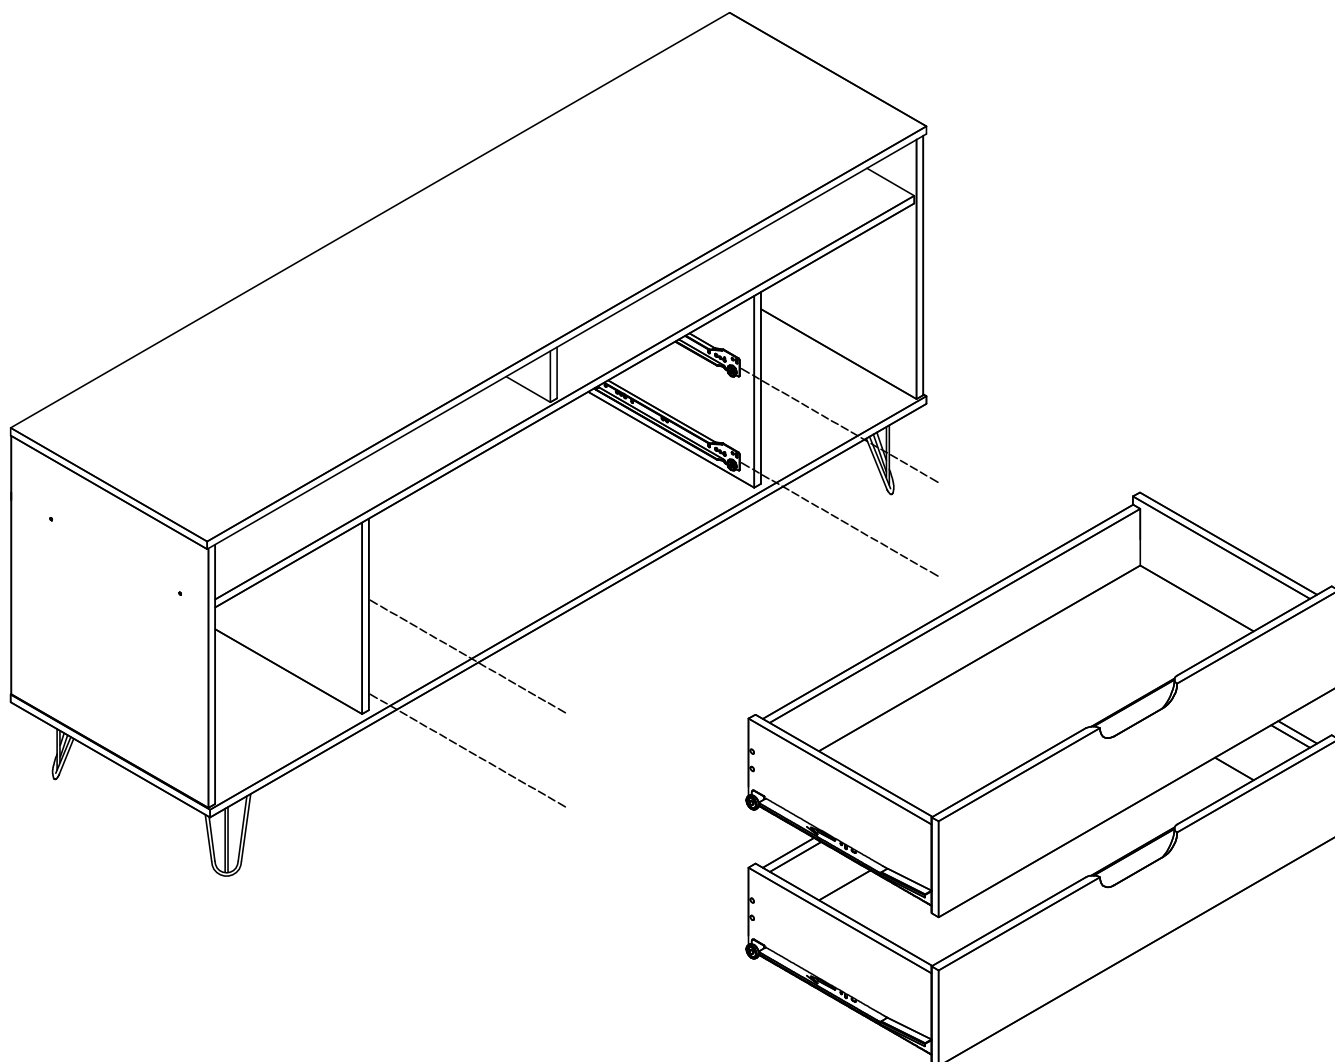



WARRANTY POLICY

All Manhattan Comfort furniture products are warranted, to the original purchaser at the time of purchase and for a period of 30 days thereafter.

Our warranty is limited to new products purchased in factory sealed cartons. This warranty is valid in the United States of America and Canada.

In order to provide you with timely assistance, please thoroughly inspect your furniture for missing or defective parts immediately after opening the carton.

Manhattan Comfort offers a 30-day parts replacement warranty on all items.

Our furniture products are not intended for outdoor use.

THE WARRANTY DOES NOT COVER:

- Defects/damages by improper assembly or disassembly.*
- Defects/damages caused by shipping. Claims for damage during transit should be placed immediately to the transportation company.*
- Defects/damages caused by inappropriate use of the furniture.*



319 Ridge Rd. Dayton, NJ 08810
908-888-0818