AMERICAN WOODCRAFTERS 1060 E.SPRINGFIELD RD HIGH POINT,NC 27263 (336)861-0003

## ASSEMBLY INSTRUCTIONS


ITEM NO: B2-303-26F/ B2-303-30F

Don't tighten any bolts until all bolts on a step have been started!

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the HARDWARE LIST below.


NO.	PARTS LIST		PARTSNO	Q'TY
Α		Stool back	B2-303-26FP1	1
В	$\bigcirc$	Bonded Fabric seat	B2-303-26FP2	1
С		Top ring	B2-303-26FP3	1
D		Metal swivel	B2-303-26FP4	1 Pre-assy
		Middle ring	B2-303-26FP5	
Е		Bottom ring	B2-303-26FP6	1
F		Leg	B2-303-26FP7 B2-303-30FP7	4

NO.	HARDWARE LIST		PARTSNO	Q'TY
1		1/4"*2"	B2-303-26FP8	14
2	9	1/4"*1-1/2"		4
3		1/4"*1"		4
4		1/4"		22
5	0	1/4"*19mm		22
6	ATTE	7*15mmL		4
7		Allen Wrench		1

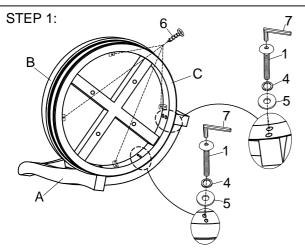


- 1. Attach the Stool back(A) to the Top ring(C) using Bolts(7+1+4+5) to tighten, as shown.
- 2. Attach the Bonded leather seat(B) to the(A+C), using Screws(6) to tighten, as shown

## STEP 2:

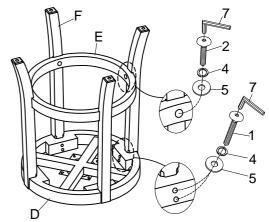


- 1. Attach the four Legs(F) to the Middle Ring(D), using Bolts(7+1+ 4+5) to tighten, as shown
- 2. Attach the Bottom Ring(E) to the Legs, using Bolts (7+2+ 4+5) to tighten, as shown.

## STEP 3:

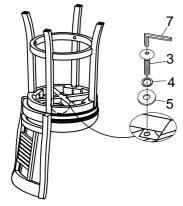

- 1. Upside down the Wooden Seat Back(STEP1) and put it on a smooth and stable working stand.
- 2. Attach the Stool Base(STEP2) to the Seat w/ pre-assembly Seat Back(STEP 1), using a Phillips head screwdriver (not included) and Bolts(7+3+4+5) to tighten, as shown.

## STEP 4:

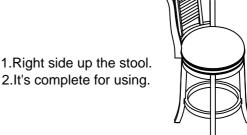

- Caution: 1. All bolts must be tightened mandatorily in each step 2. It is also recommended to periodically check

bolts and re-tighten as needed. If you find that your furniture has a missing or damaged part, contact the dealer from which you purchased this product, they will be happy to assist you. Thank you for making American Woodcrafters a part of your