








AMERICAN WOODCRAFTERS  
1060 E. SPRINGFIELD RD  
HIGH POINT, NC 27263  
(336)861-0003






# ASSEMBLY INSTRUCTIONS

ITEM NO: B2-304-26F/ B2-304-30F


**Don't tighten any bolts until all bolts on a step have been started!**

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment. Identify and count all parts and compare with the **HARDWARE LIST** below.

NO.		PARTS LIST	PARTS SKU#	Q'TY
A		Stool back	B2-304-26FP1 B2-304-30FP1	1
B		Linen Fabric Seat	B2-304-26FP2	1
C		Left Leg	B2-304-26FP3 B2-304-30FP3	1
D		Right Leg	B2-304-26FP4 B2-304-30FP4	1
E		Left Stretcher	B2-304-26FP5	1
F		Right Stretcher	B2-304-26FP6	1
G		Front Stretcher	B2-304-26FP7	1


NO.		HARDWARE LIST	PARTS SKU#	Q'TY
1		1/4"*2"	B2-304-26FP8	8
2		1/4"		8
3		1/4"*19mm		8
4		8*38mmL		6
5		Allen Wrench		1

## STEP 1:

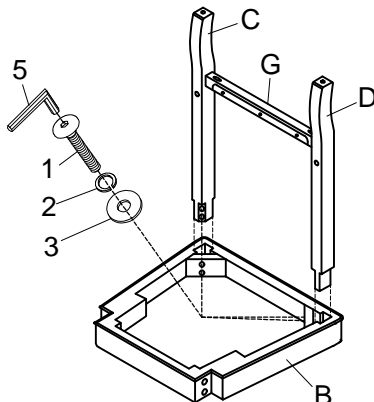

1. Loosely attach the left leg(C) and Right Leg(D) to the Linen Fabric Seat(B), using Bolts(5+1+2+3) to tighten, as shown.

## STEP 2:

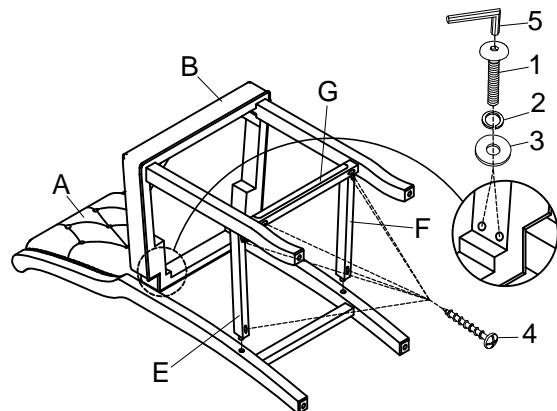

1. Loosely attach the Linen Fabric Seat(B) to the Stool Back(A), using Bolts(5+1+2+3) to tighten, as shown.  
2. Attach the Front/Back stretcher(G) and Right/left stretcher (E/F) to the legs, using Screw(4) and a Phillips head screwdriver (not included) to tighten, as shown.

## STEP 3:

1. Right side up the stool.
2. It's complete for using.

Caution: 1. All bolts must be tightened mandatorily in each step.  
2. It is also recommended to periodically check bolts and re-tighten as needed.

If you find that your furniture has a missing or damaged part, contact the dealer from which you purchased this product, they will be happy to assist you. Thank you for making American Woodcrafters a part of your home.

