




AC125 ASSEMBLY INSTRUCTION

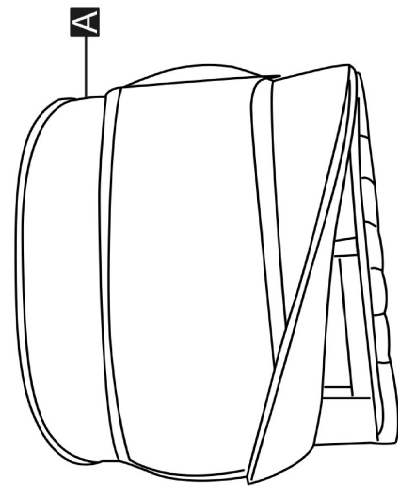


1
Open the fabric cover from the back

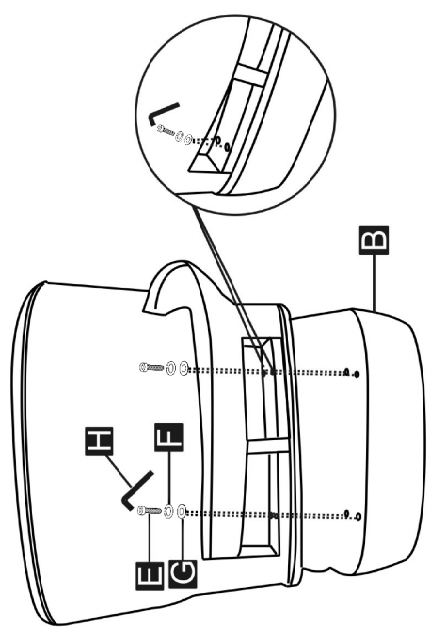

2
Put the screws in the holes, but not too tight, 100% is ok.

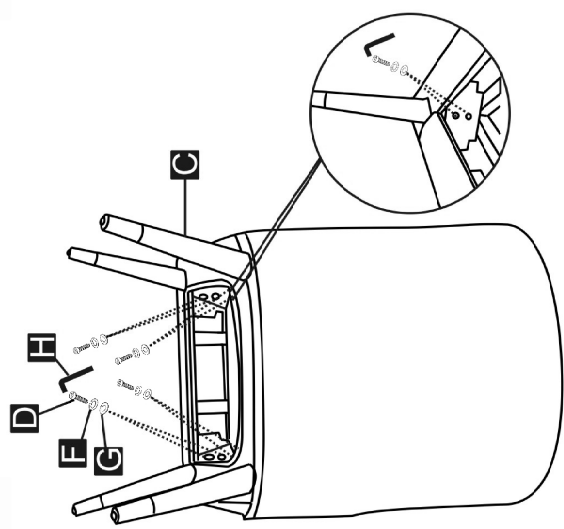

3
Put the screws in the holes, but not too tight, 90% is ok.

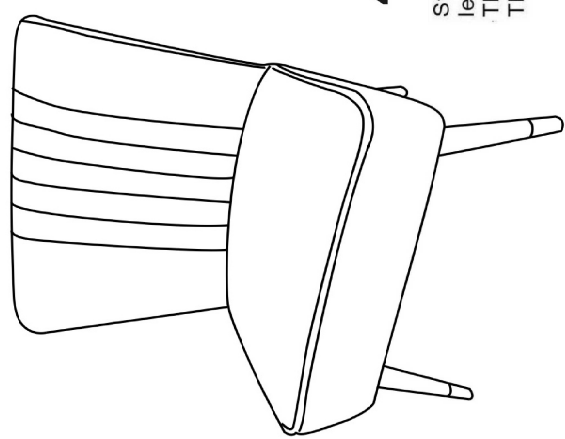

4

Stand the chair upright & ensure it is level before tightening all screws. Then tight all the screws to 100%. Then stick the black part on the seat

A 	B 	C
1PC M8*50mm 8PCS D	1PC M8*70mm 4PCS E	4PCS F
M8 12PCS G	M8 1PC H	