

## Parts and Damage Replacement Procedure

1. Please inspect your purchase immediately.
2. This procedure covers product purchased and was received in its originally sealed carton.

**A COPY OF YOUR PURCHASE RECEIPT OR INVOICE MUST BE ATTACHED TO THIS ORDER FORM.  
NO ORDERS WILL BE PROCESSED WITHOUT PROOF OF PURCHASE.**

NAME: \_\_\_\_\_

ADDRESS: \_\_\_\_\_ (No Post Office Boxes)

CITY: \_\_\_\_\_ STATE: \_\_\_\_\_ ZIP: \_\_\_\_\_

PHONE: \_\_\_\_\_ FAX: \_\_\_\_\_

EMAIL: \_\_\_\_\_

### **REASON FOR REPLACEMENT/PLEASE CHECK APPROPRIATE BOX.**

- ☐ ( ) Damaged /scratched, cracked, broken, crushed, etc.
- ☐ ( ) Mechanical malfunction/ drawer glides, swivel mechanisms, lid stays, etc.
- ☐ ( ) Missing pieces
- ☐ ( ) Unfinished surface
- ☐ ( ) Wrong color
- ☐ ( ) Other








IF MORE THAN ONE MODEL NUMBER IS LISTED ABOVE, PLEASE SPECIFY THE EXACT MODEL NUMBER OF YOUR ITEM IN THE SPACE PROVIDED BELOW.



Model Number	Part Letter Code	Quantity

# ASSEMBLY INSTRUCTION
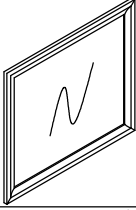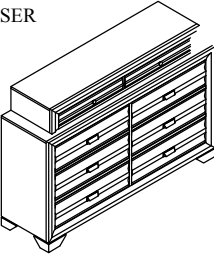
## DESCRIPTION : DRESSER & MIRROR

Thank you for purchasing this quality product. Be sure to check all packing material carefully for small Hardware which may have come loose inside the carton during shipment. Identify and count all Hardware and compare with the Hardware List below.

NO	PARTS & HARDWARE	QTY.
A	MIRROR 	1PC
	DRESSER 	
C	MIRROR SUPPORT 	2PCS
D	JCBC M6 x 35mm 	8PCS
	SPRING WASHER 1/4"mm 	8PCS
	FLAT WASHER 1/4" x 20mm 	8PCS
G	L KEY M4 	1PC

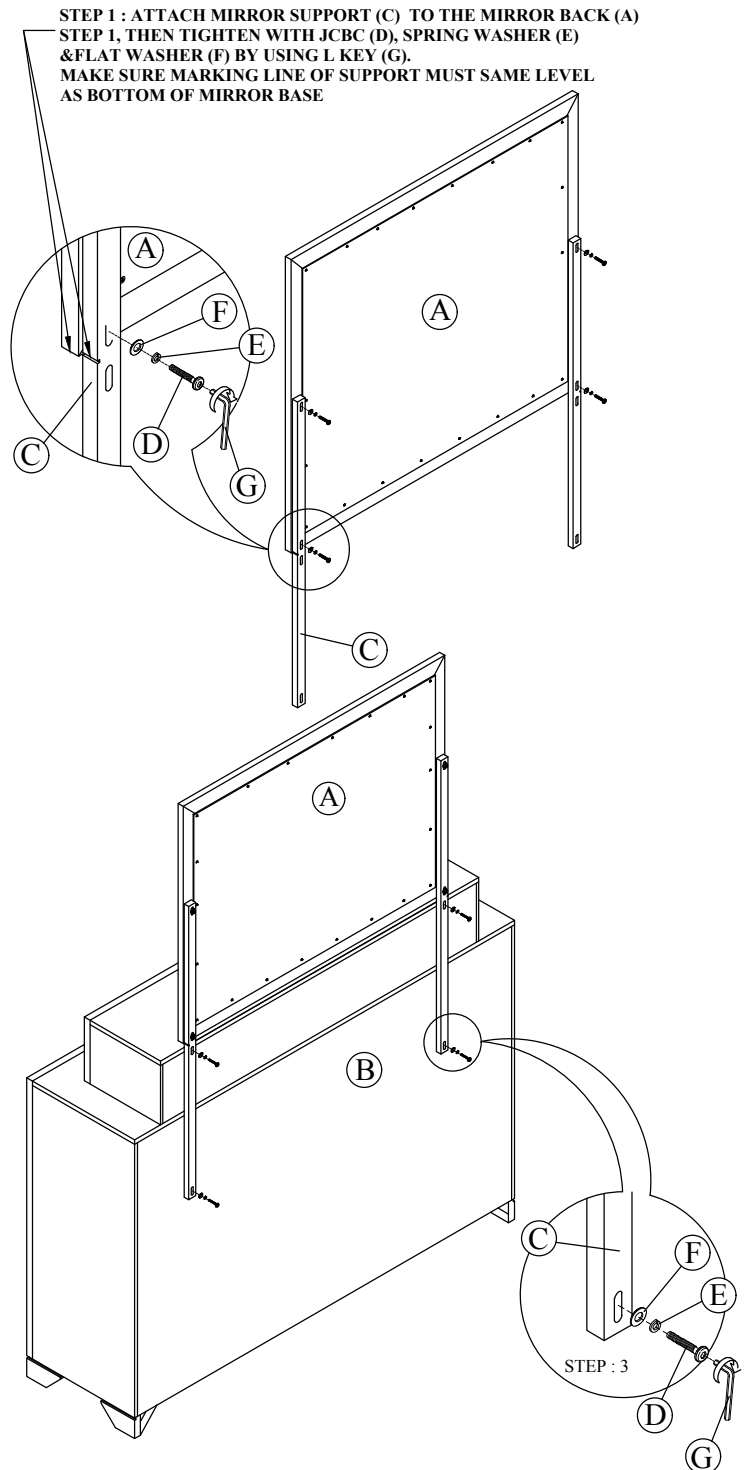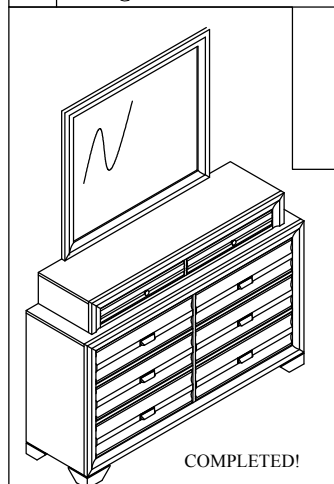





# ANTI - TIPPING KIT

## FOR CHEST, DRESSER, PLASMA/TV CHEST & NIGHTSTAND (IF OVER 30")


**This Tip Restraint Must Be Attached To A Wall Stud Using Long Screw Enclosed**

### HARDWARE

- |    |  |             |       |
|----|--|-------------|-------|
| 1. |  | Short screw | 1 pc  |
| 2. |  | Long screw  | 1 pc  |
| 3. |  | Cable tie   | 1 pc  |
| 4. |  | L Bracket   | 2 pcs |


### STEP 1

Attach a bracket securely to the back top rail of the casegoods using short screw provided, through the smaller hole.

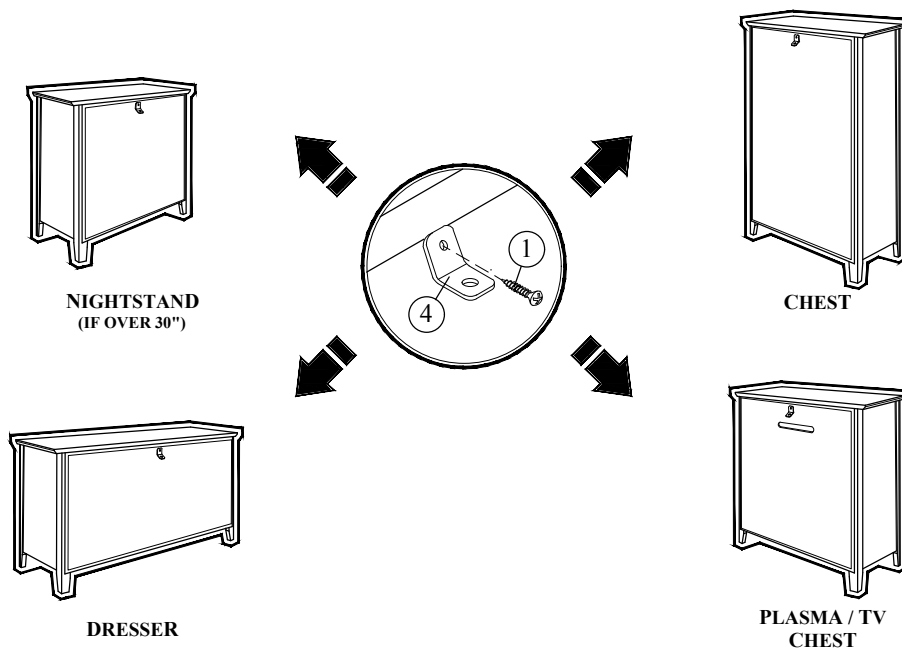

### STEP 2

Locate the other bracket on the wall over a wall stud and two inches below the mounting bracket secured to the back of casegoods. Attached to the wall stud using the long screw provided, through the smaller hole.

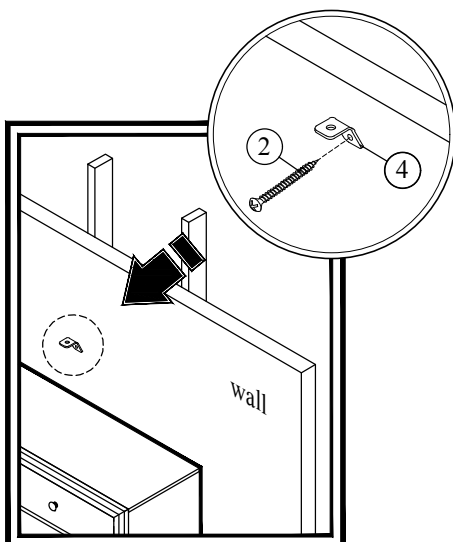

### STEP 3

Place the casegoods into position so both mounting brackets are vertically in line. Lace the end of the restraint strap through the larger hole in each mounting bracket. Bring both ends together and slide the flat end through the locking end and draw it through until all slack is removed. Confirm that the strap is securely laced and locked.

