




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

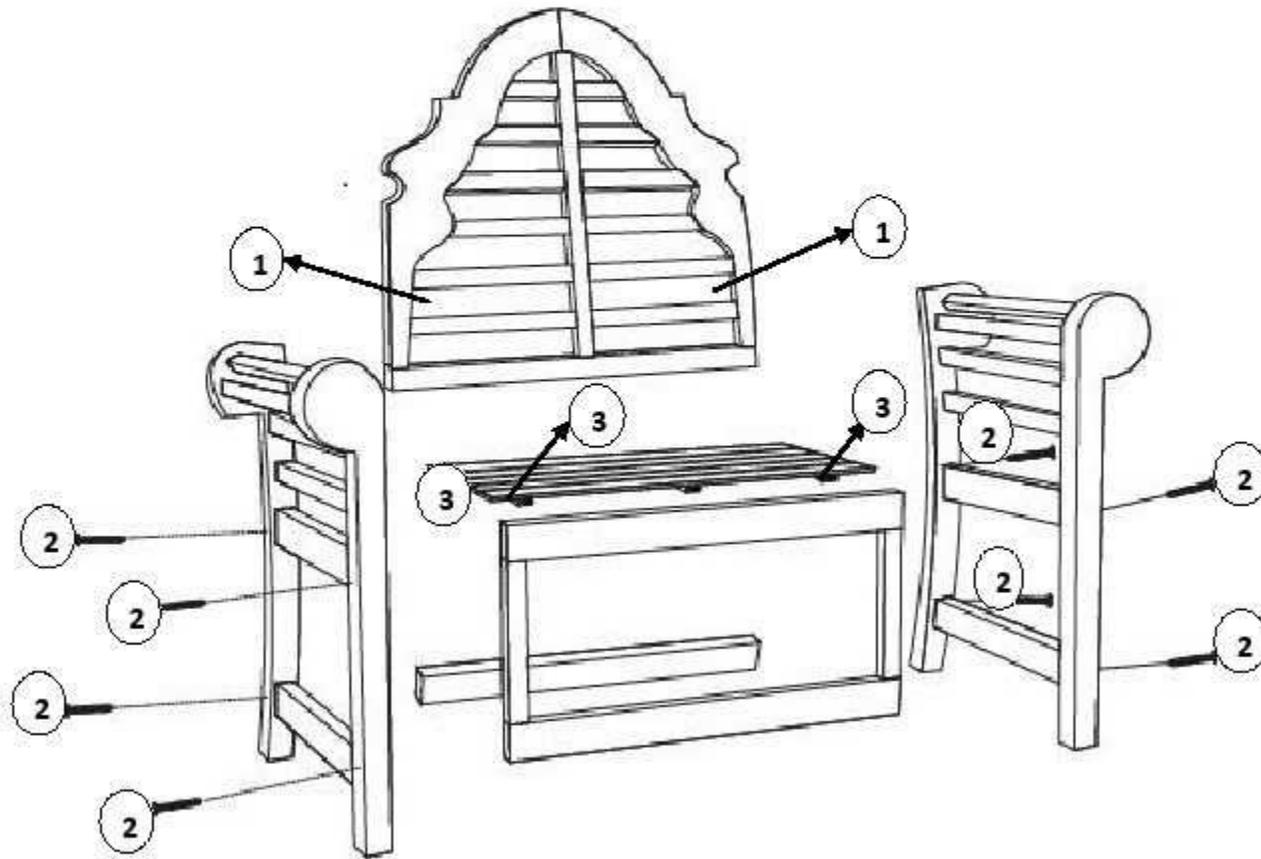

*Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly*

Code

AM50

Hardware



- 1. F. Bolt 50 mm (2 Pcs)
- 2. F. Bolt 70 mm (8 Pcs)
- 3. Screw 40 mm (4 Pcs)

Tool



Socket Wrench 4m/n Et

Total Section

6 Section