


CHIC TEAK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325**

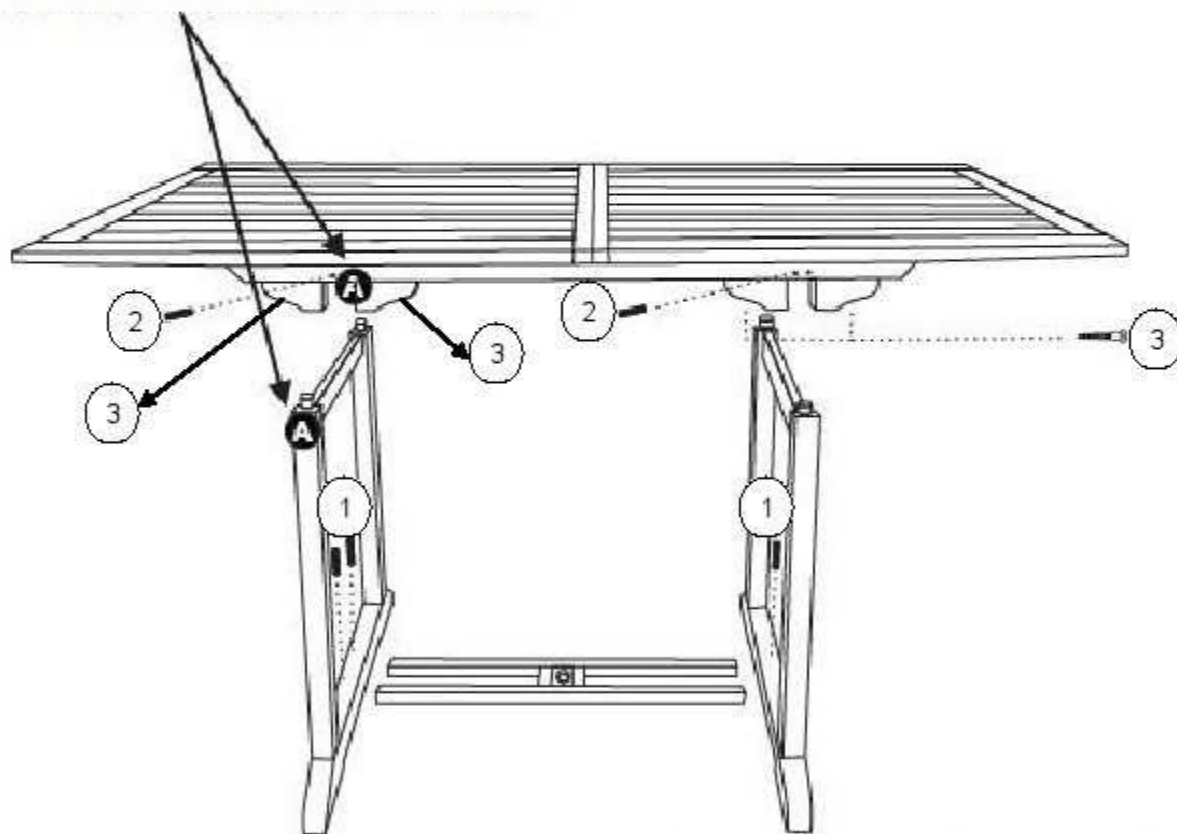

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AT18RECTBAR

Hardware



- 1. Custom Bolt 50 mm (4 Pcs)
- 2. Custom Bolt 25 mm (4 Pcs)
- 3. Screw 40 mm (8 Pcs)

Tool



Socket Wrench 4m/m Ht

Total Section

4 Section