




Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING
NEED ASSEMBLY ASSISTANCE?
CALL US AT 866-814-8325

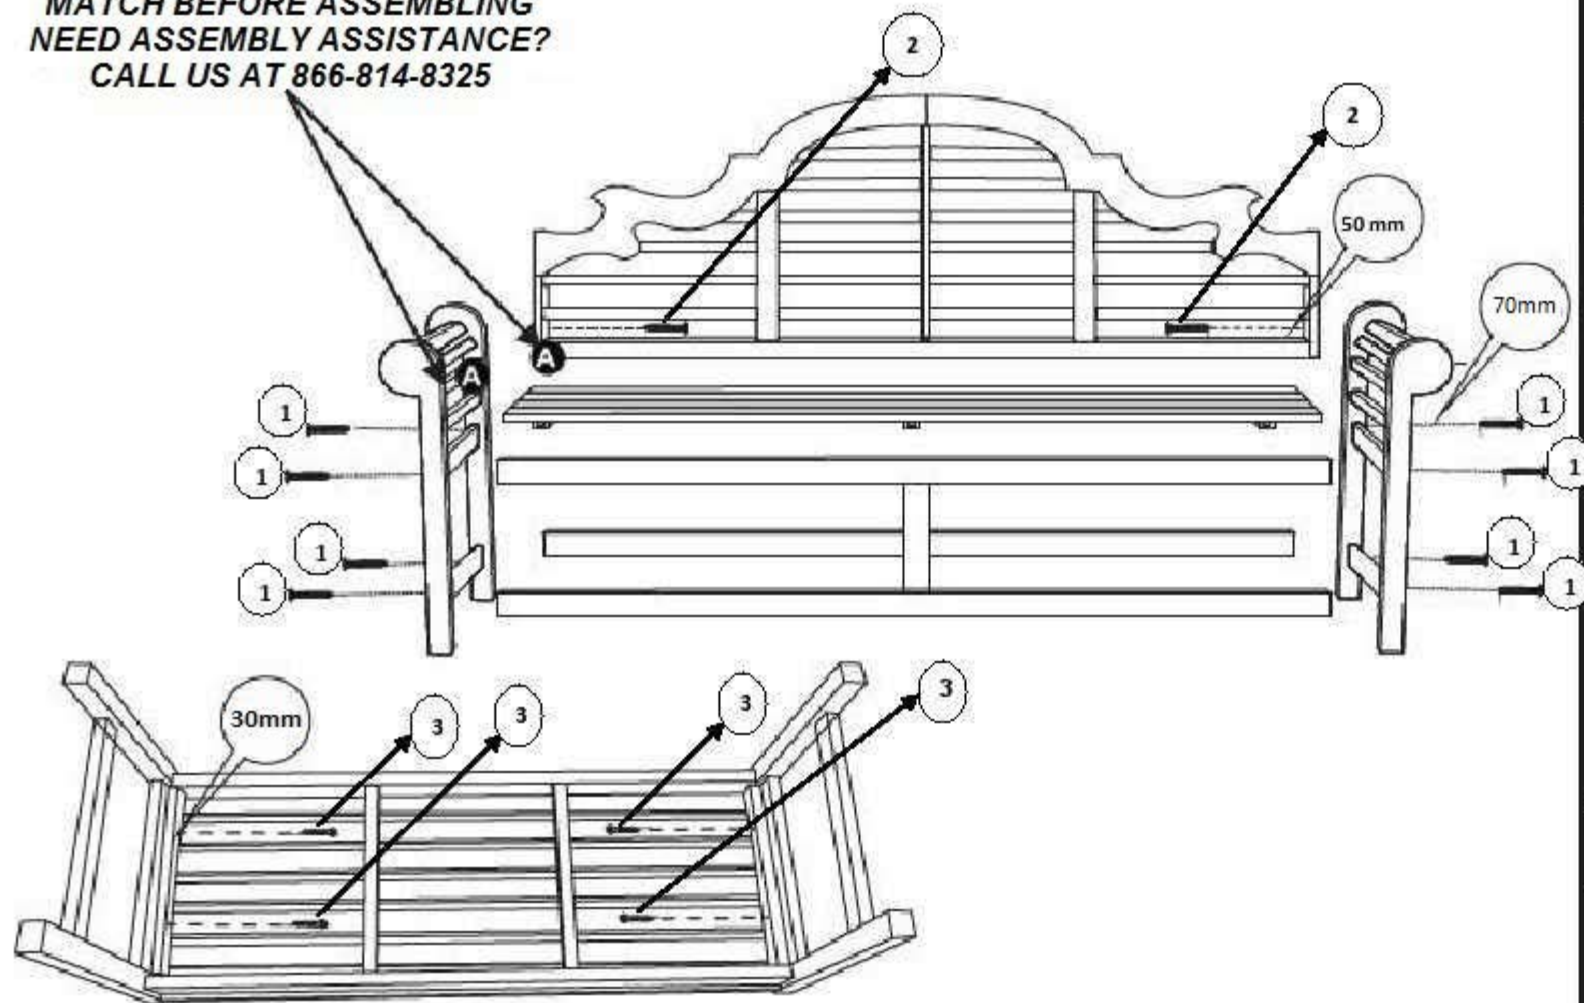

**Make sure to use Gorilla Glue (Not Included)
on all wood joints before assembly**

Code

AM50T

Hardware



1. F. Bolt 70mm (8 Pcs)
2. F. Bolt 50 mm (2 Pcs)



3. Screw 30 mm (4 Pcs)

Tool



Socket Wrench 4m/n Rt

Total Section

6 Section