


SEVENTEASEASK

Assembly Instruction

INSTRUCTION DE MONTAGE
MONTAGEANLEITUNG
SAMLEVEJLEDNING

**MAKE SURE THE LETTERS
MATCH BEFORE ASSEMBLING**

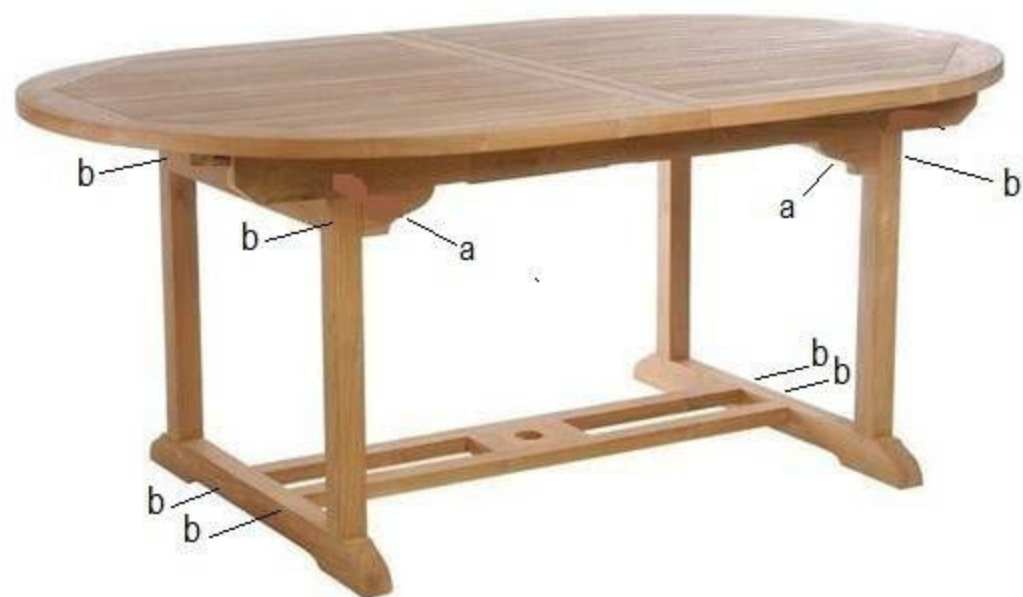

*Make sure to use Gorilla Glue (not included)
on all wood joints before assembly*


Code

SST21

Hardware

- a 
30mm Screws 4Pcs
- b 
b. 60mm Bolts 8Pcs

Tool

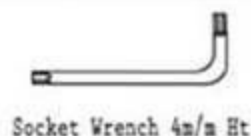

Socket Wrench 4m/m Ht

Total Section

4 Section