
ASSEMBLY INSTRUCTION

COUNTER HEIGHT DESK WITH FAUX MARBLE TOP & USB C Stretcher Wood Top Side Frame Side Panel 2pcs 1pc 2pcs 1pc **USB Bolt Cover** Bolt Bolt 1/4" x 1-1/2" 1/4" x 5/8" 1/4" 1pc 10pcs 6pcs 10pcs Allen Wrench Screw 12mm 1/4"

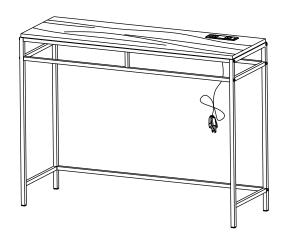


1pc

2pcs


This page lists all the contents included in the box. Please take the time to identify the hardware as well as the individual components to this product. As you unpack and prepare for assembly, place the contents on a carpeted or padded area to protect them from damage.


Attach Side Panel (B) to Side Frame (A) by Bolt (F) and Allen Wrench (J) as shown.

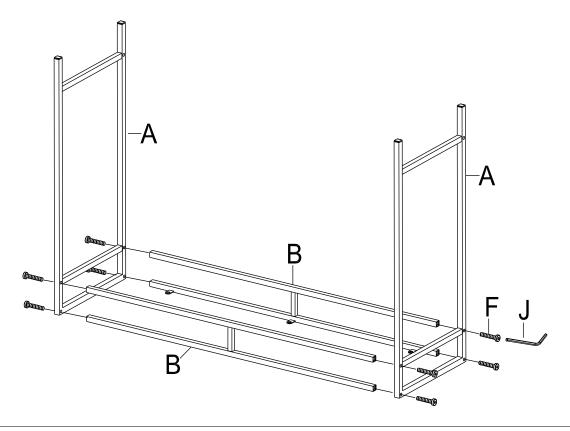


2

Attach Stretcher (C) to Side Frame (A) by Bolt (F) and Allen Wrench (J). Then cover the bolt head by Bolt Cover (H) as shown.

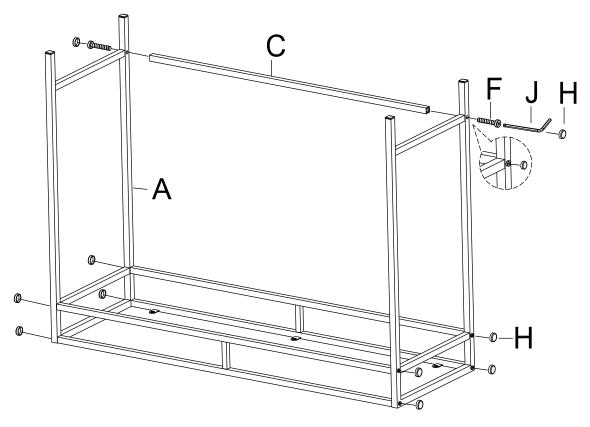

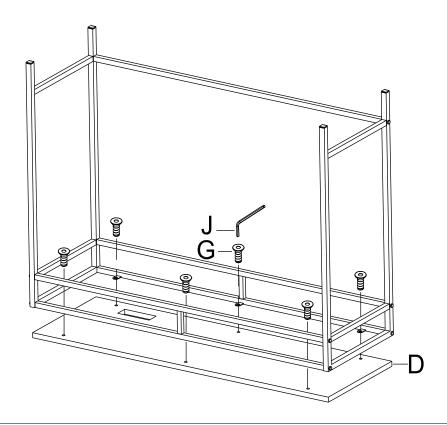

Attach USB (E) to Wood Top (D) by Screw (I) as shown.

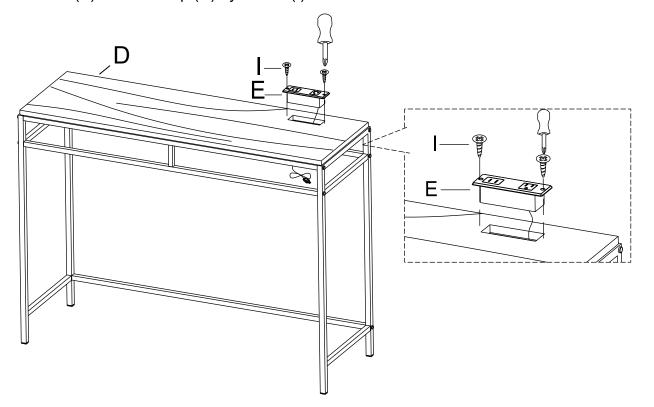

Cleaning & Care

Treat surface with care. Surface is resistant to scratches but is not scratch resistant. Clean surfaces with a dry or damp soft cloth. Do not use abrasive cleaners. Hardware may loosen over time. Periodically check that all connections are tight.