




PC311 PC312 ASSEMBLY INSTRUCTION

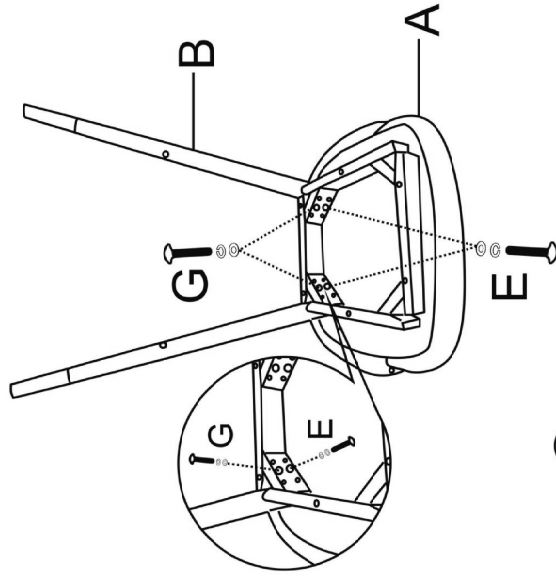


① Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

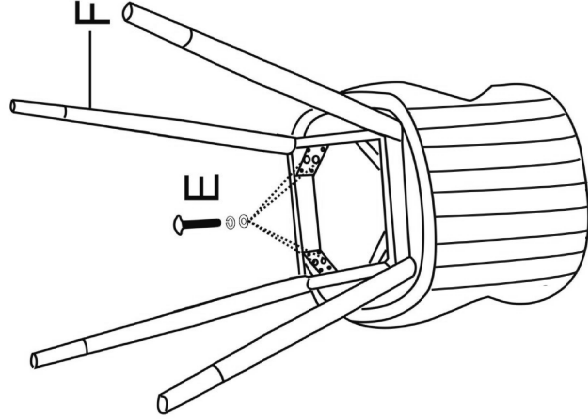



② Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

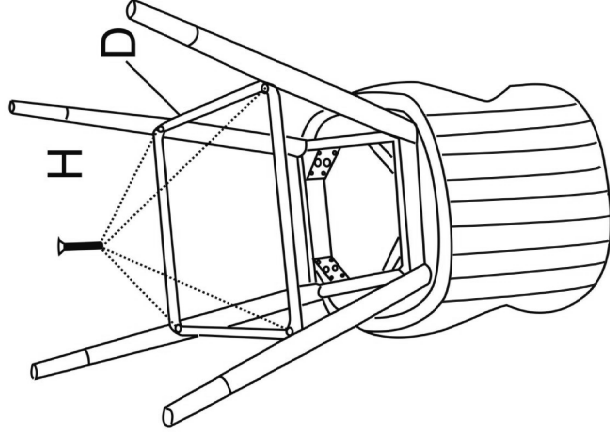

③ Put the screws in the holes, tight the screws, but not too tight, 90% is ok.

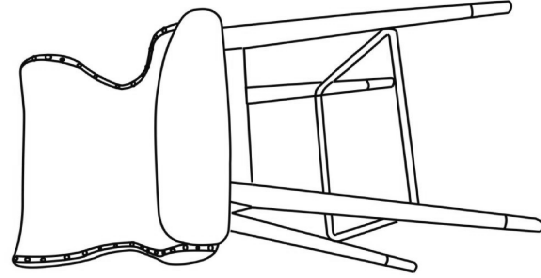

④ Stand the chair upright & ensure it is level before tightening all screws, Then tight all the screws to 100%

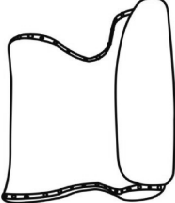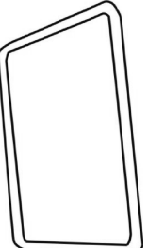A 	F 	B 	D 
Back 1PC	Front Leg 2PCS	Back Leg 2PCS	
E  ③③ M6x65mm 6PCS	G  ③③ M6x70mm 2PCS	H  M6x30mm 4PCS	I 