

## NOTICE

- \*Please make sure that you have all parts indicated and they are in good condition before you begin assembly of this item. Refer to part list and hardware list below for guidance.
- \*This item should be assembled on a soft surface to prevent scratching the finish during assembly.
- \*This item may require periodic tightening.
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)








## PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list.
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 5 minutes.
- \*Tools Required for Assembly (included): Allen Key

## CARE AND MAINTENANCE

Always use felt pads under all articles to prevent discoloration or softening of the lacquer. Plastic and rubber bases on items can discolor wood. Wipe up spills immediately and avoid common hazards such as hot dishes, harsh solvents and abrasives. Cleaning should be done with a soft lint free cotton cloth dampened with water or furniture polish. On highly used surfaces we recommend applying a quality paste wax which should be used on a regular basis to provide additional protection from scratches and spills. How often you apply the wax depends on how much wear the furniture receives.

### Part List and Hardware List


PIECE	DESCRIPTION	PICTURE	QUANTITY
A	CABINET		1X
B	ACRYLIC LEG		4X
C	ACRYLIC KNOB		2X
HW1	PHILLIPS SCREW:M4x0.7x22mm		2X
HW2	HEX SOCKET SCREW:M8x1.5x20mm		16X
HW3	FLAT WASHER:Ø17x1mm		16X
HW4	ALLEN KEY		1X

# SAFAVIEH

## COUTURE

Item# SFV3574


Product dimensions: 42.6"W x 18"D x 27.2"H

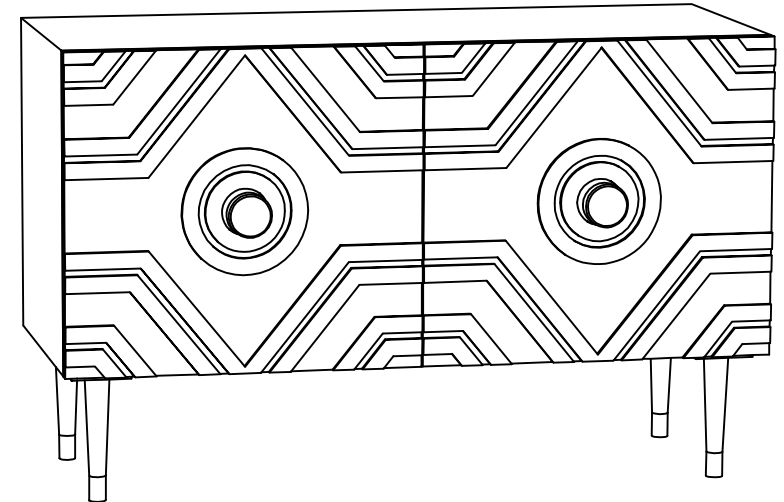


Weight Capacity: 300 LBS  
Warning: Do not stand on Sideboard.  
Warning: Do not over torque bolts.

## PREPARATION

- \*Before beginning assembly of product, make sure all parts are present. Compare parts with part contents list and hardware contents list
- \*If any part is missing or damaged, do not attempt to assemble the product.
- \*Estimated Assembly Time: 5 minutes.
- \*Tools Required for Assembly (included): Allen Key
- \*If you are having difficulty, our friendly Customer Care team is always here to help. Please email [customersupport@safavieh.com](mailto:customersupport@safavieh.com)

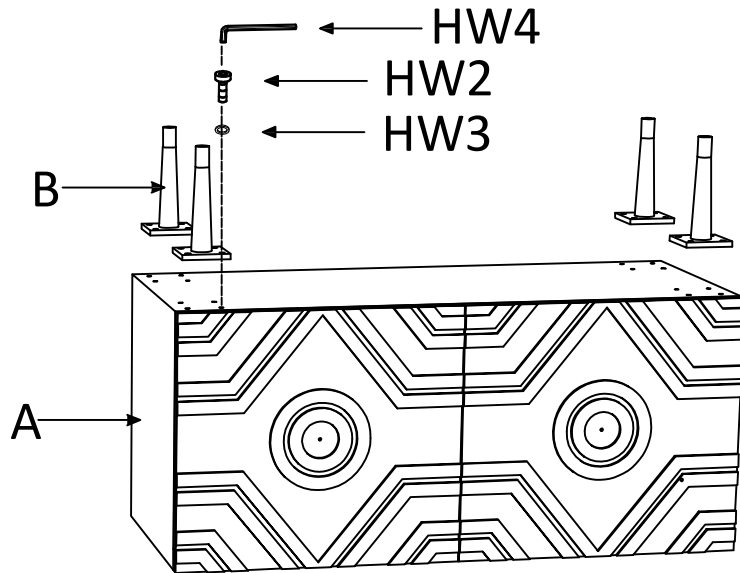

Step 1 : Place the cabinet(A) upside down and the bottom face up. Attach acrylic leg(B) to the cabinet(A) by screwing the bolt(HW2) and washer(HW3) using allen key(HW4).

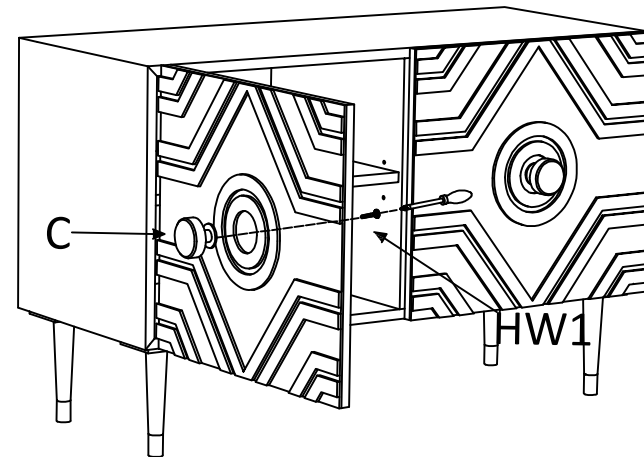

Step 2 : Place the cabinet(A) upright. Use the screws(HW1) to lock the knobs(C) which are in the hardware bag onto the front of the door.