



ASSEMBLY INSTRUCTIONS

L-SHAPED BUNK BED WITH TRUNDLE

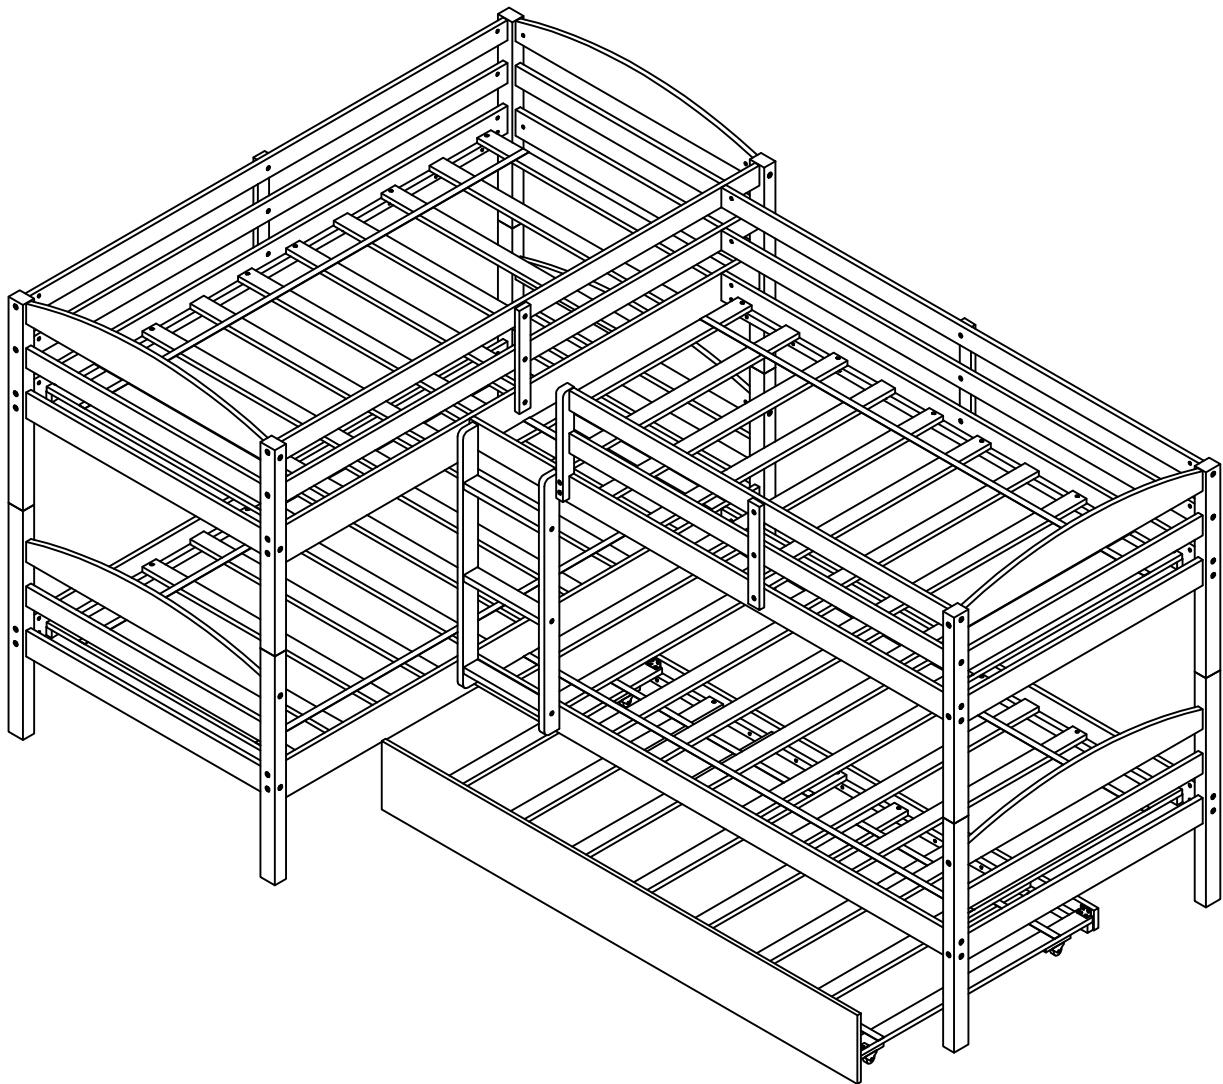







WF194484/WF194485

Detail View













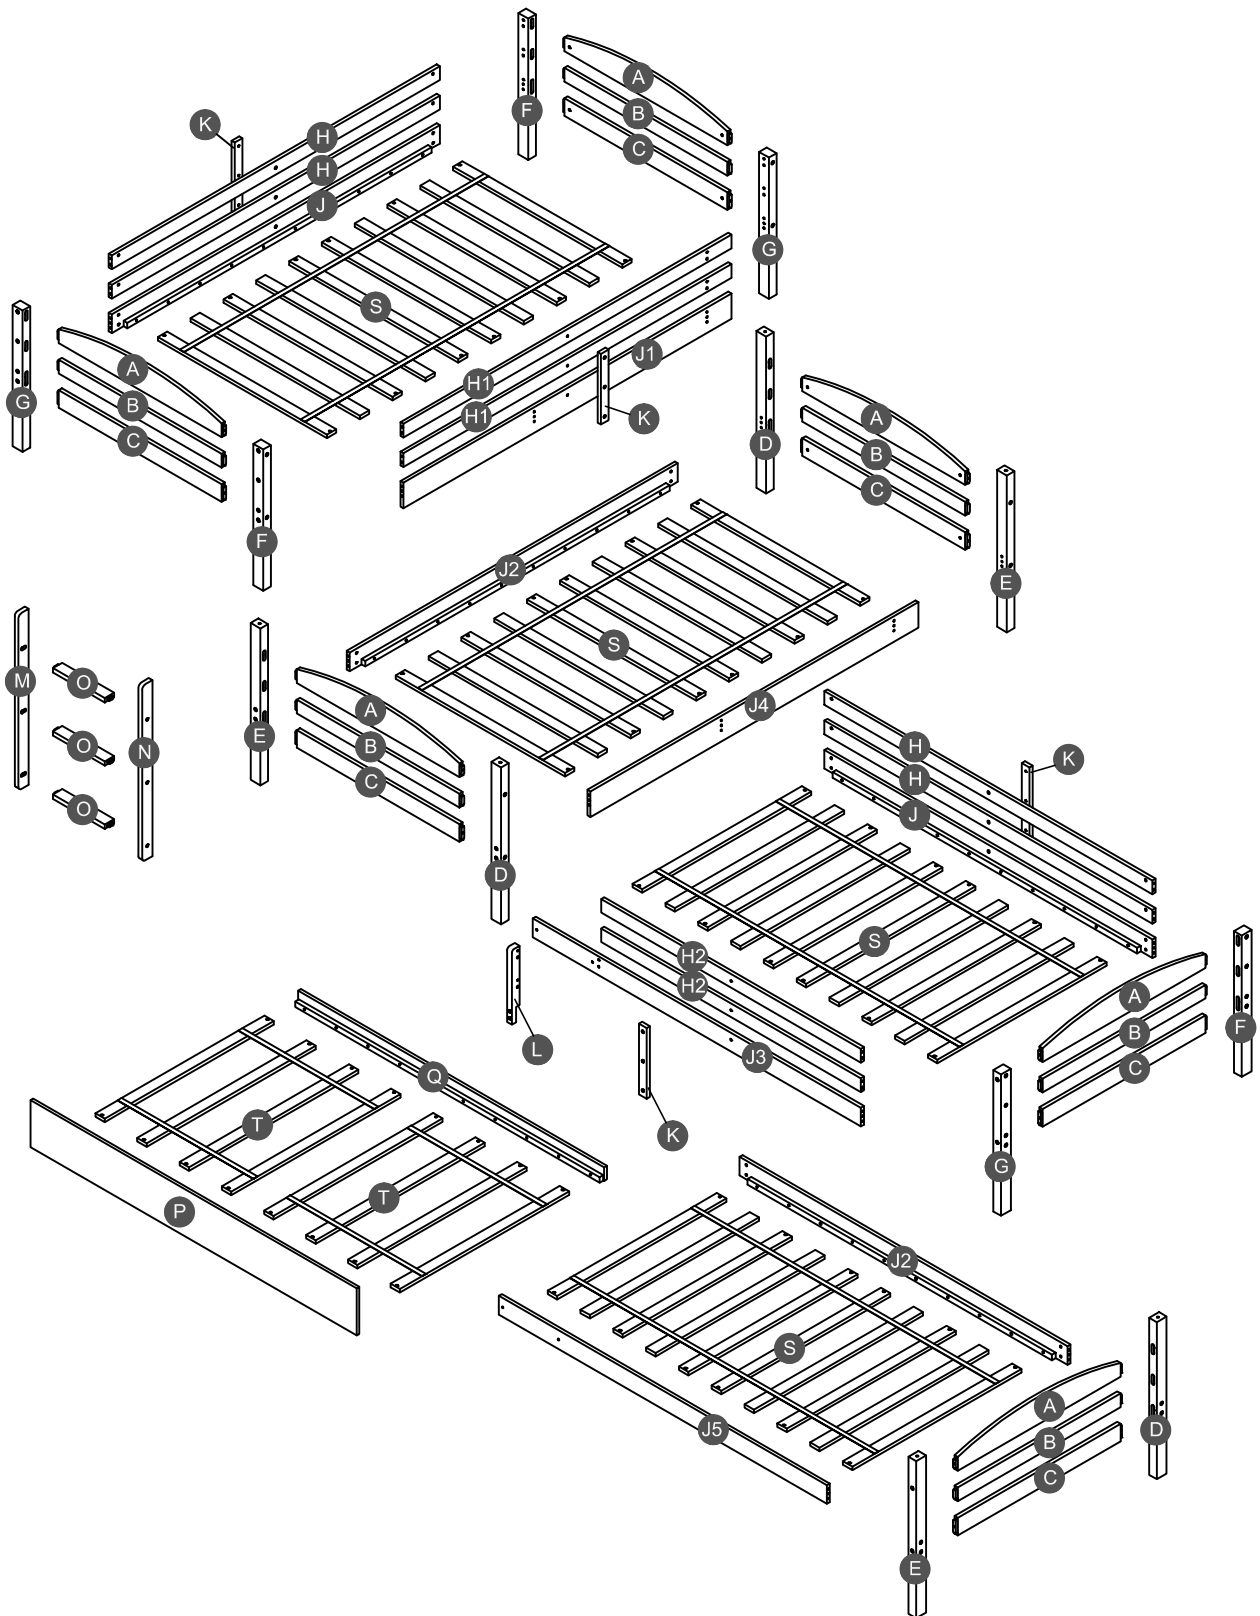


Part List








WF194484

H  Long guard rail (back) - 4pcs	H1  Long guard rail (front) - 2pcs	H2  Short guard rail (front) - 2pcs
J  Upper side rail (Back) - 2pcs	J1  Upper side rail (front) - 1pc	J2  Lower side rail (Back) - 2pcs
J3  Upper side rail (front) - 1pc	J4  Lower side rail (front) - 1pc	J5  Lower side rail (front) - 1pc
P  Front panel of trundle - 1pc	Q  Back panel of trundle - 1pc	T  Trundle Slat - 8pcs


Hardware List WF194485

A  Horizontal bar (HB/FB) - 6pcs	B  Horizontal bar (HB/FB) - 6pcs	C  Horizontal bar (HB/FB) - 6pcs
D  Lower leg HB/FB (left)-3pcs	E  Lower leg HB/FB (right)-3pcs	F  Upper leg HB/FB (left)-3pcs
G  Upper leg HB/FB (right)-3pcs	K  Vertical guard rail - 4pcs	L  Support guard rail (left) - 1pc
M  Ladder (Left) - 1pc	N  Ladder (Right) - 1pc	O  Step ladder - 3pcs
S  Slats - 4set (10pcs/set)		

Hardware List


1  Ø10*40mm Wood dowel (16pcs)	2  (Ø15)1/4"*100mm Hex-Head bolts (60pcs)	3  (Ø15)1/4"*80mm Hex-Head bolts (12pcs)
4  (Ø12)1/4"*60mm Hex-Head bolts (6pcs)	5  (Ø12)1/4"*40mm Hex-Head bolts (4pcs)	6  (Ø12)1/4"*35mm Hex-Head bolts (2pcs)
7  (Ø12)1/4"*30mm Hex-Head bolts (12pcs)	8  1/4"*15 (9.5mm) Horizontal-Hole bolts(78pcs)	9  Ø4*30mm Wood screws (72pcs)
10  (1/4")4.5*58mm Allen key (1pc)	11  Ø9*90mm Metal connector (6pcs)	12  Ø8*30mm Wood dowel (16pcs)
13  100*63*20mm Wheels (4pcs)	14  95*95*18*3mm Metal bracket (2pcs)	15  Ø3.5*15mm Wood screws (16pcs)
16  40*18*18*2mm Metal bracket (2pcs)		

ASSEMBLY TOOLS REQUIRED (NOT INCLUDED)




PLEASE BE CAREFUL DO NOT DAMAGE THE HOLE POSITION WHEN YOU USE POWER TOOLS !

STEP 1:

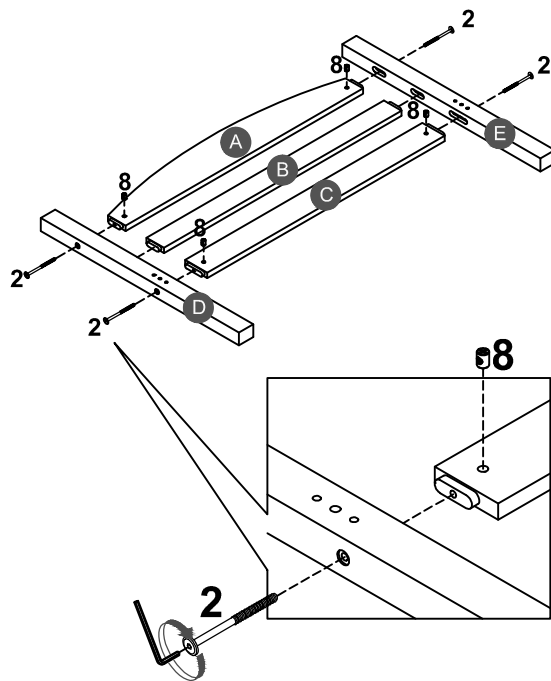


x3

2		8	
12PCS		12PCS	

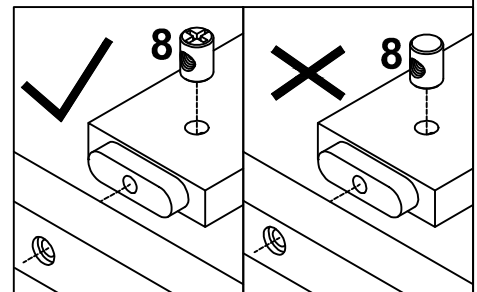


STEP 2:

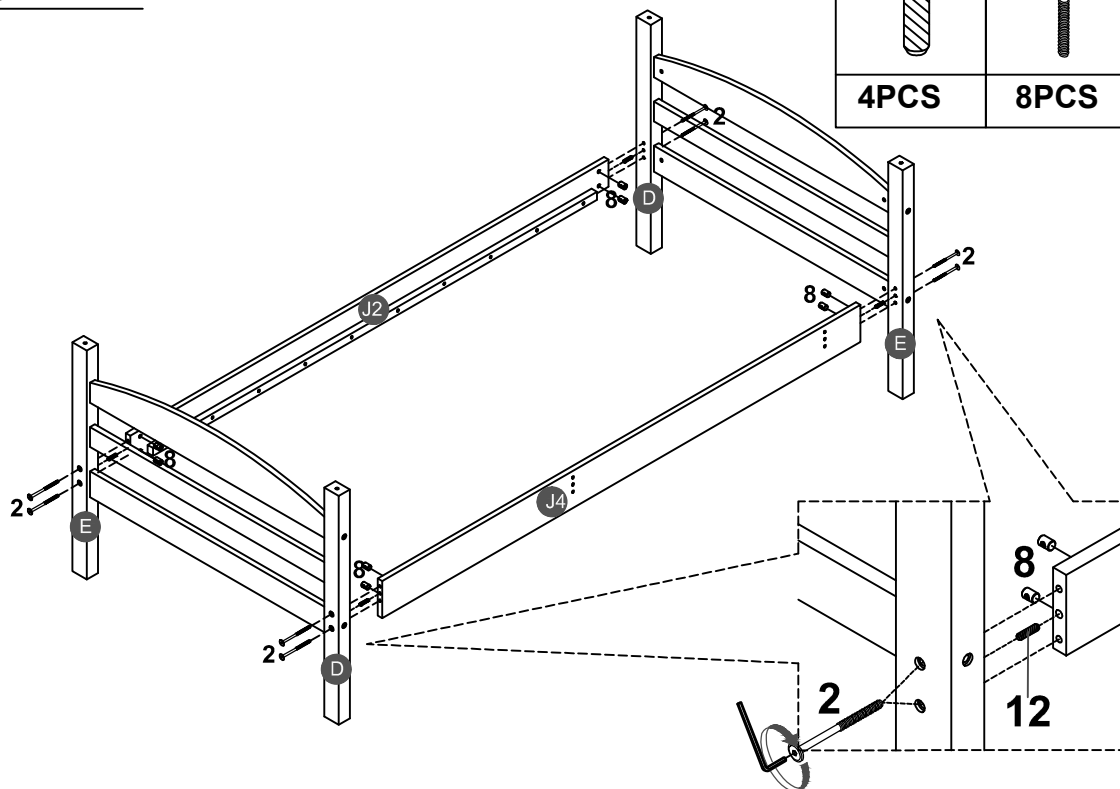


12		2		8	
4PCS		8PCS		8PCS	


STEP 3:

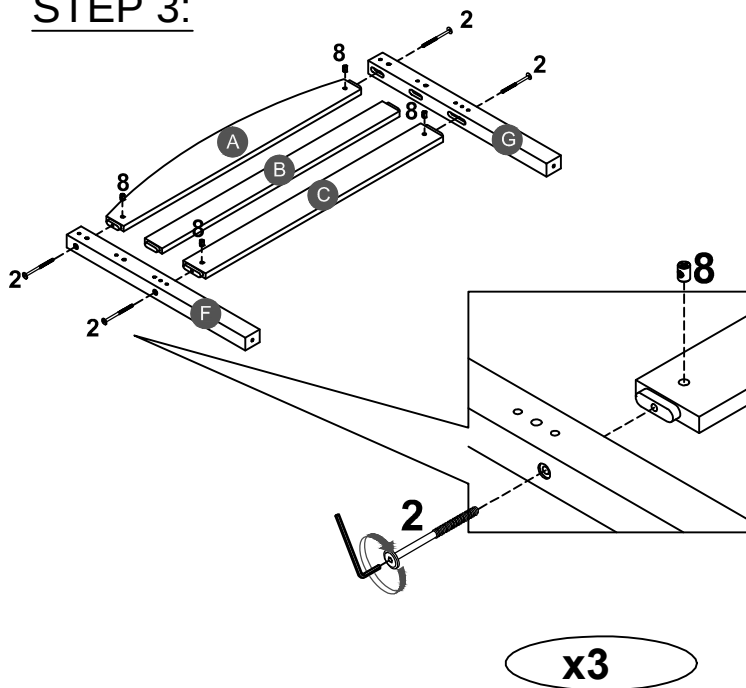

2		8	
12PCS		12PCS	

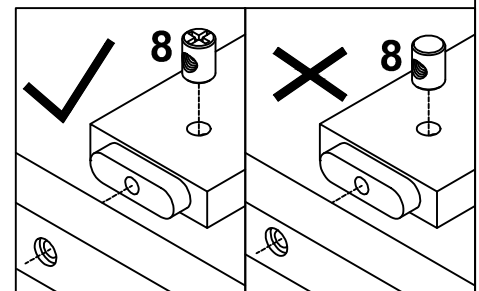


STEP 4:

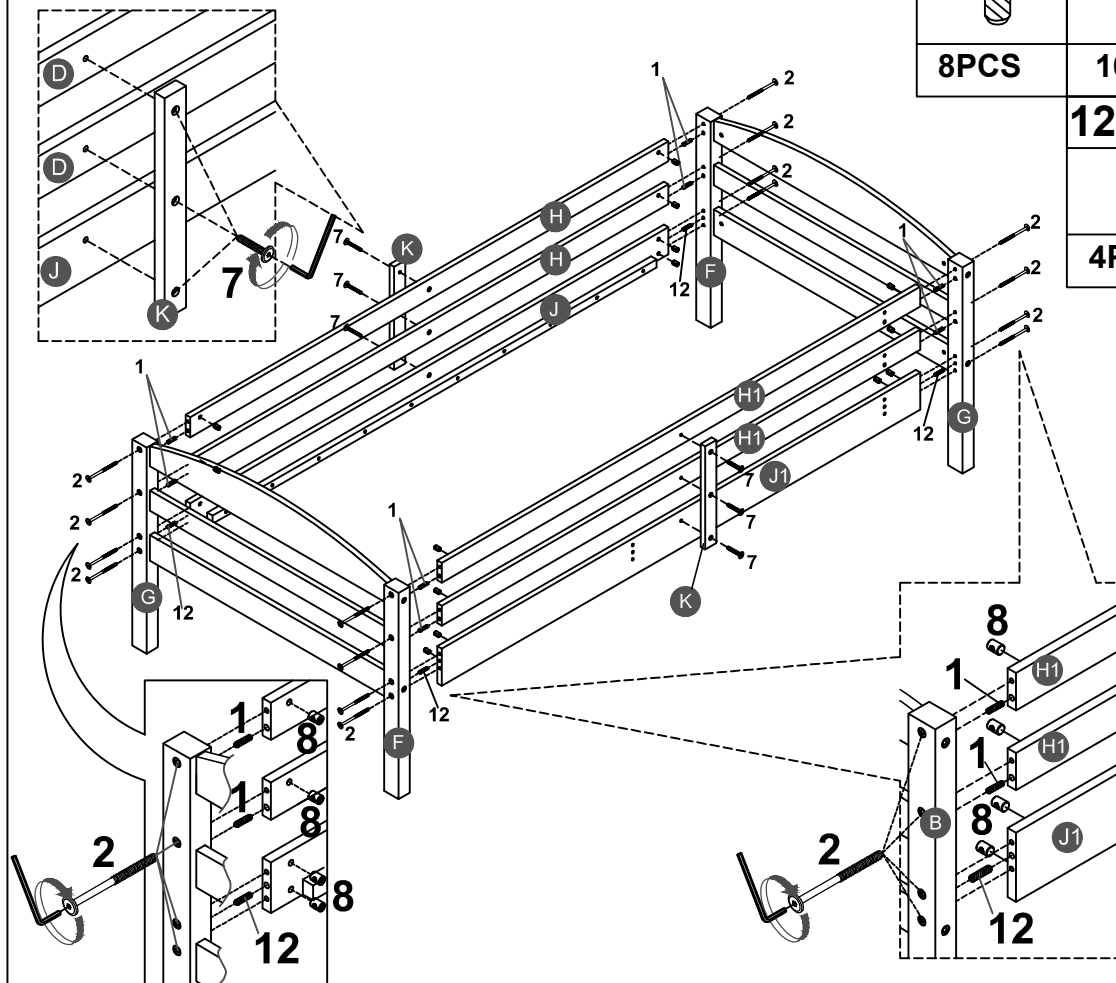

1		2		7	
8PCS		16PCS		6PCS	
12		8			
4PCS		16PCS			


STEP 5:

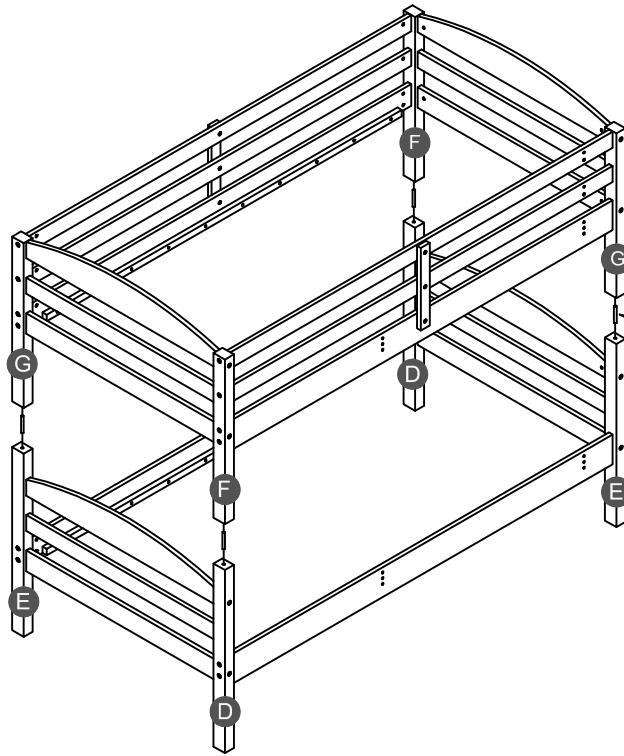


11



4PCS

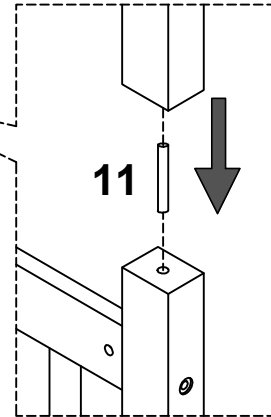


STEP 6:

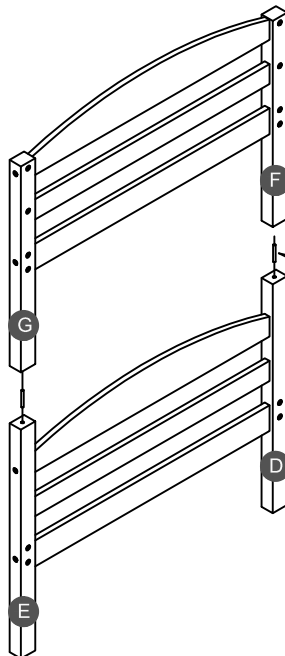


11




2PCS

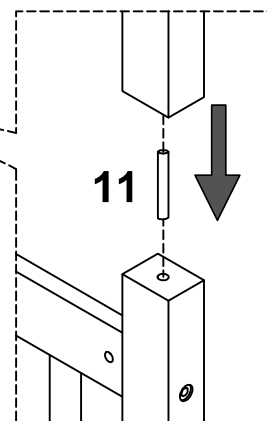


STEP 7:

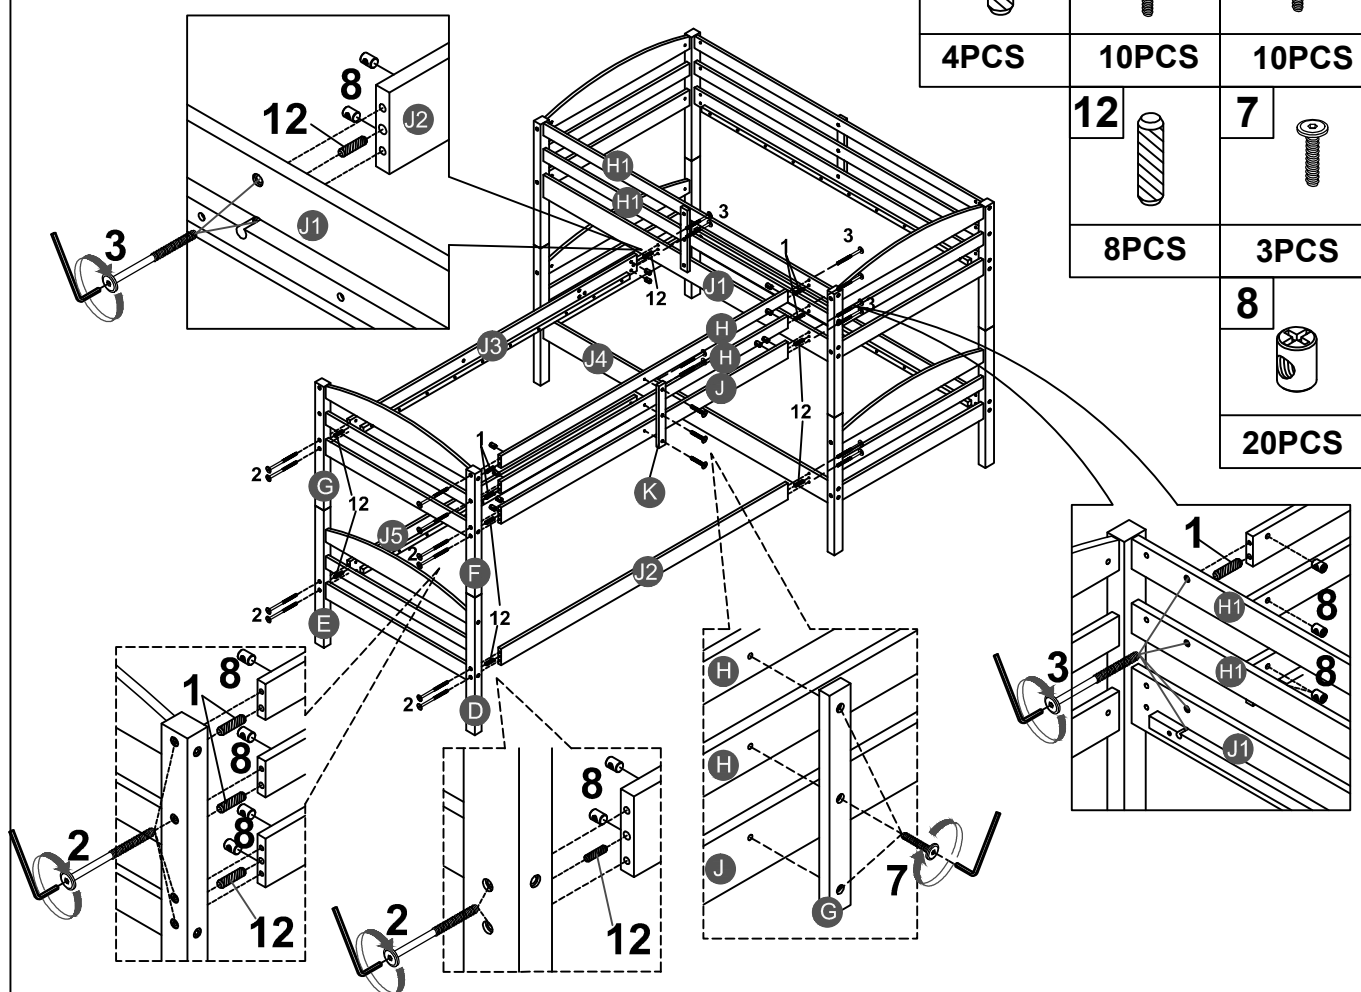

STEP 8:

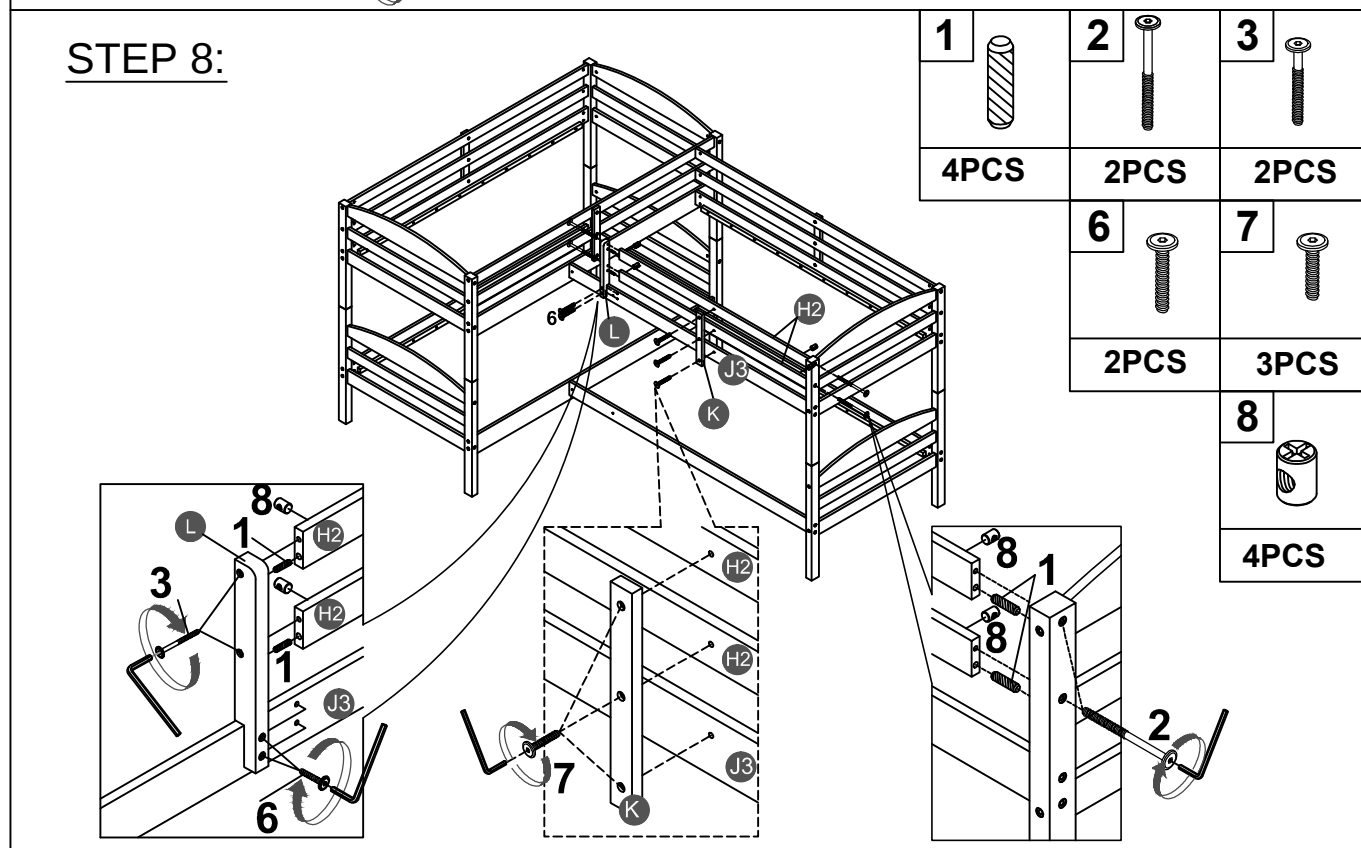

STEP 9:

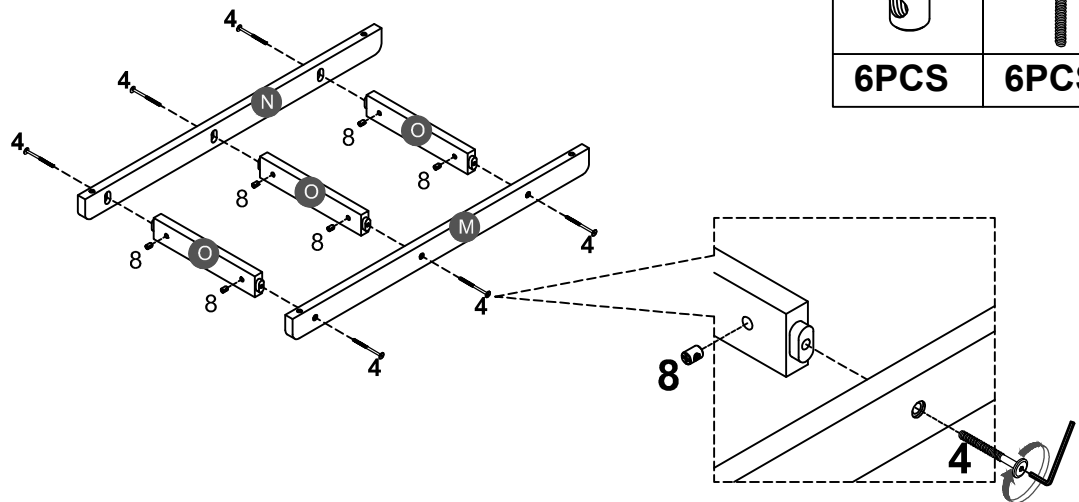

8




6PCS

4



6PCS

STEP 10:

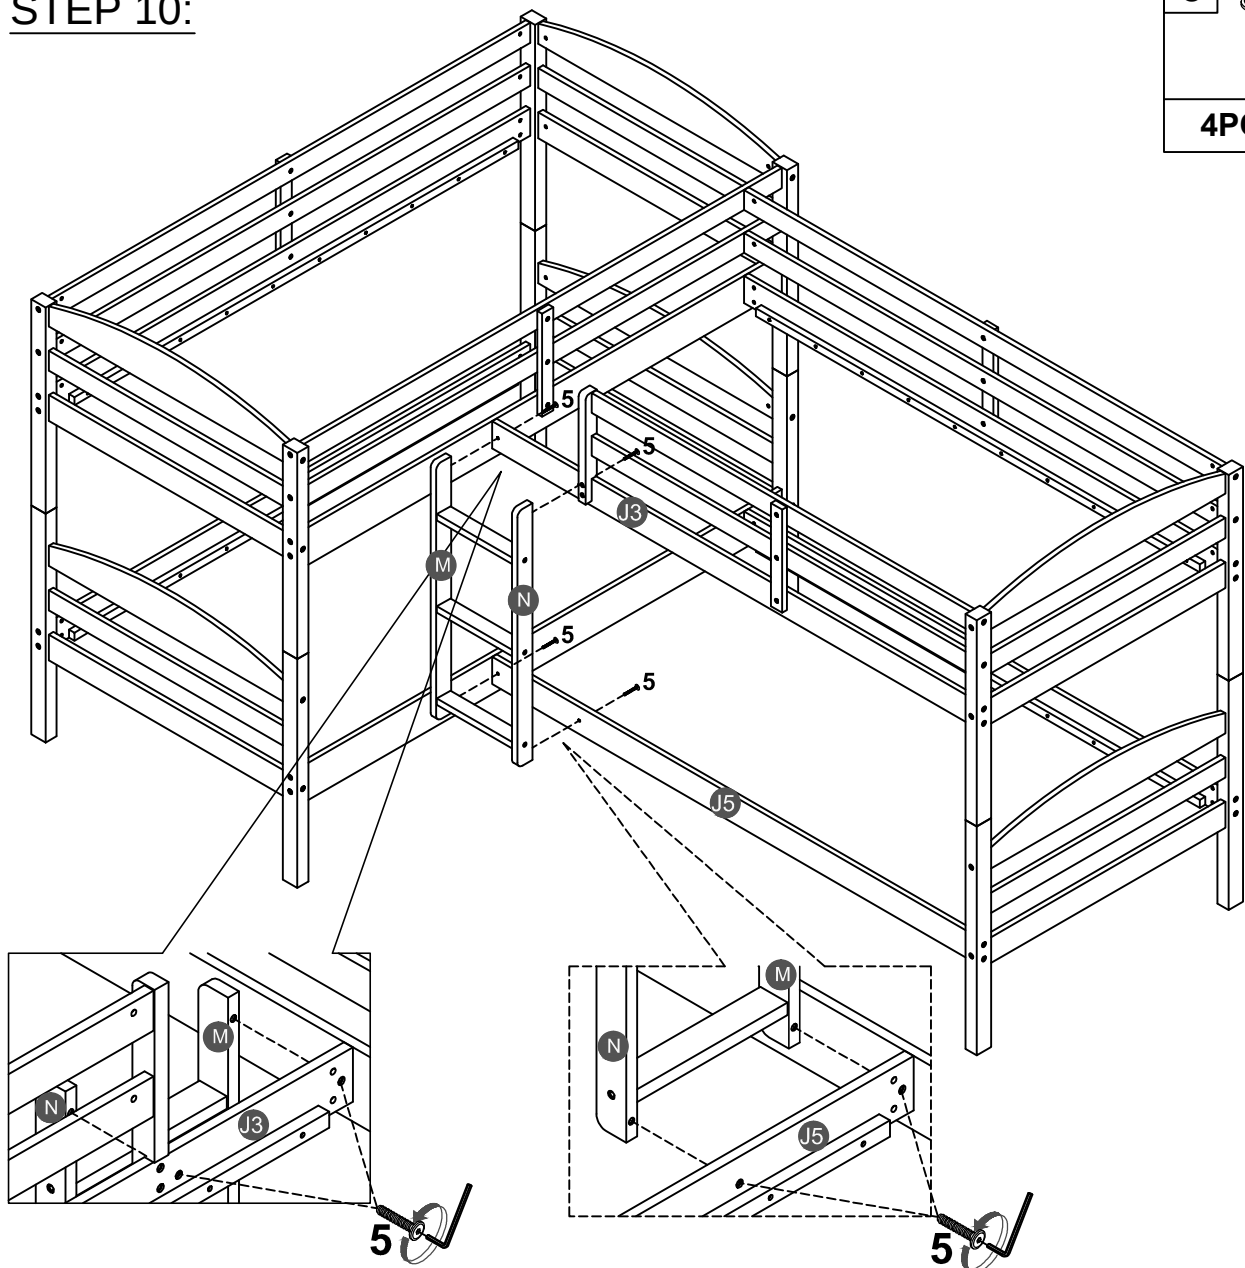

5





4PCS

STEP 11:

9



48PCS

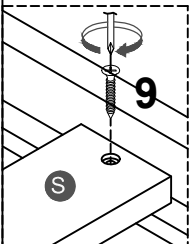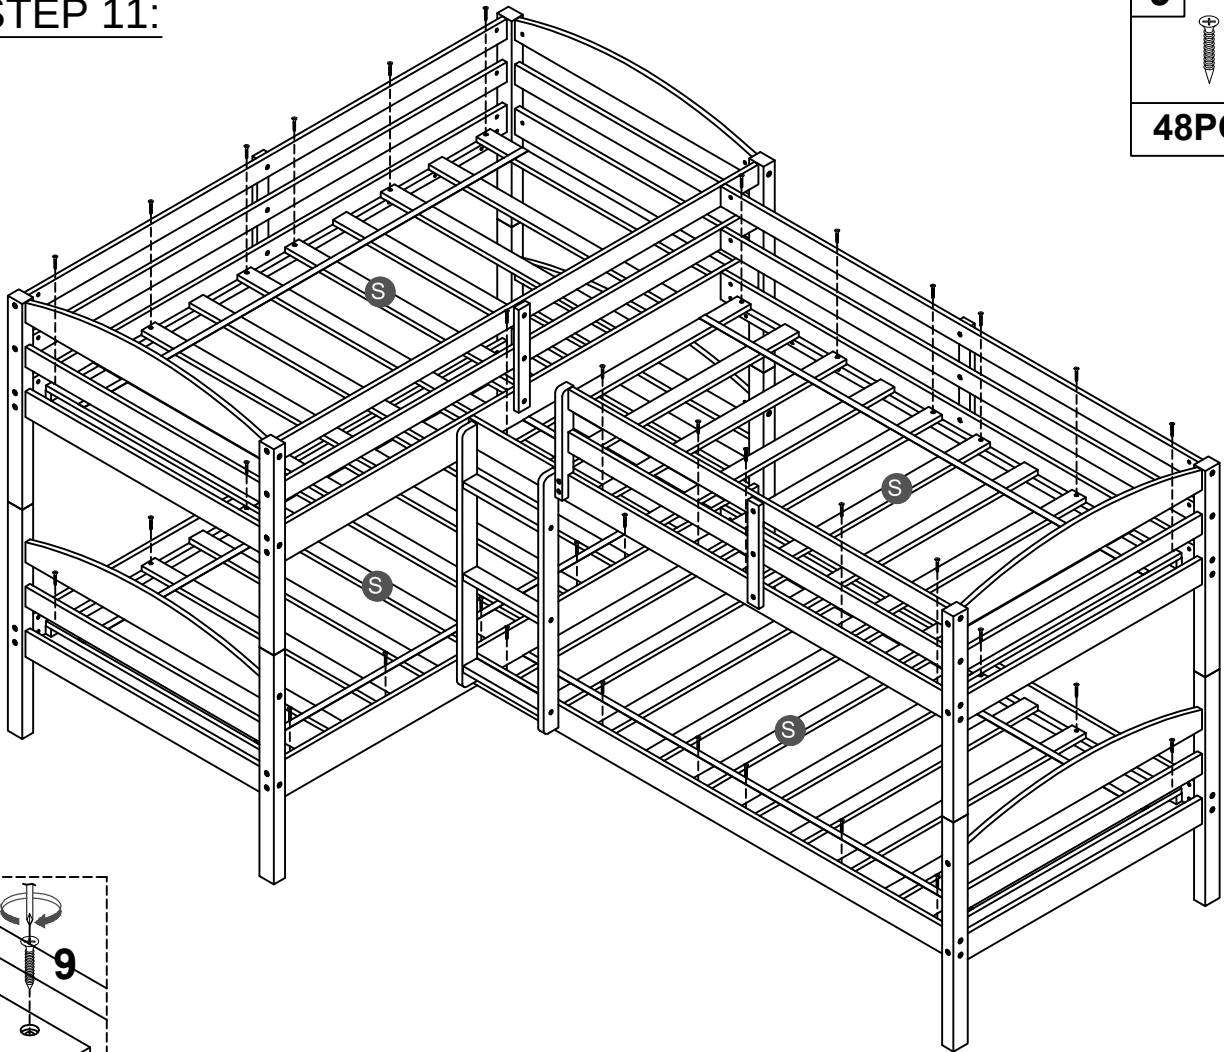

STEP 12:

13





4PCS


9



8PCS

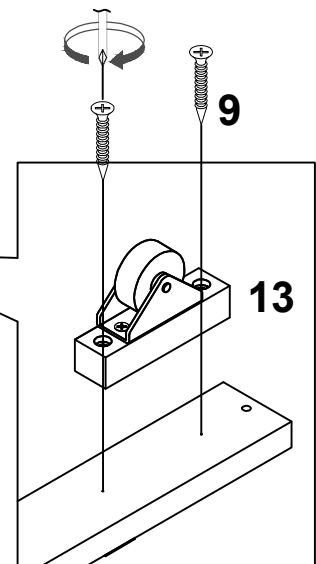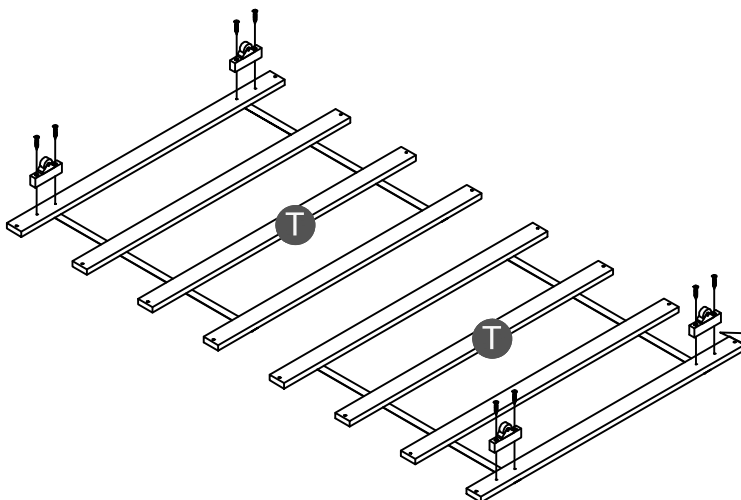


STEP 13:

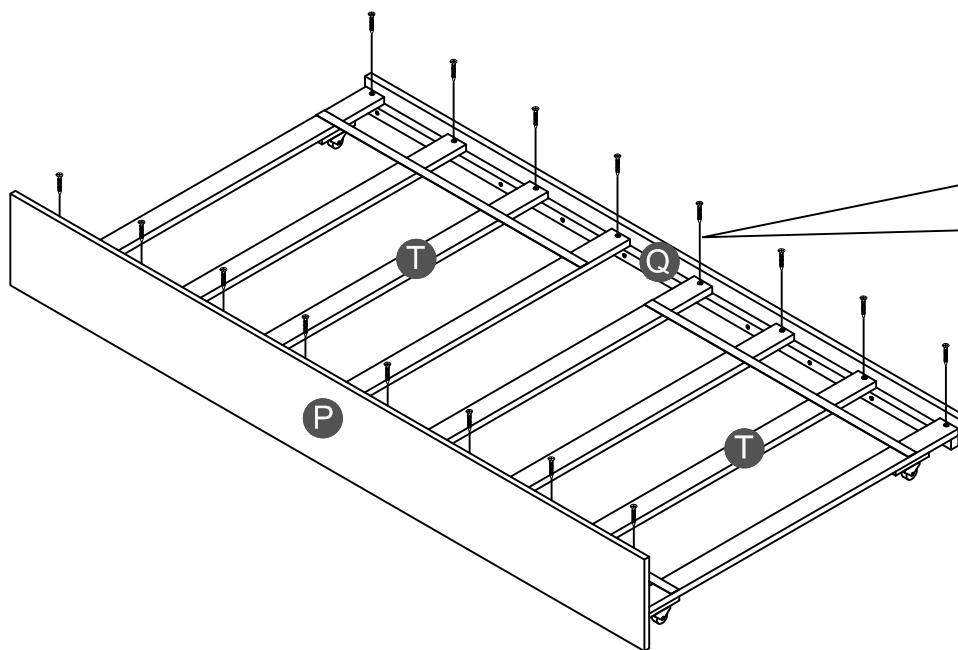


9



16PCS

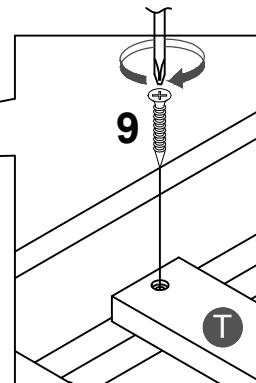

STEP 14:

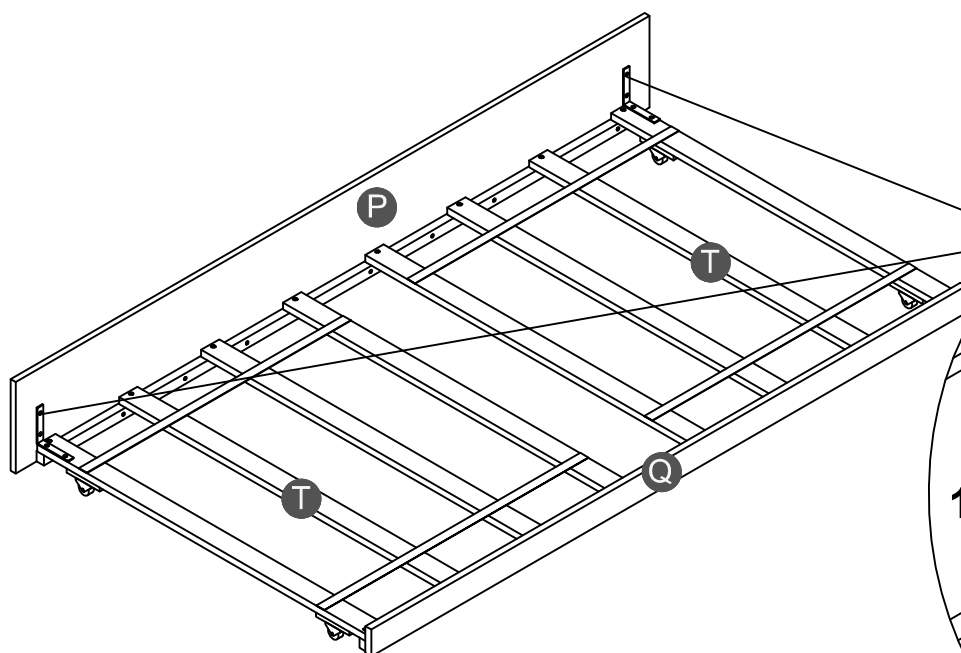

14




2PCS


15



8PCS

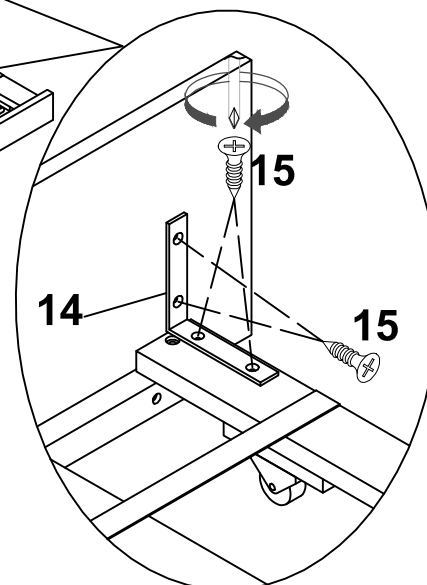


STEP 15:

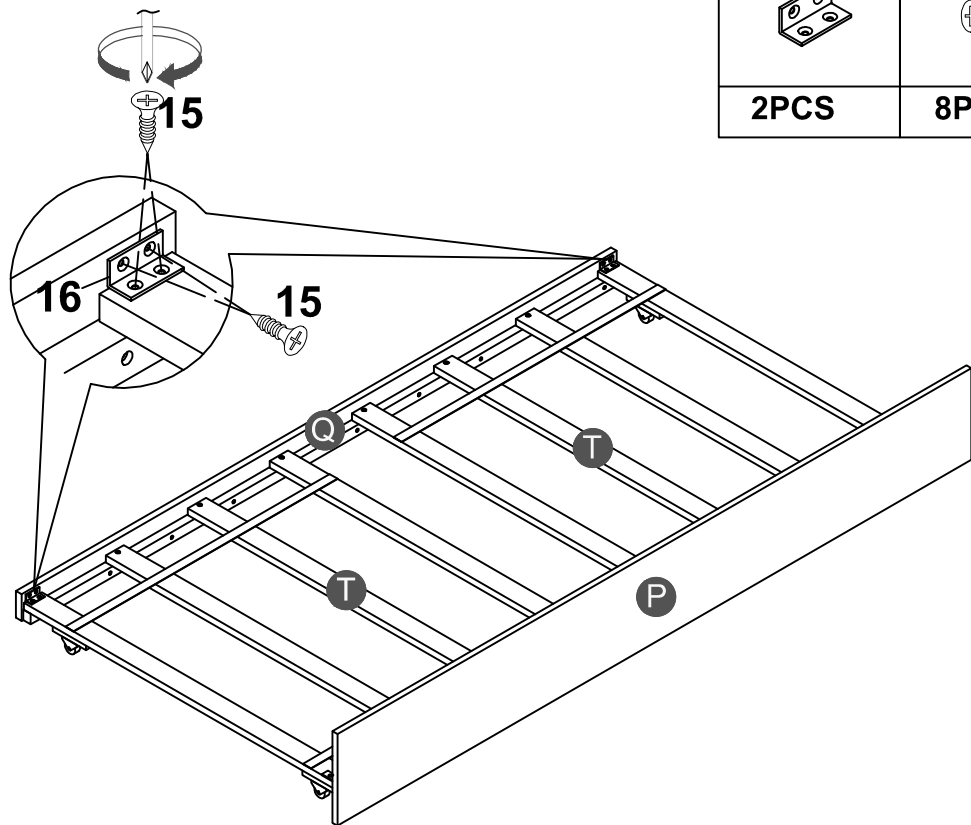

16	15
	
2PCS	8PCS

STEP 16:

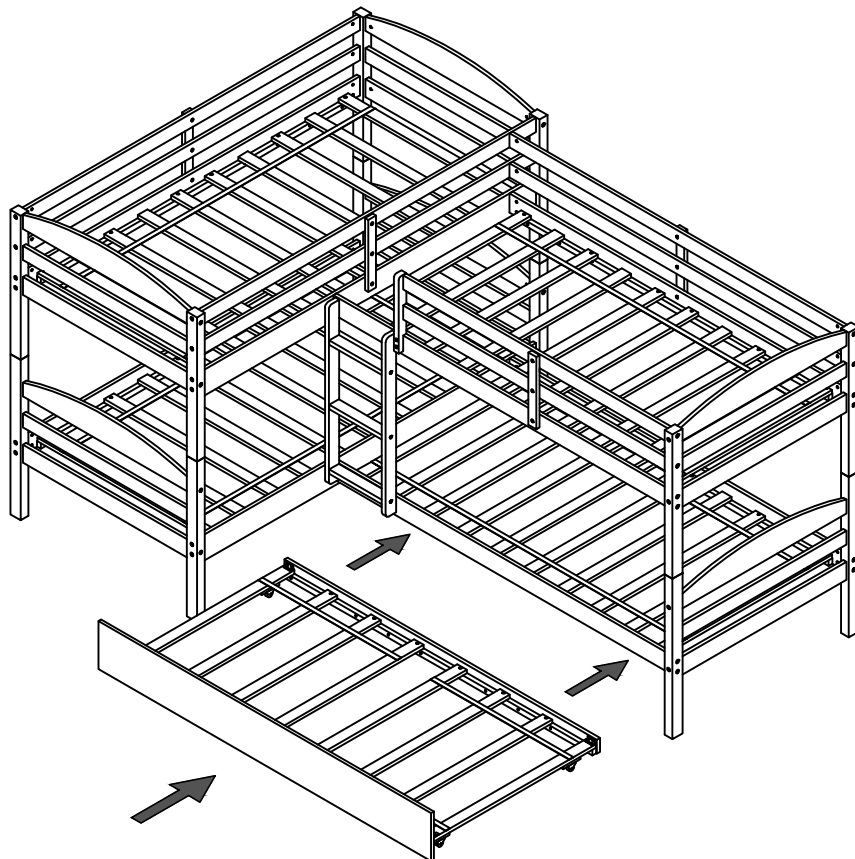

Push Trundle under the bottom of Bunkbed.