





F.00659

Colors: 328/353
21 LC

Read to access Assembly Video

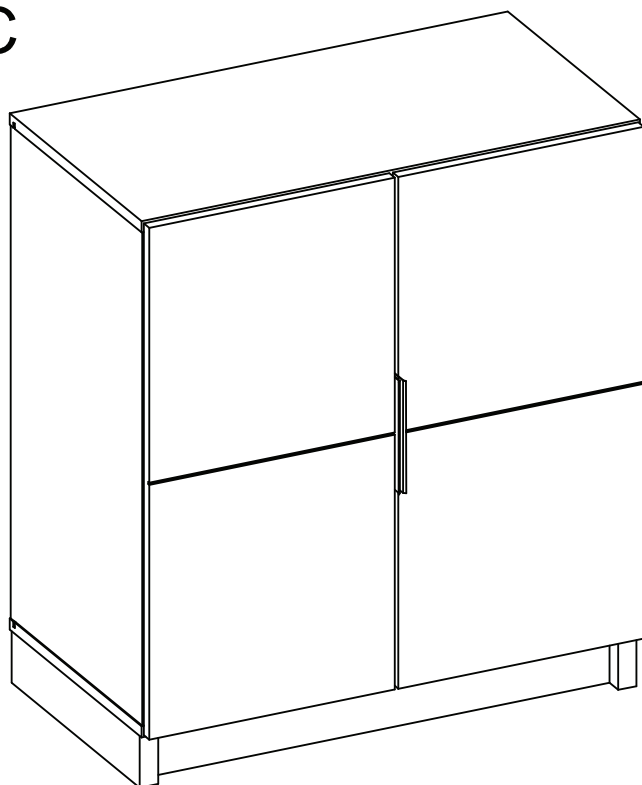


Dimensions

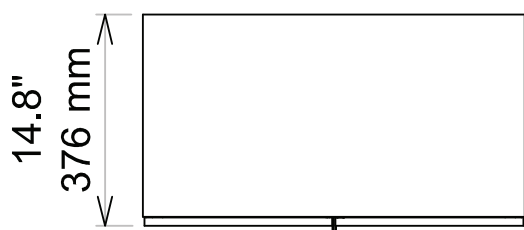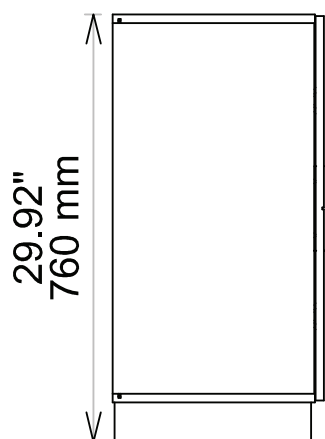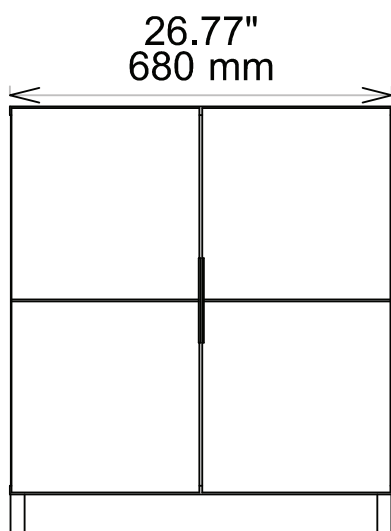

Assembly Instructions/

Introduction


- *Read the manual and follow the steps for the perfect assembly.
- *Prepare the environment before you start. Leave the room completely clean to start the assembly. Use the carton of the box as a protection layer to separate and protect the parts in order to avoid damages. Image 01.
- *Don't install it in areas that may be damp, with infiltrations.
- *Observe cuidadosamente el manual y siga estrictamente los pasos de montaje.

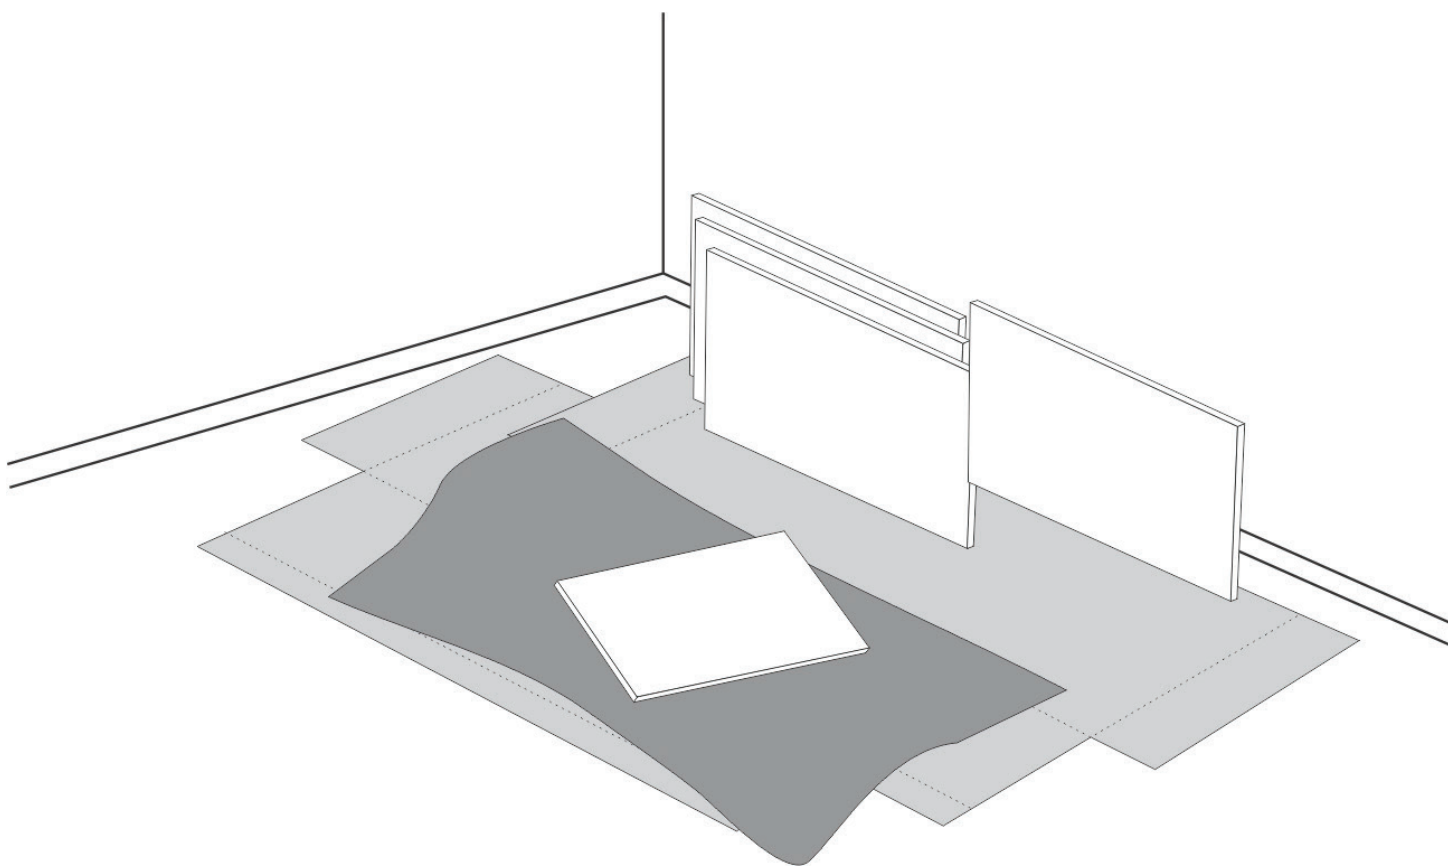


*Image 01 Separate the parts

* Before starting assembly, check all components.
parts list, separate accessories by type and
assemble the furniture lying down.




* The parts come with their code stamped on.

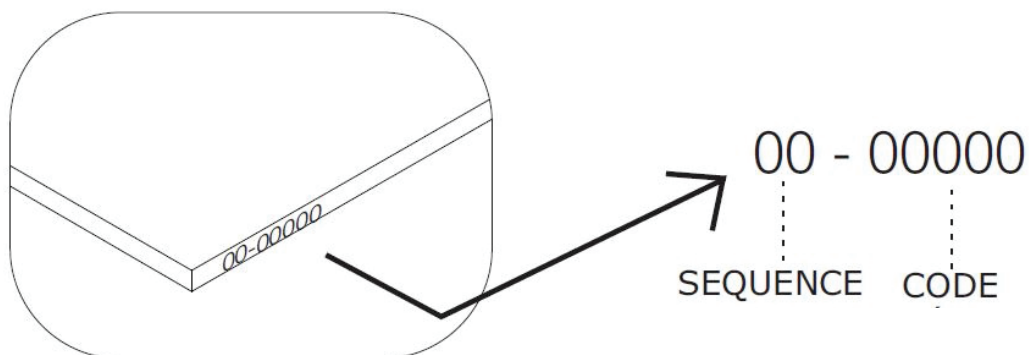

Tools

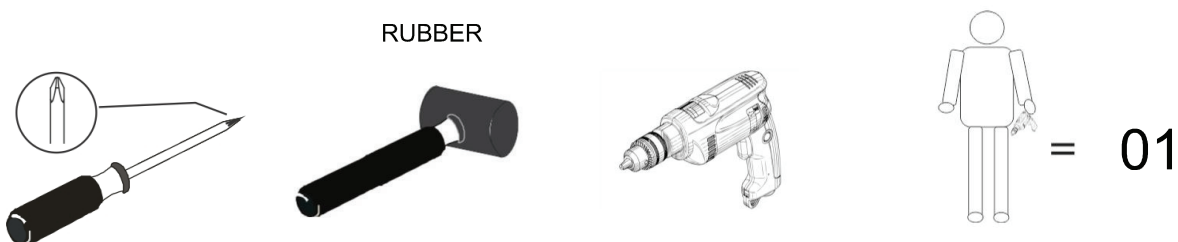


Hardwares

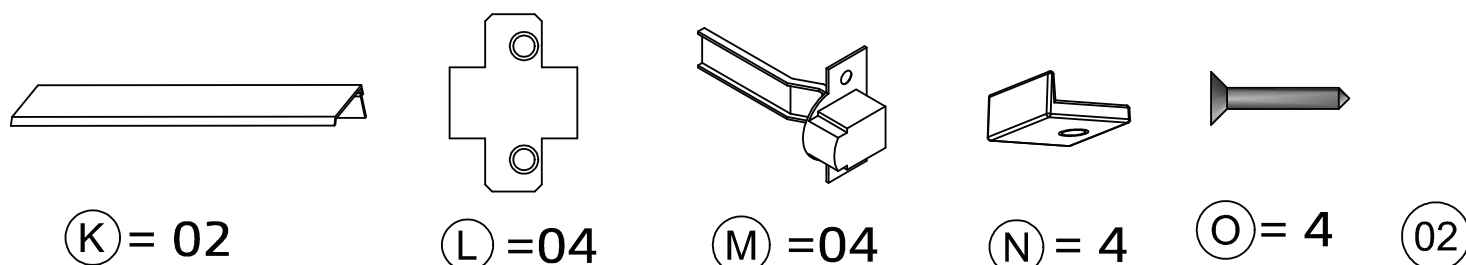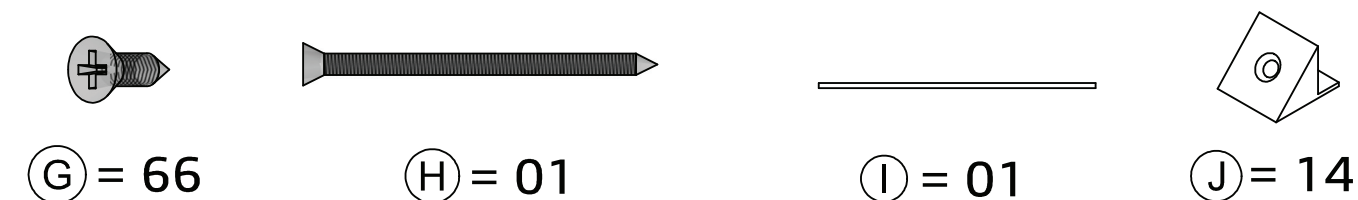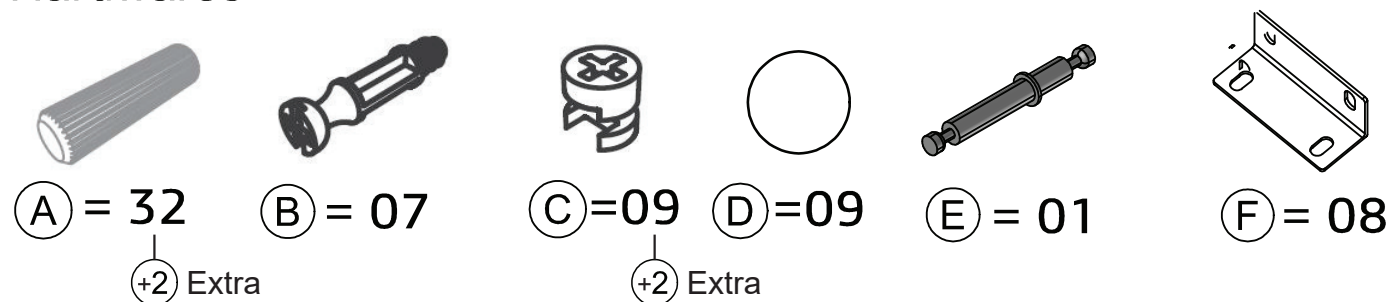


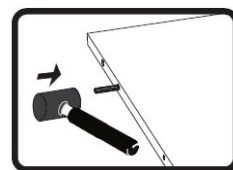
PARTS


SEQUENCE	CODE	DESCRIPTION	QTY
01	90084	BACK/FRONT SKIRTING	2
02	90085	LEFT/RIGHT SKIRTING	2
03	90088	BASE	1
04	90091	TOP	1
05	90092	BACKGROUND	2
06	90096	LEFT/RIGHT SIDE	2
07	90098	DIVISION	1
08	90099	SHELF	2
09	90102	DOORS	2


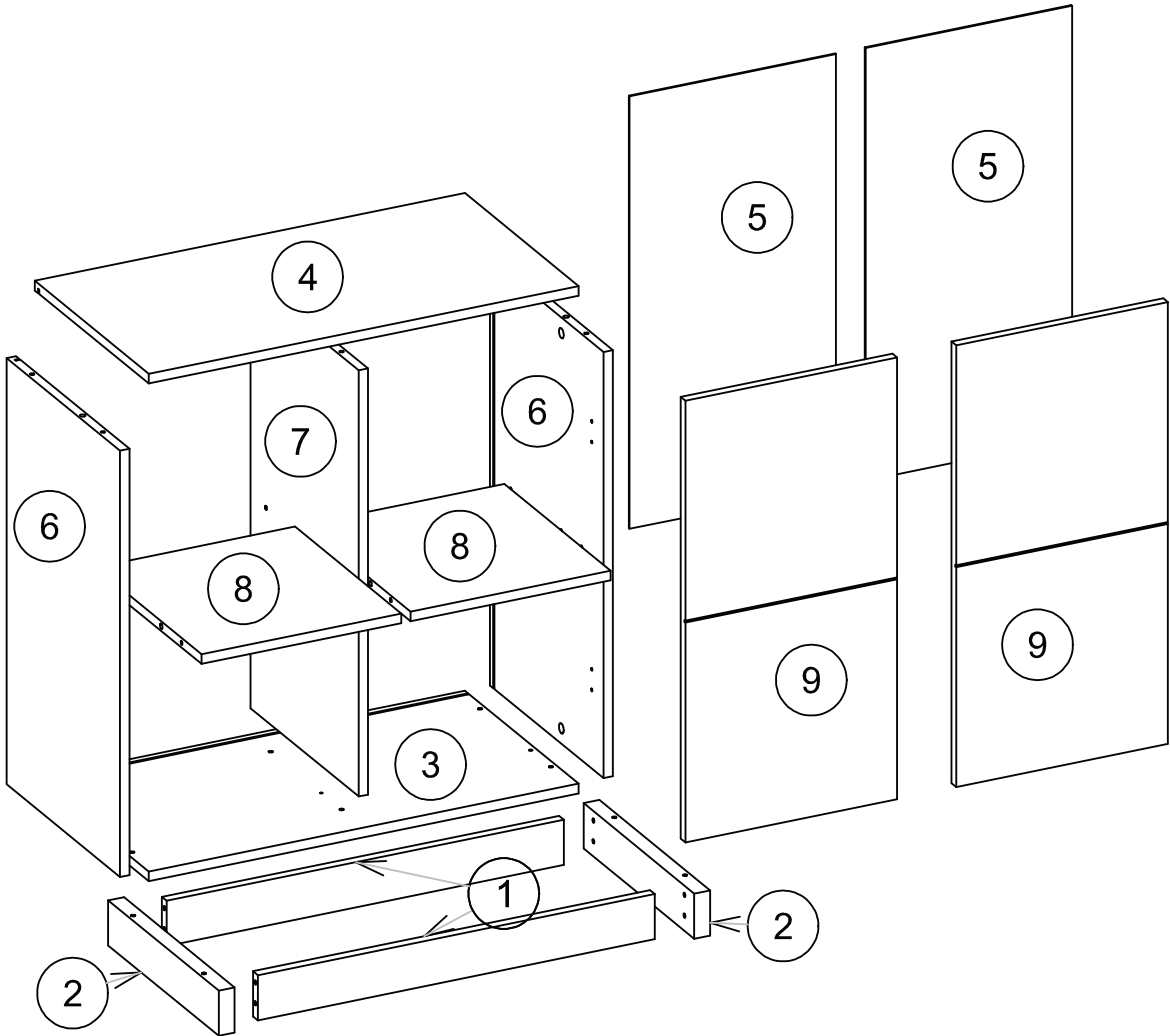



* Before starting, you have to know:


() You should always fix the dowel until the end using a rubber hammer.



() You must screw this hardware using an electric drilling machine or phillips screwdriver only in the 0,196 inches hole (the smaller hole.


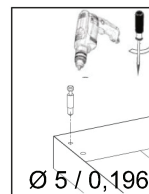



() Always fix this hardware with the arrow faced to the hole.

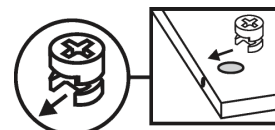



STEP01

* Insert hardware "A" on the extremities of the parts 06, "B", "C", "G" and "L" on the face.

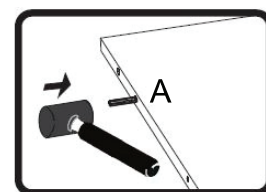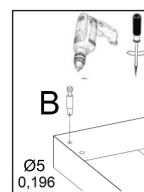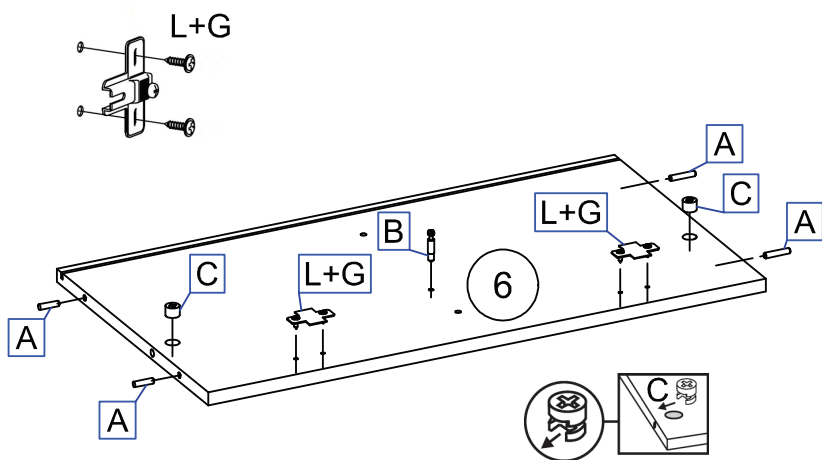



STEP02

* Insert hardware "A" on the extremities of the parts 02.

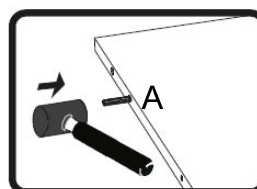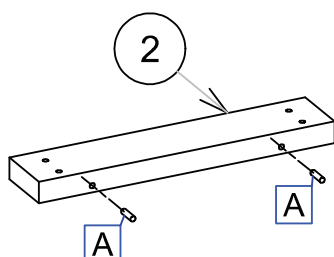



STEP 03

* Insert hardware "B" on the face of the part 04.

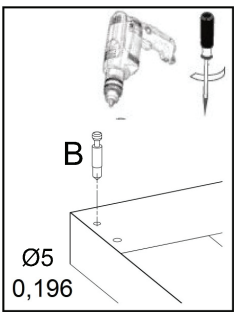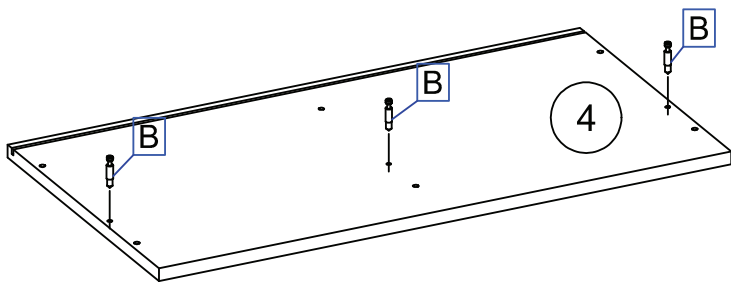




STEP 04

* Insert hardware "B" on the face of the part 03.

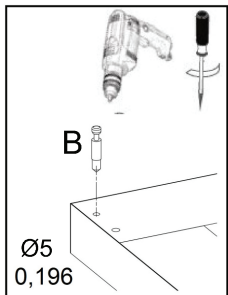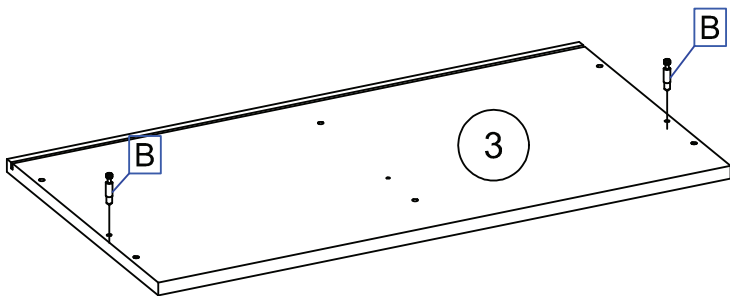



STEP 05

* Insert hardware "A" on the extremities of the part 08 and "C" on the face.

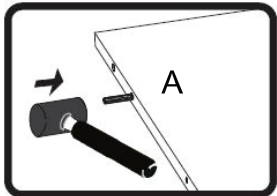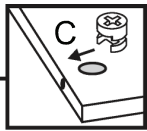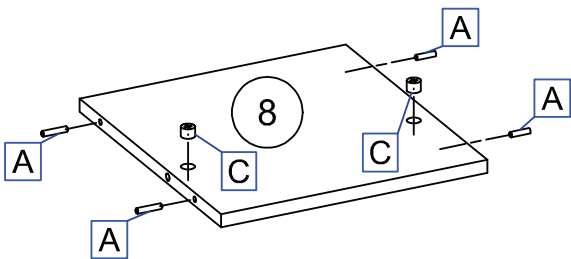



STEP 06

* Insert hardware "A" on the extremities of the parts 01.

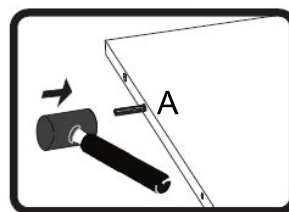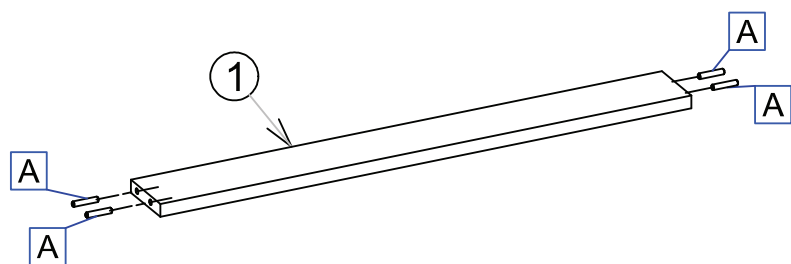



STEP 07

* Insert hardware "A" on the extremities of the part 07, "C" and "E" on the face.

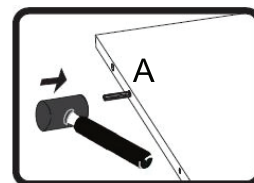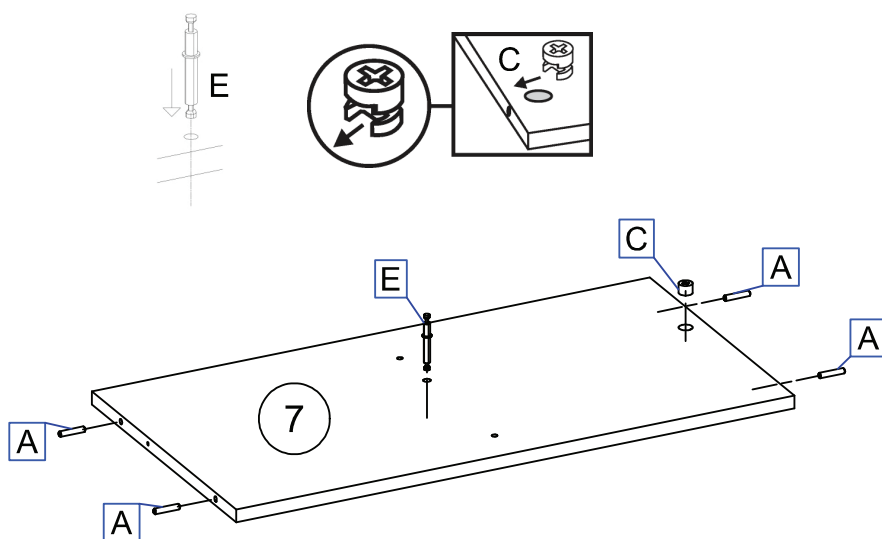



STEP 08

* Insert hardware "K" and "M" on the face of the parts 09 and screw "G".

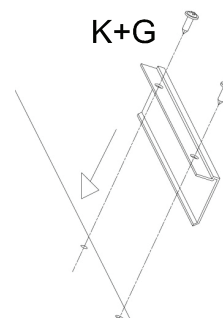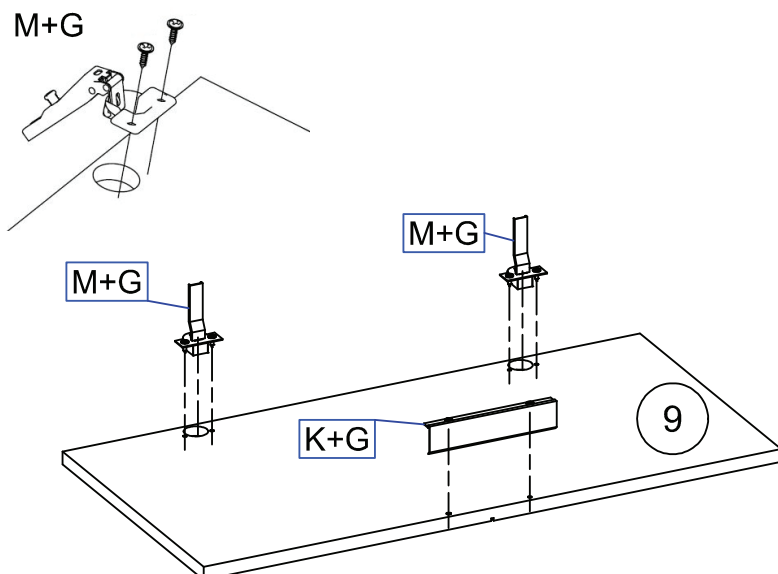



STEP 09

* Attach parts 01 to the part 02 according to the image. Then screw the "G" in the angle connector "F".

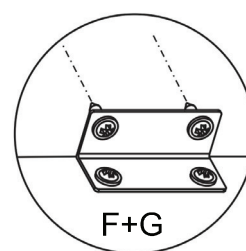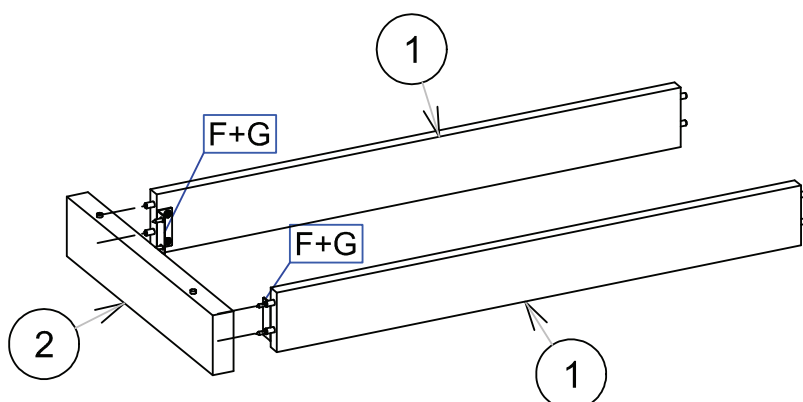



STEP 10

* Attach part 02 to the parts 01 according to the image. Then screw the "G" in the angle connector "F".

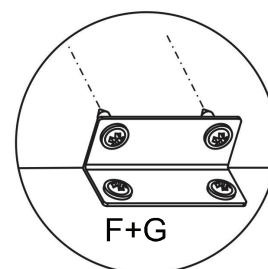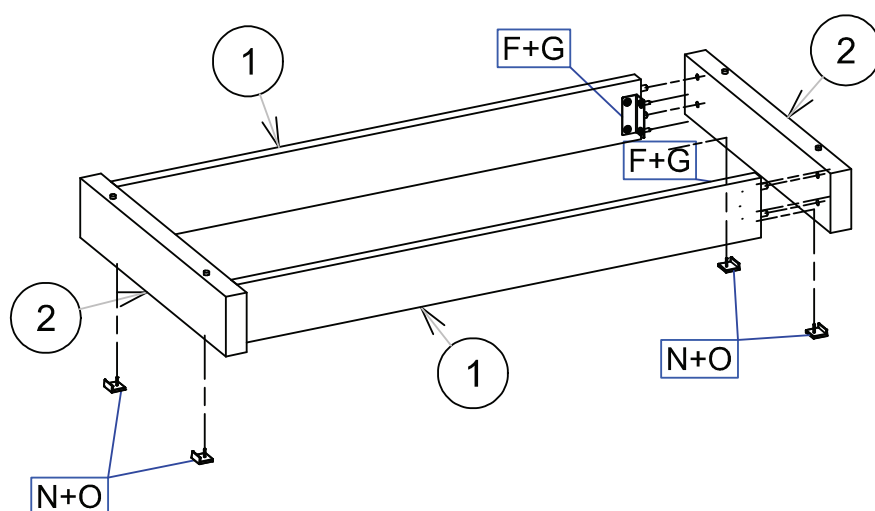



STEP 11

* Attach part 03 to the parts 01 and 02 according to the image. Then screw the "G" in the angle connector "F".

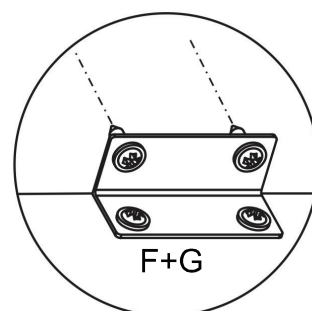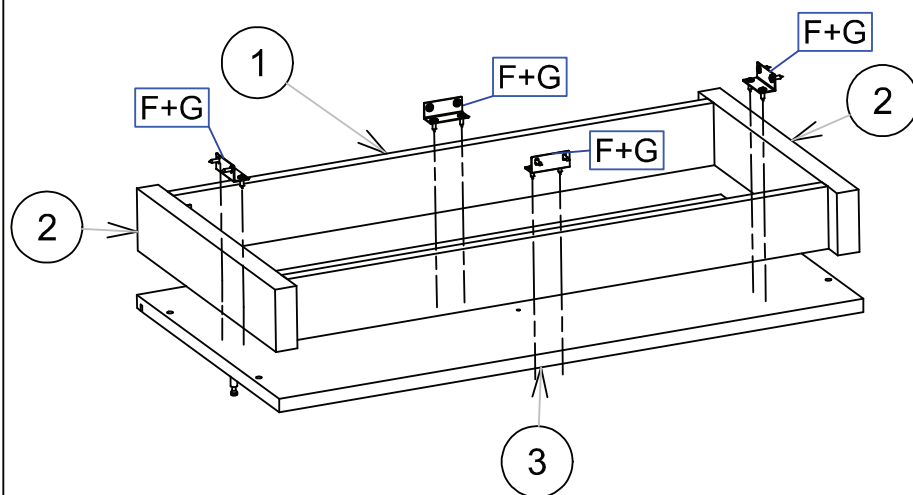



STEP 12

* Attach part 08 to the part 06 according to the image. Then screw the nuts "C" and finish with cover caps "D".

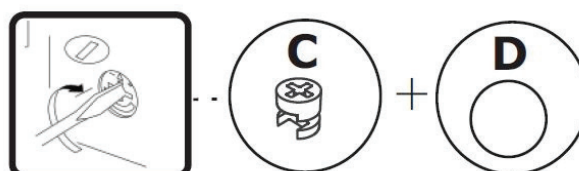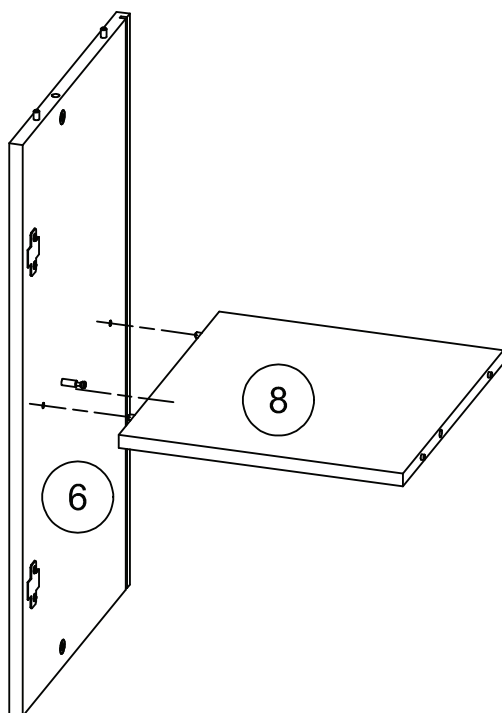



STEP 13

* Attach part 07 to the part 08 according to the image. Then screw the nuts "C" and finish with cover taps "D".

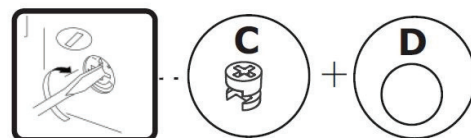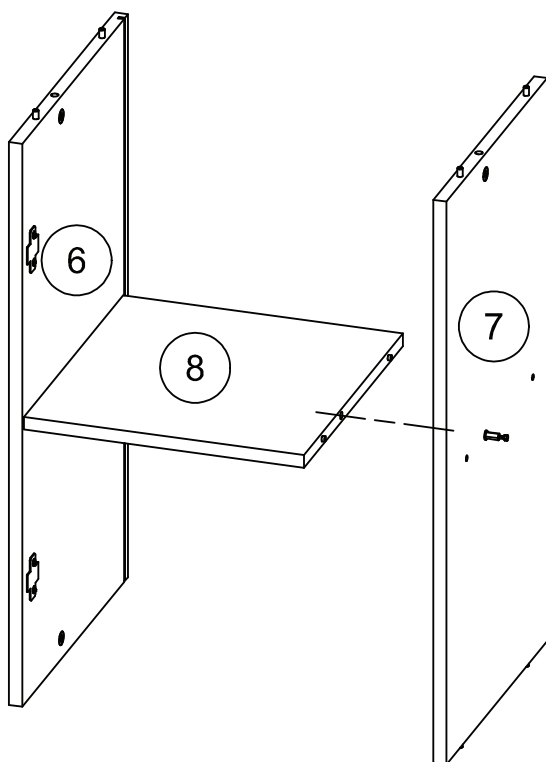


STEP 14

* Attach part 08 to the part 07 according to the image. Then screw the nuts "C" and finish with cover taps "D".

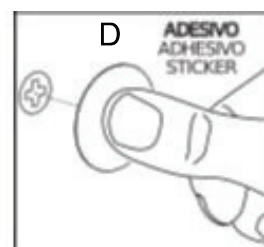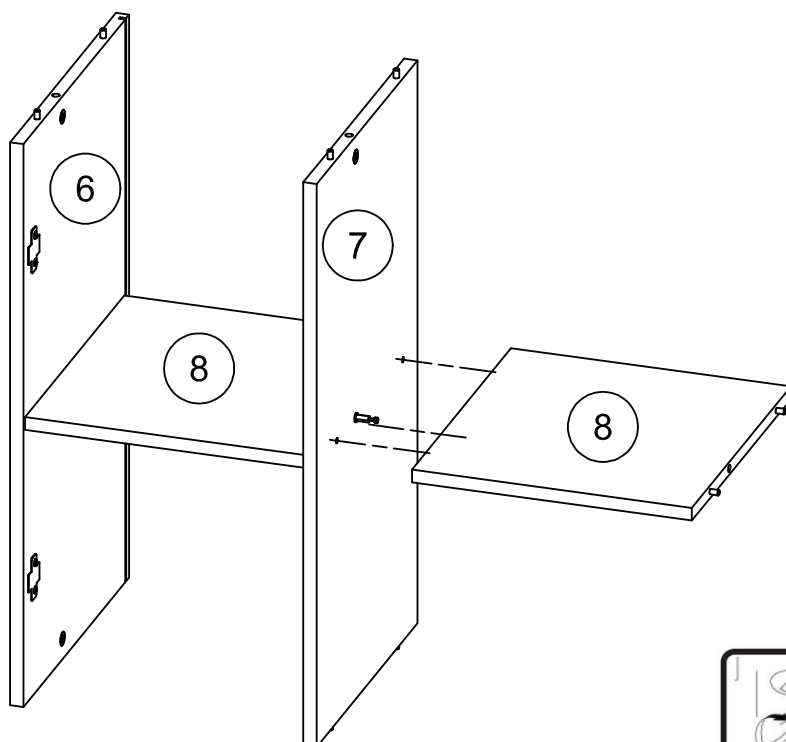


STEP 15

* Attach part 06 to the part 08 according to the image. Then screw the nuts "C" and finish with cover taps "D".

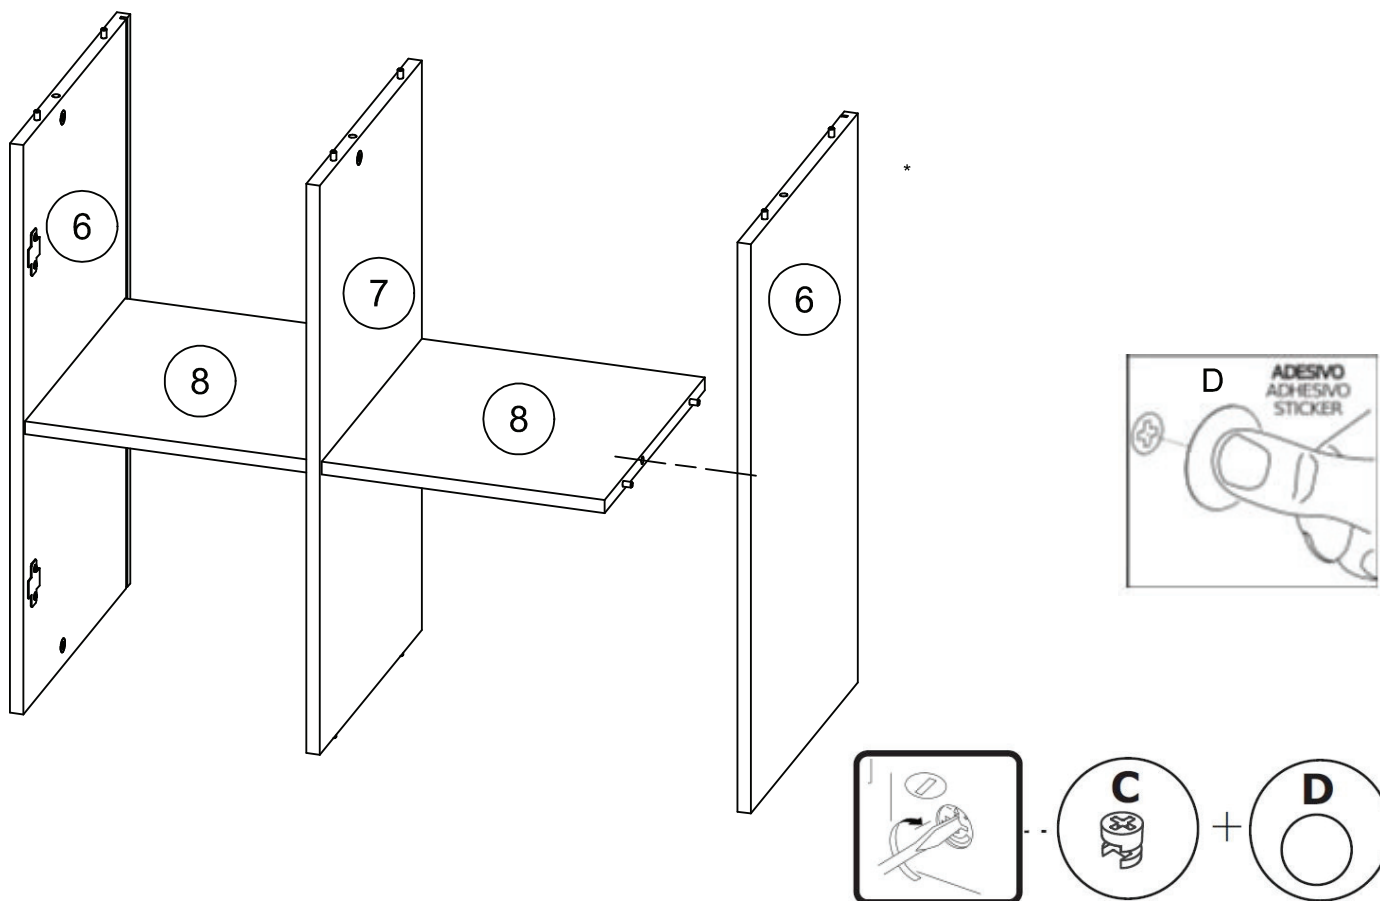



STEP 16

* Attach the parts 06 and 07 to the part 03 according to the image. Then screw "H" and the nuts "C" and finish with cover taps "D".

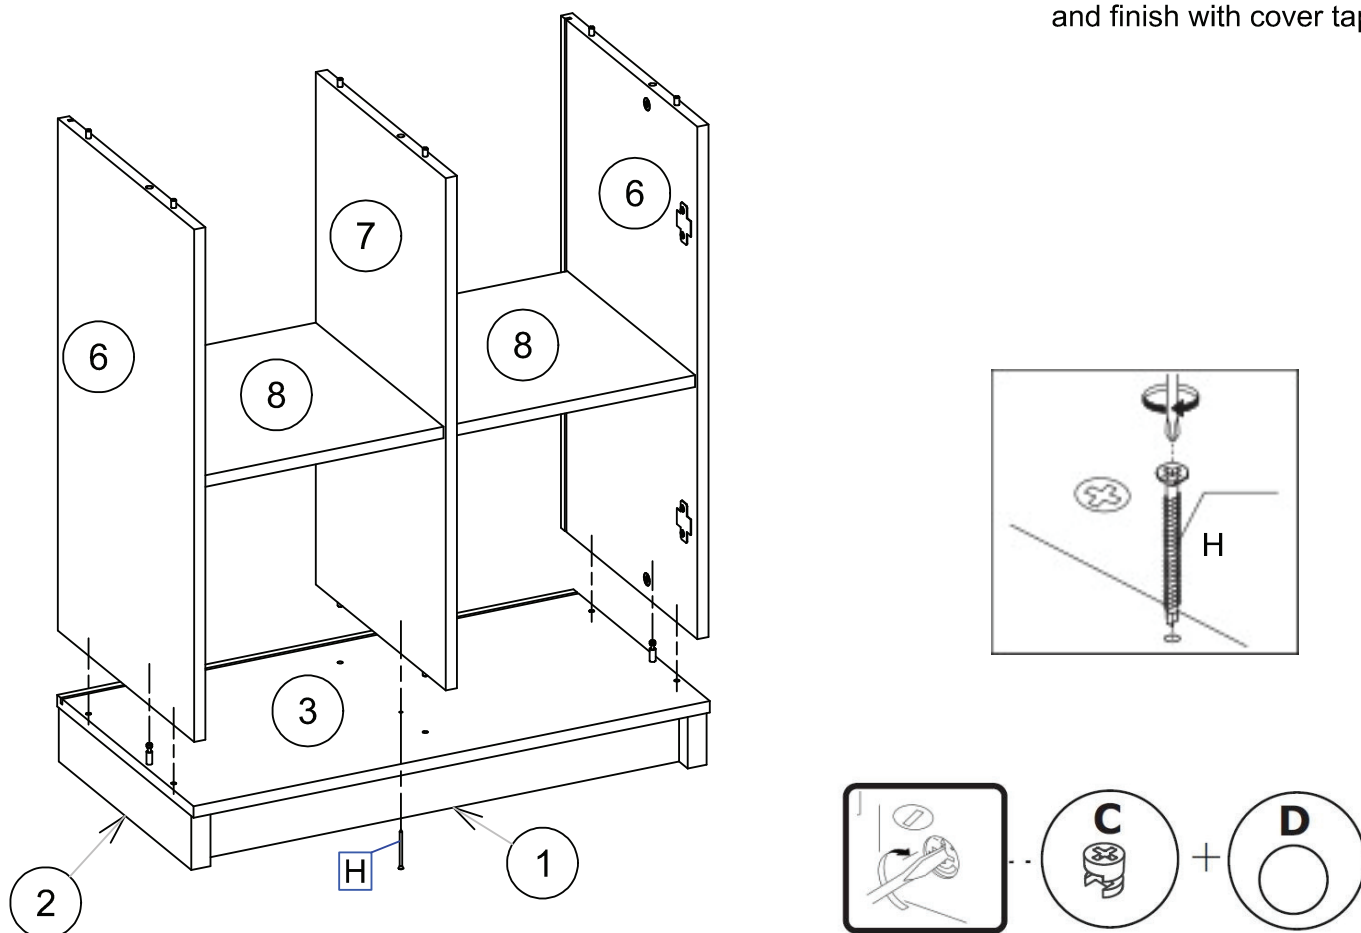




STEP 17

* Insert the parts 05 to the rail according to the image. Use the "I" to join the 05.

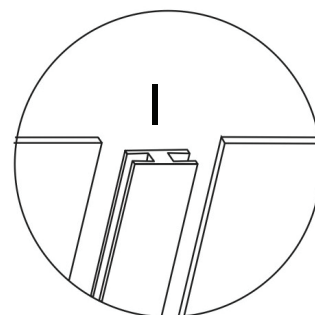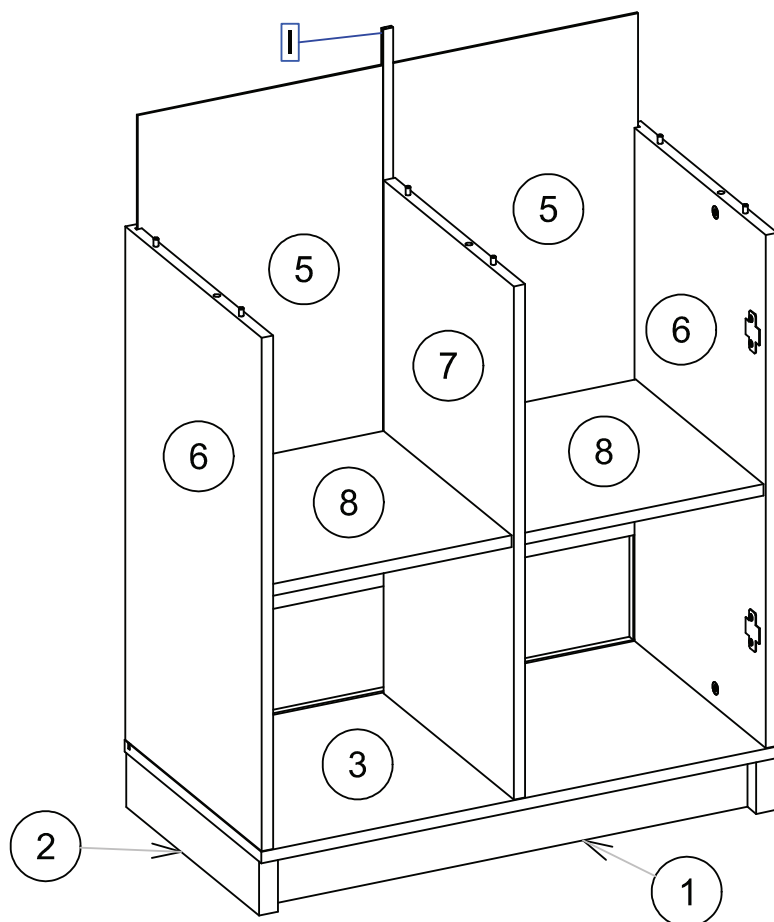



STEP 18

* Attach part 04 to the parts 06 and 07 according to the image. Then screw the nuts "C" and finish with cover taps "D".

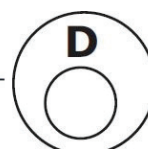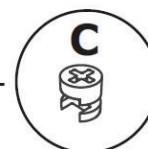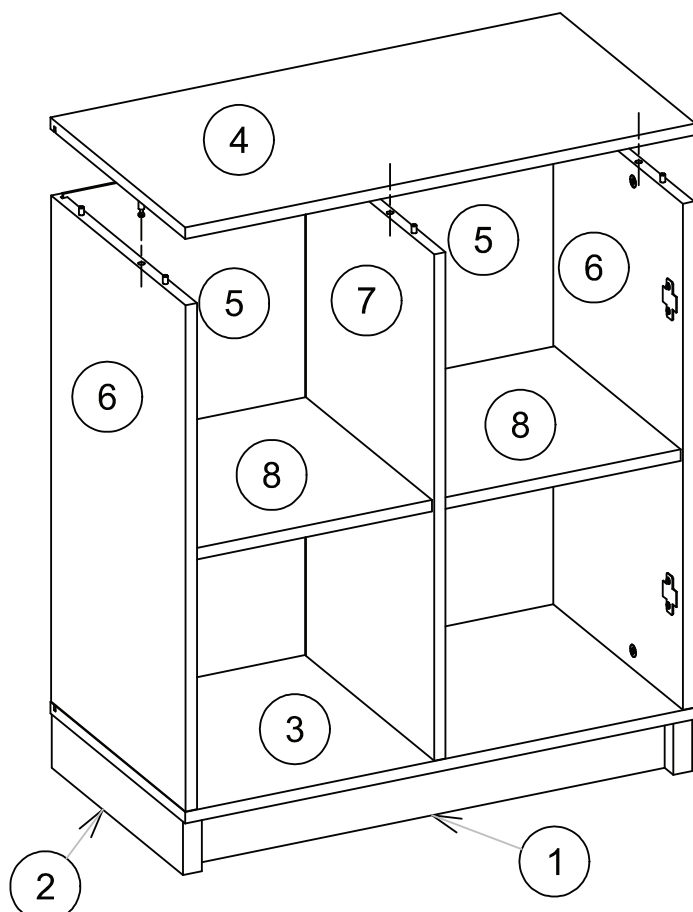



STEP 19

* Attach parts 09 to the parts 06 through the join of the hardware "L" and "M" according to the image.

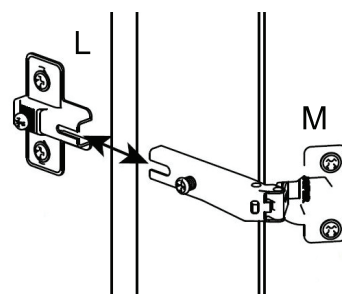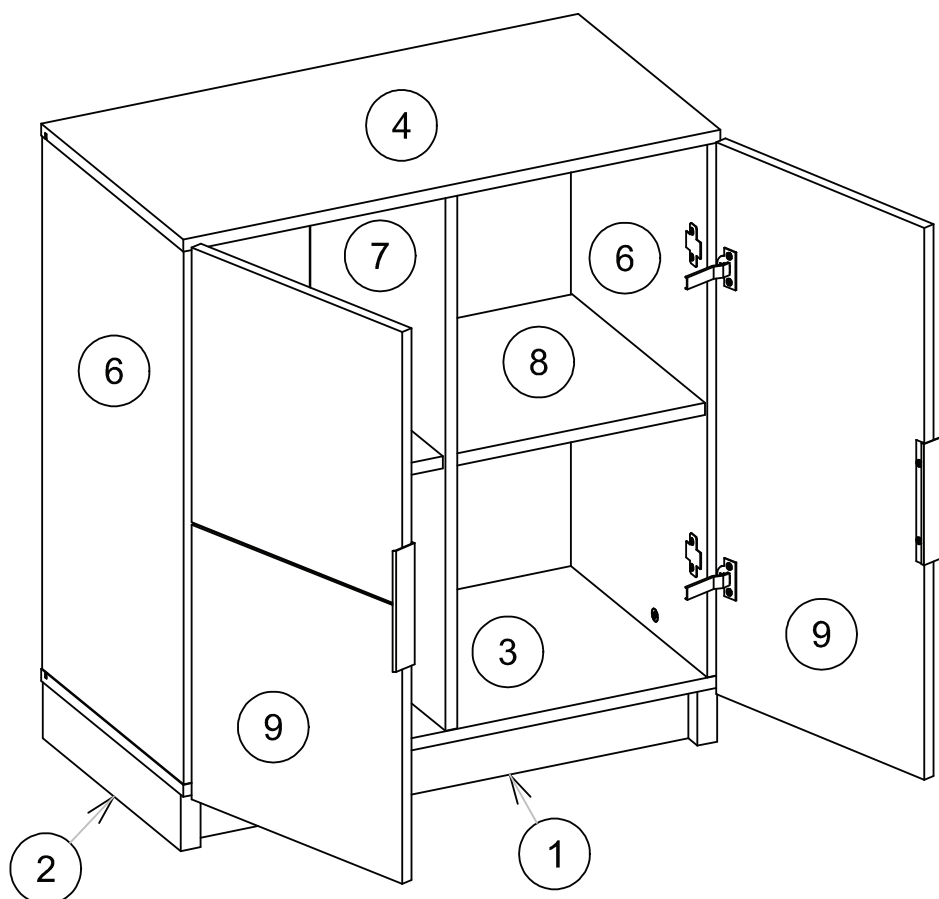

STEP 20


* Insert hardware "J" and "G" on the face of the parts 05 according to the image.

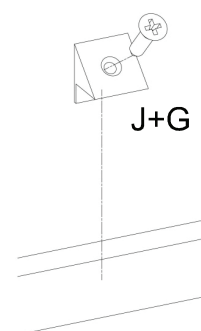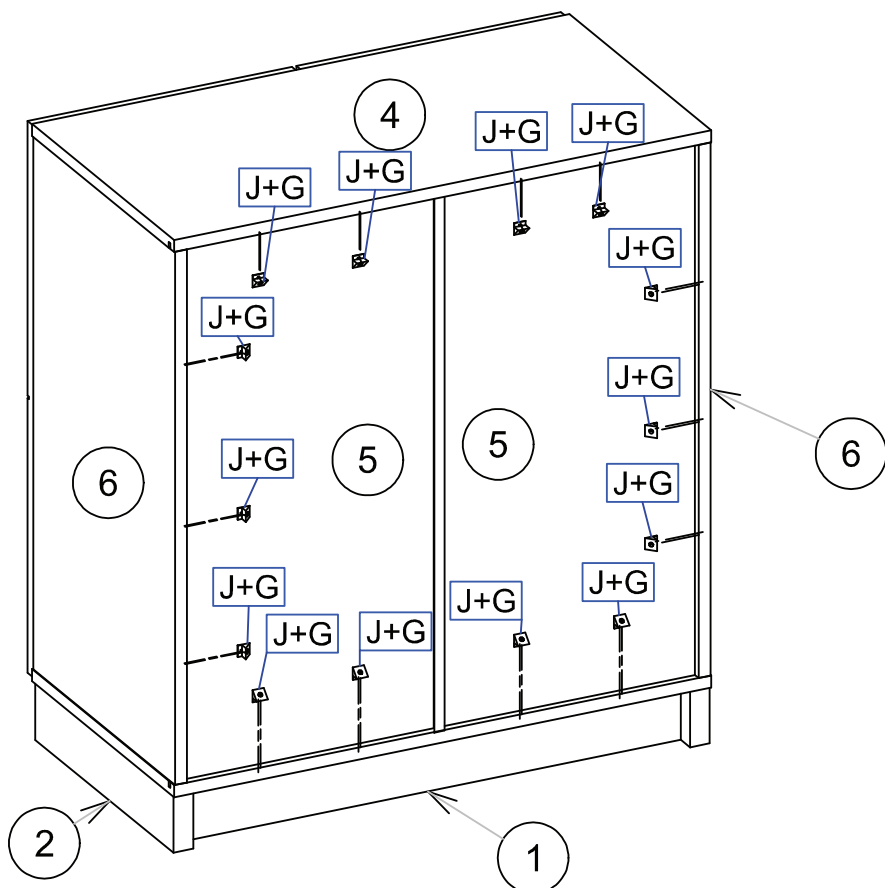


STEP 21

Warning (tipover sistem)


* Attach the hardware Z1 using screw Z2 in the part 08. Then, drill the wall to press the wall plug Z3 in the hole, and screw Z4 to fix the mobile to the wall.

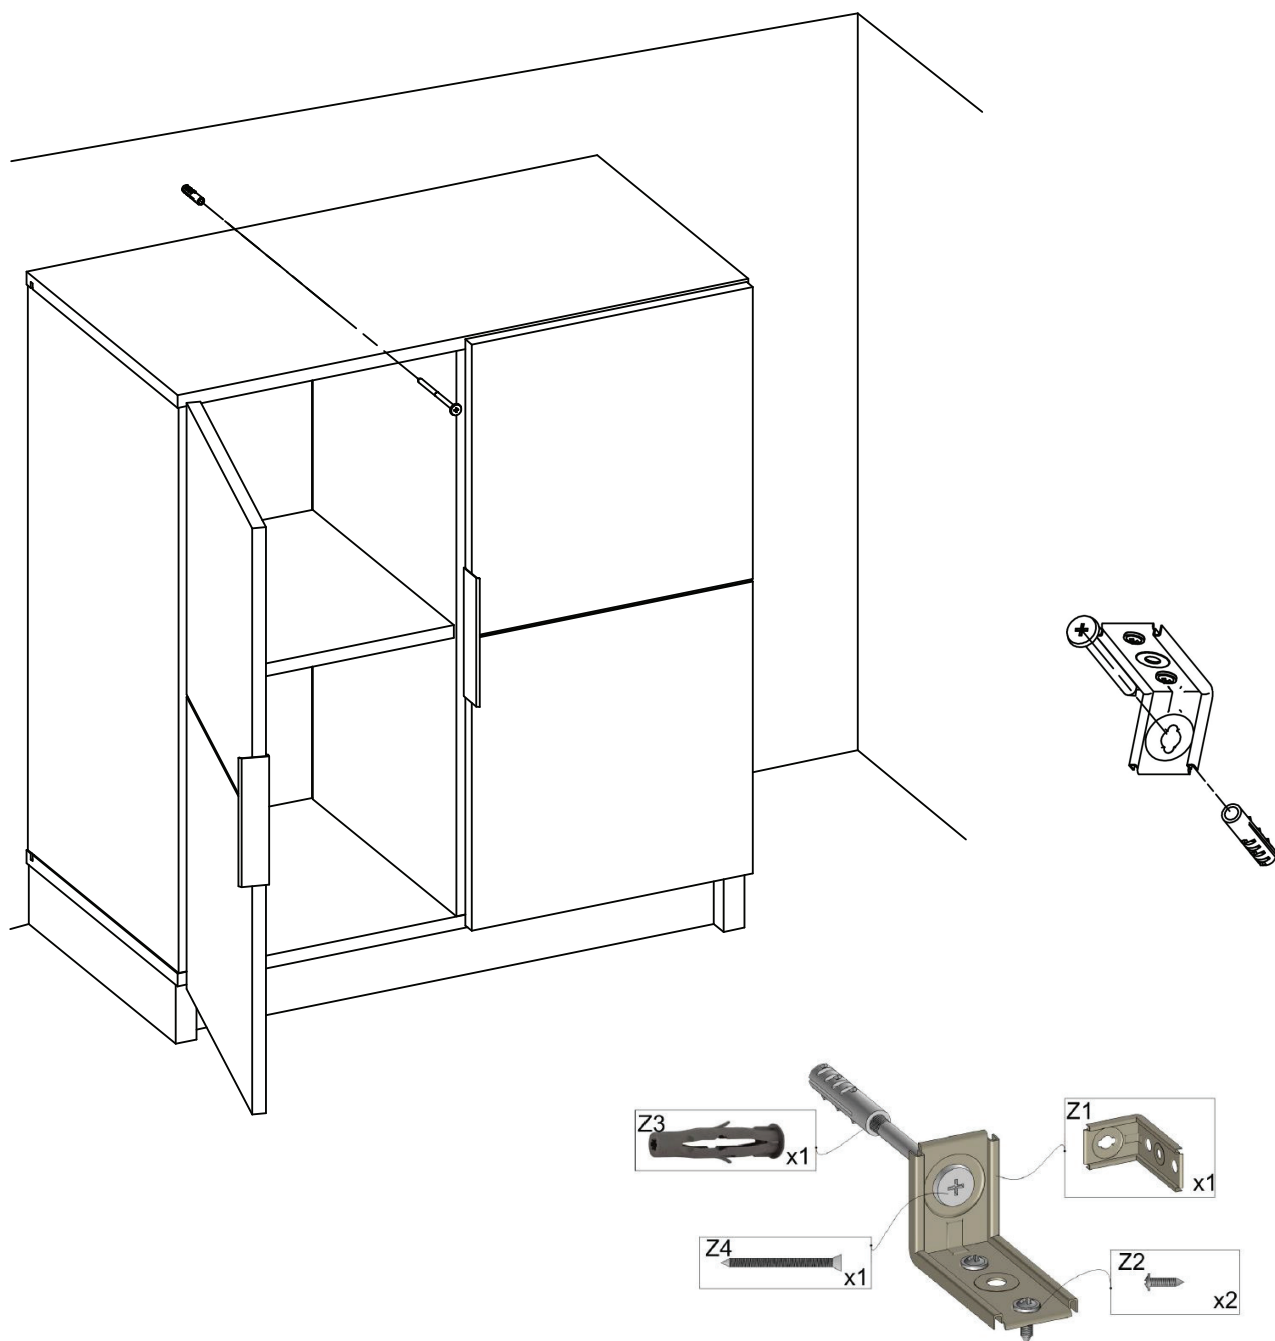

FINAL VIEW

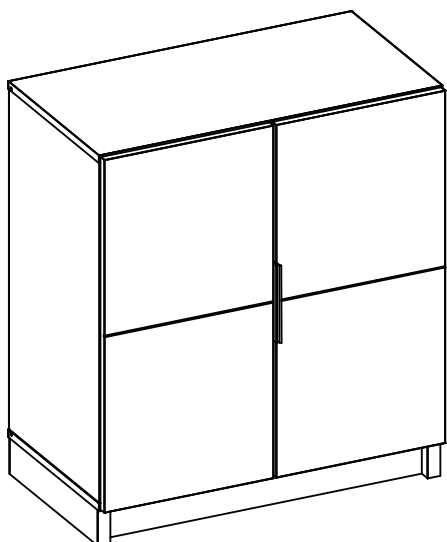


WEIGHT

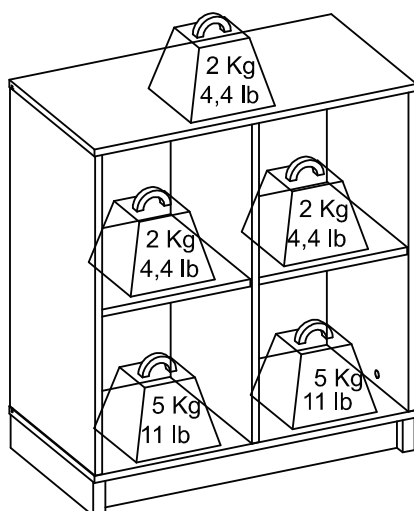

* Be aware about maximum weights shown in the assembly instruction.

AVOID ACCIDENTS

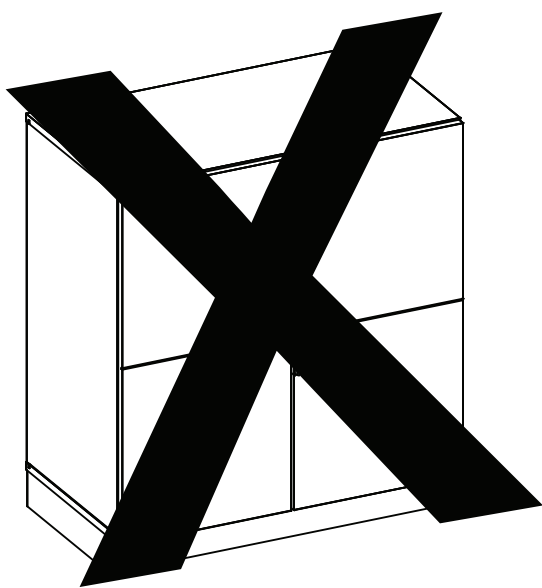

* Don't climb or lean on the furniture.

MAINTENANCE AND CLEANING

* For cleaning use only cloth slightly dampened in water.