
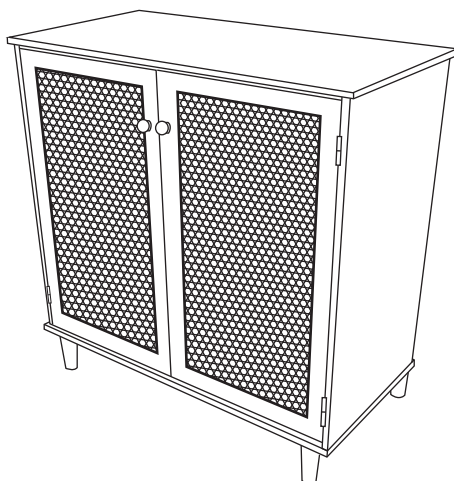


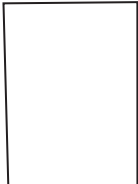
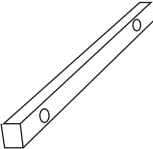

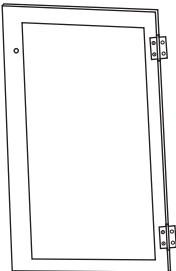
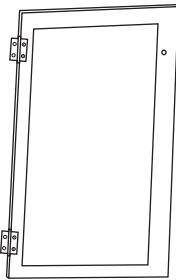



ASSEMBLY INSTRUCTION

SB001




①x1PC 	②x4PCS 	③x1PC 	④x1PC 
⑤x2PCS 	⑥x1PC 	⑦x1PC 	⑧x2PCS 
⑨x1PC 	⑩x1PC 	⑪x1PC 	
A x4PCS  M6x25mm	B x12PCS 	C x12PCS 	D x4PCS 
E x8PCS  M6x25mm	F x2PCS 	G x2PCS 	H x1PC 


step 1

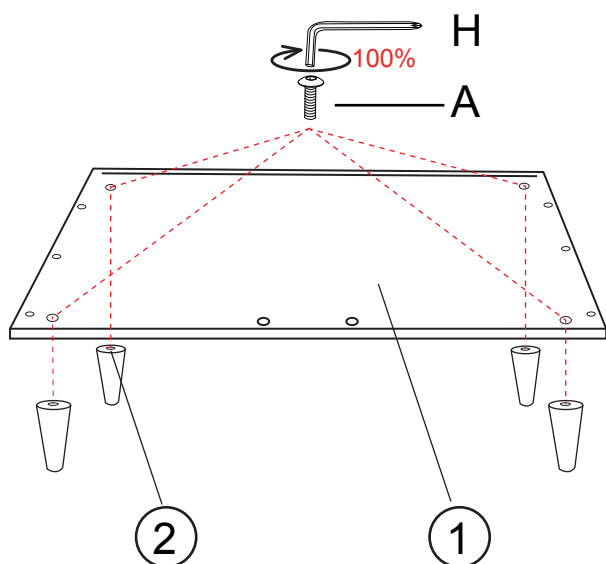


step 2

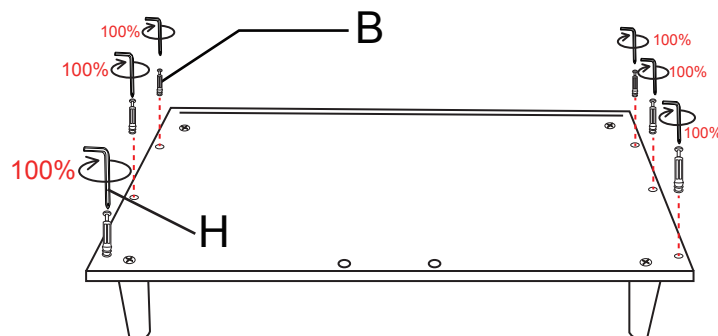


step 3

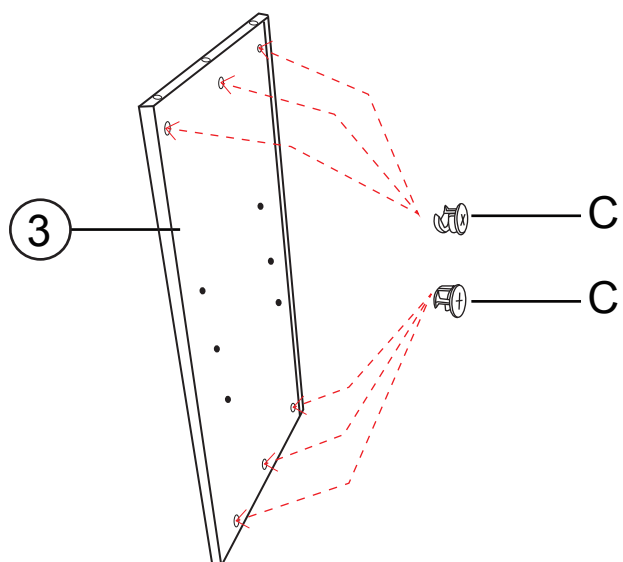


step 4

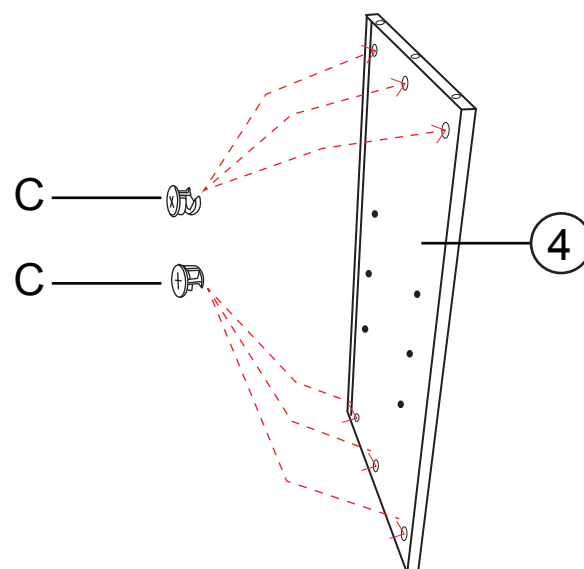


step 5

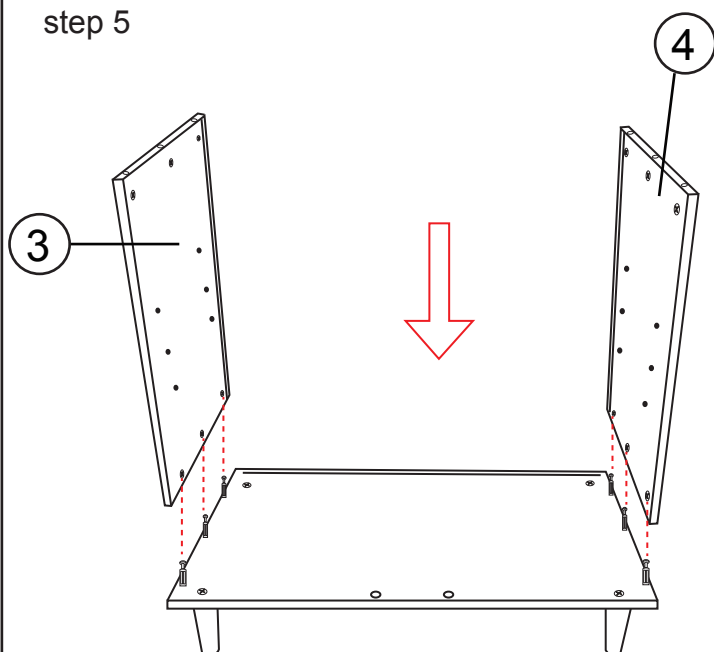


step 6

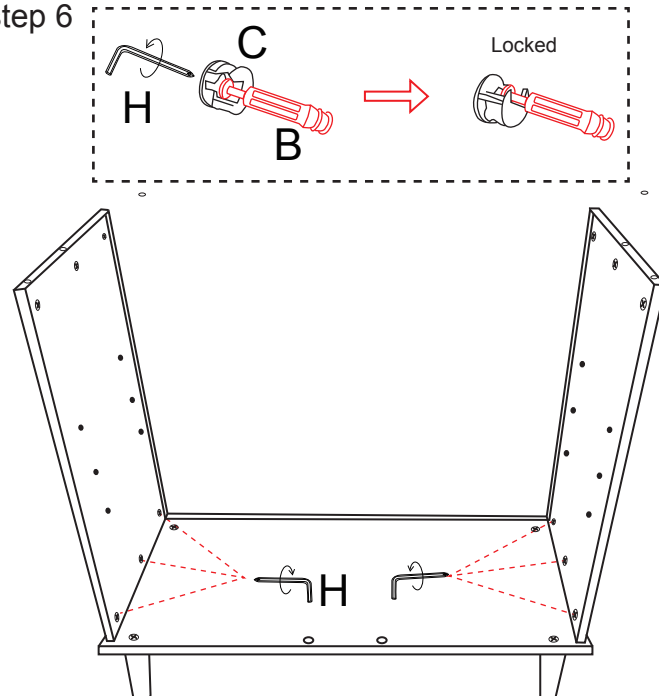


step 7

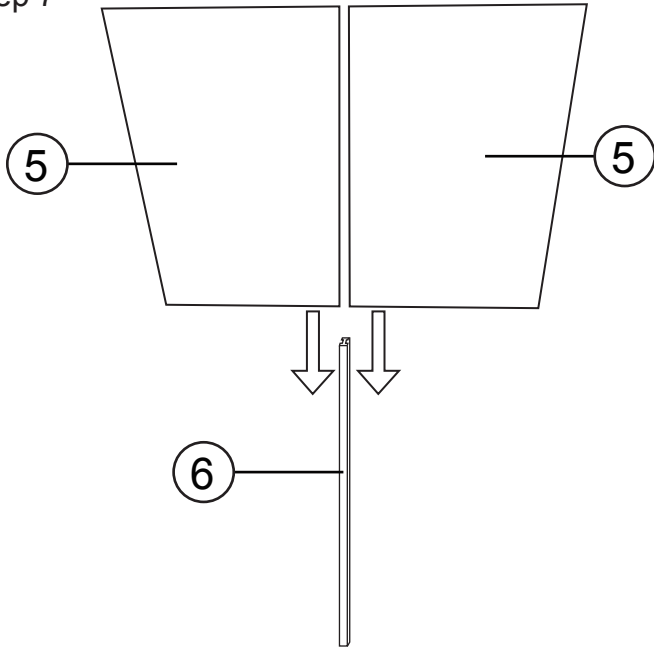


step 8

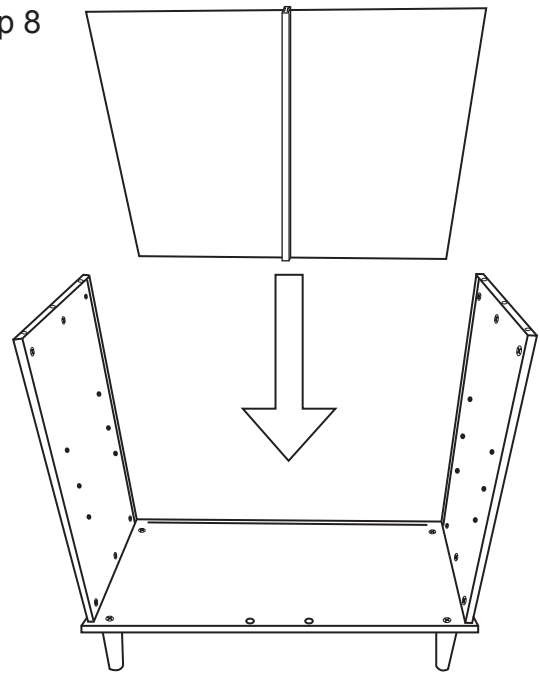


step 9

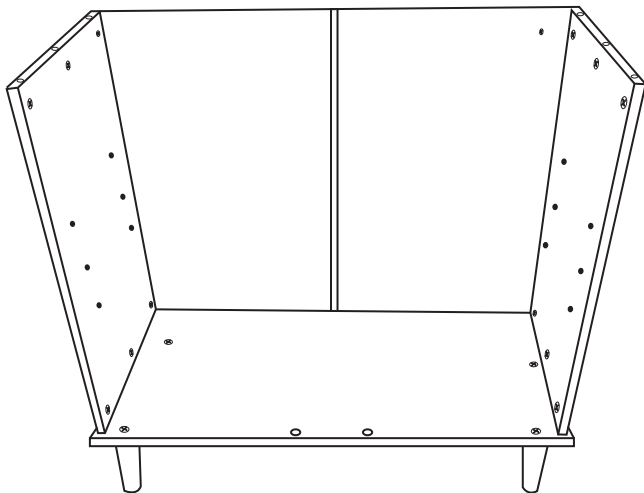


step 10

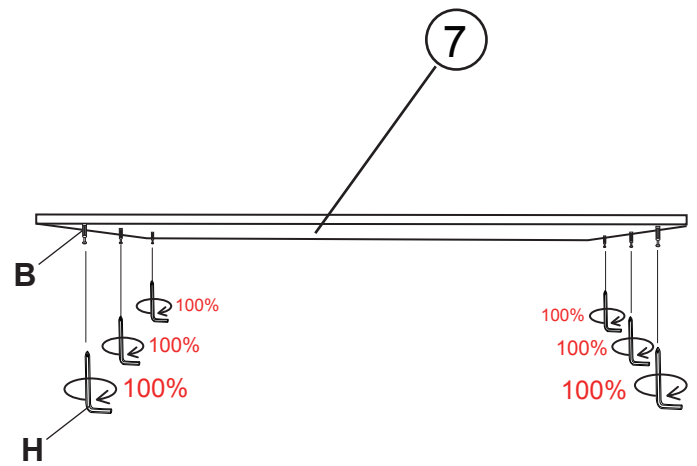


step 11

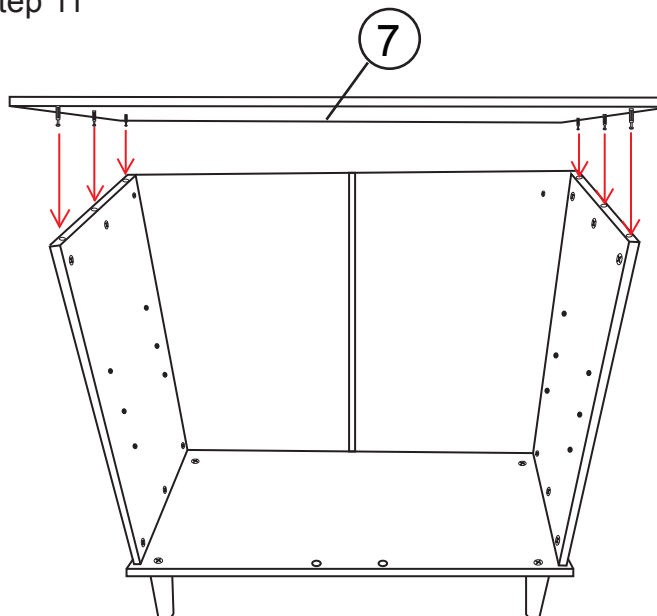

step 12

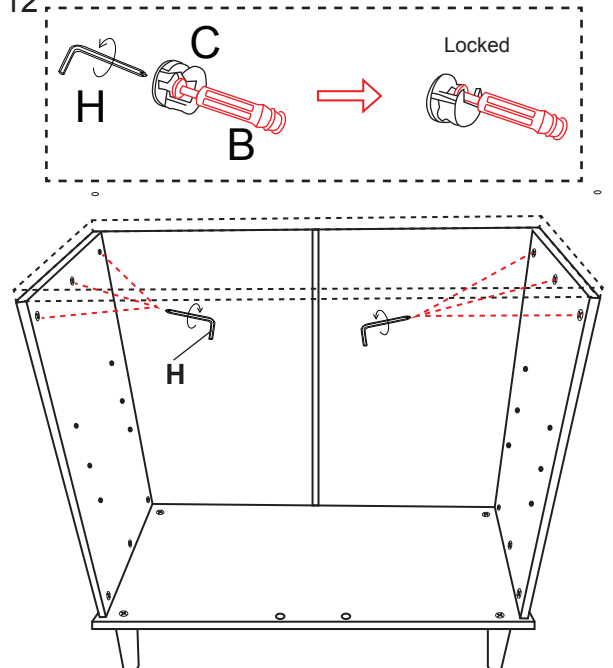


step 13

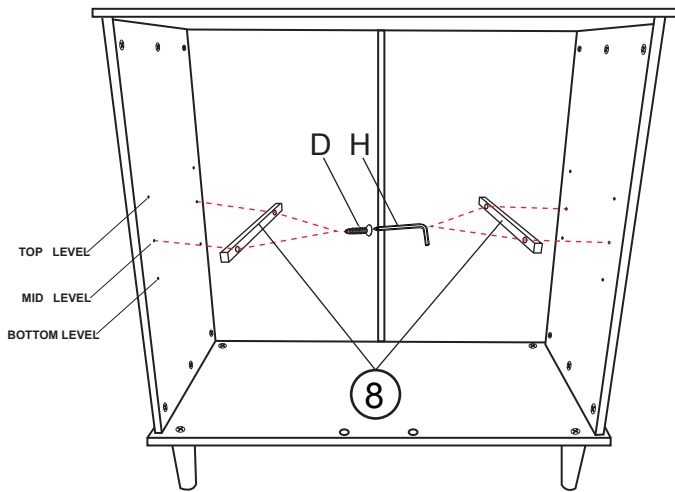


There are 3 positions available for the wooden partition to install, please choose one position as your will.

step 14

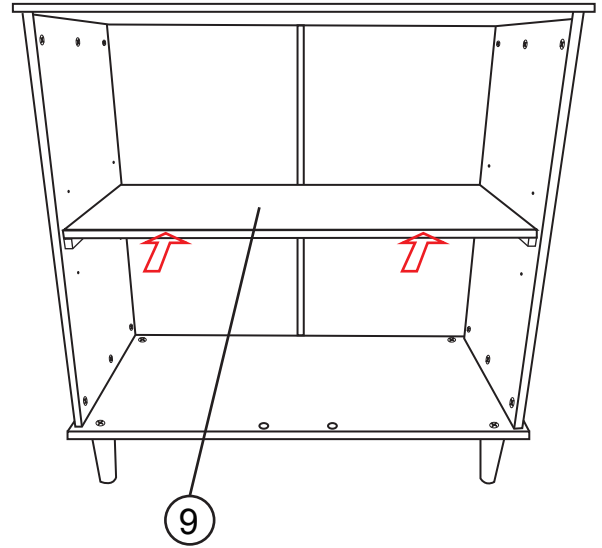

step 15

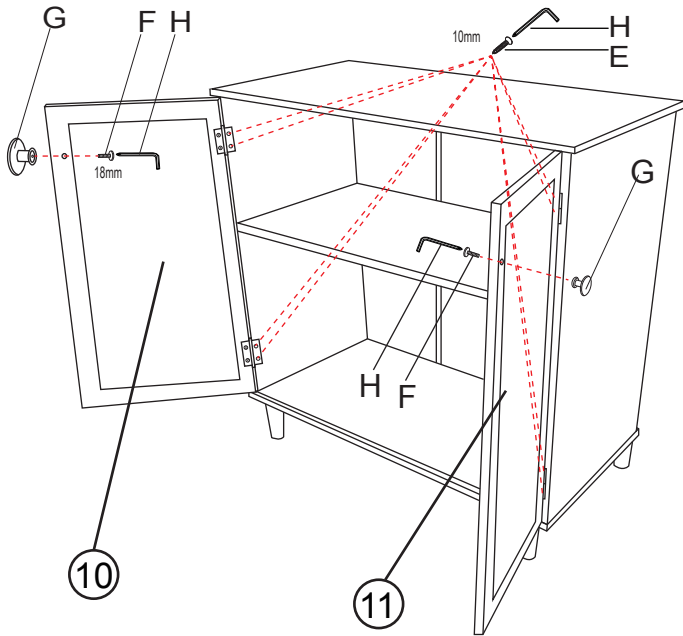

step 16

