


# ASSEMBLY INSTRUCTION

## 191B1571BUT/DZT/RNT-1 TWIN METAL BED


### PART LIST:




A:Lsf/Rsf hb Leg  
2PCS

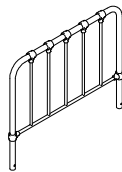


B:Headboard  
1PC

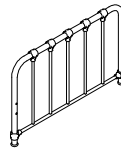


C:Footboard  
1PC



D:Side Rail  
2PCS




E:Side Rail  
2PCS



F:Center Cross Bar  
1PC



G:Center Slat  
Support Leg  
2PC



H:Slat  
16PCS




I:Slat Connector  
32PCS

### HARDWARE LIST:



1: Bolt 1/4\*22mm  
X 8pcs



2: Bolt 5/16\*19mm  
X 8pcs




3: Bolt 1/4\*17.5mm  
X 6pcs



4: Allen Key  
X 1pc


Note: Please do not tighten all bolts until the bed is assembled completely.

### STEP 1

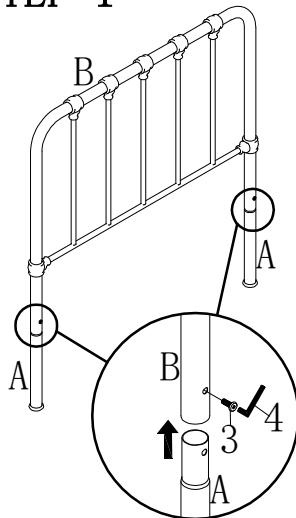


Hardware 3: 2 pcs

### STEP 2

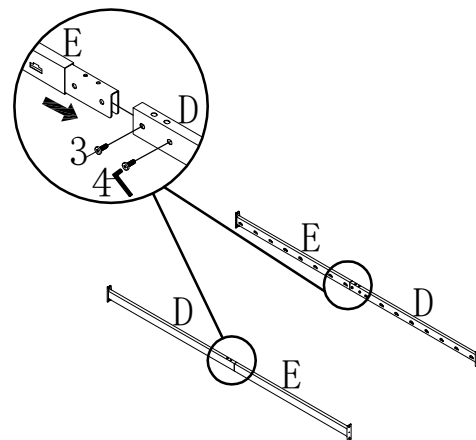


Hardware 3: 4 pcs

### STEP 3

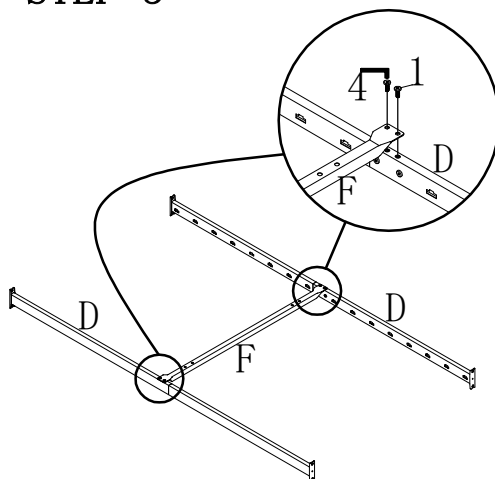


Hardware 1: 4 pcs

### STEP 4

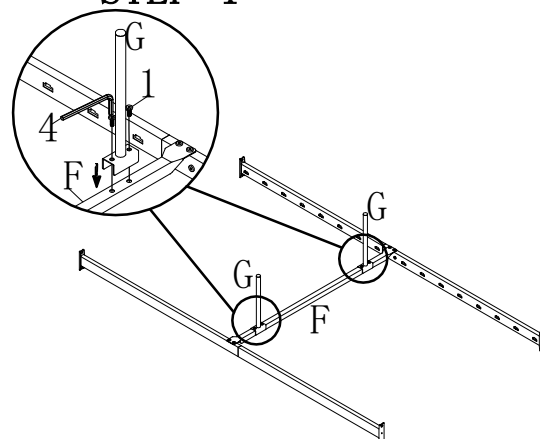

Hardware 1: 4 pcs


### STEP 5

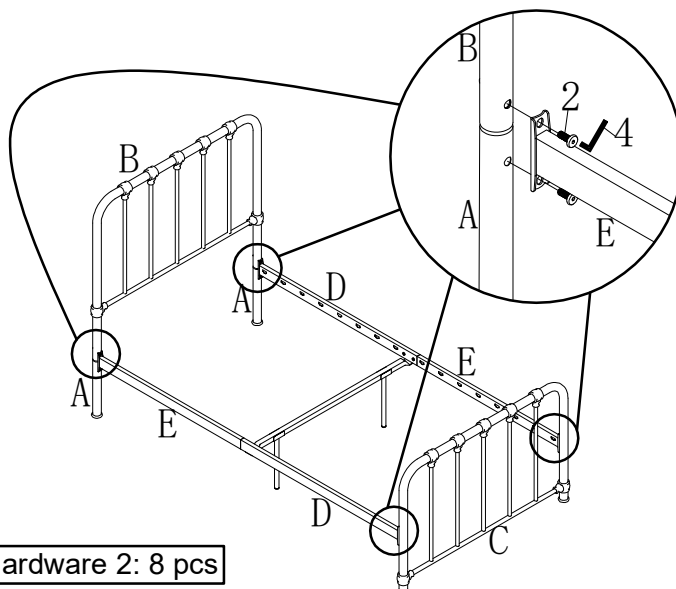


Hardware 2: 8 pcs

Note: Please do not tighten all bolts until the bed is assembled completely.

## STEP 6

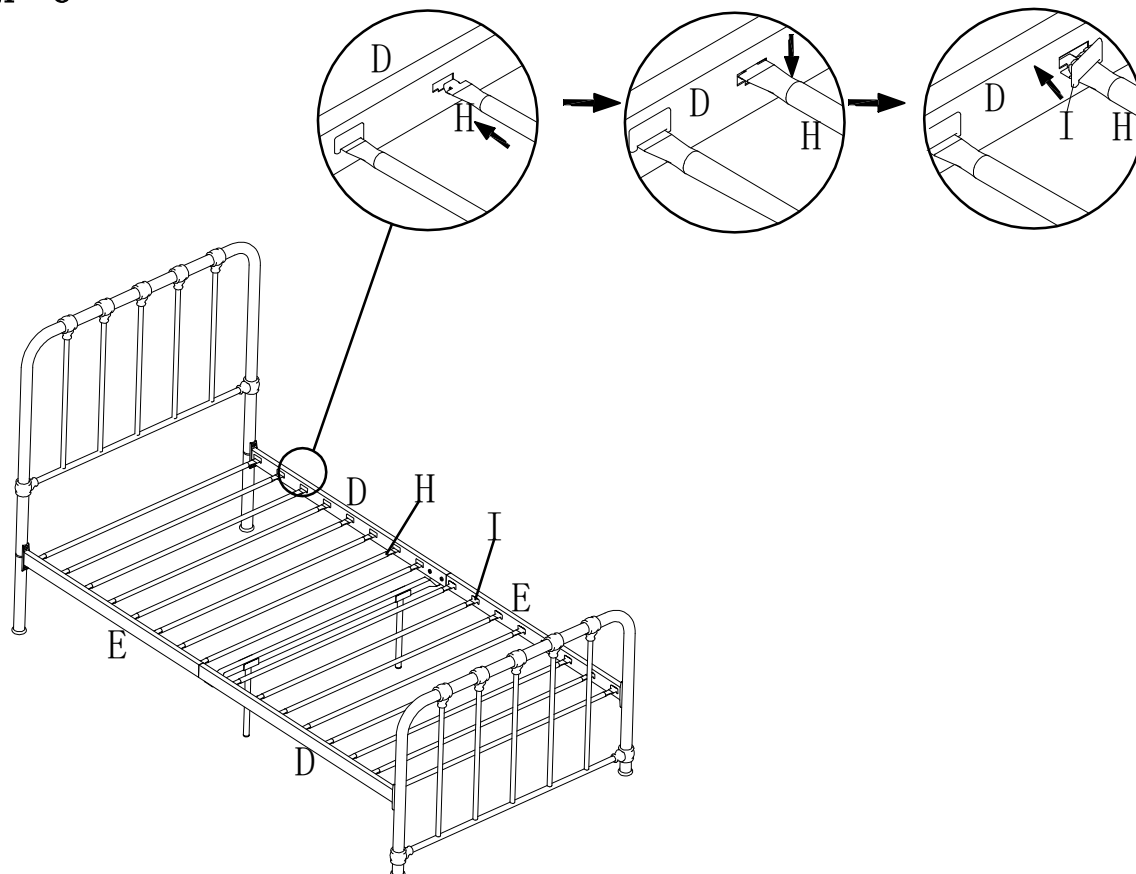

## COMPLETED

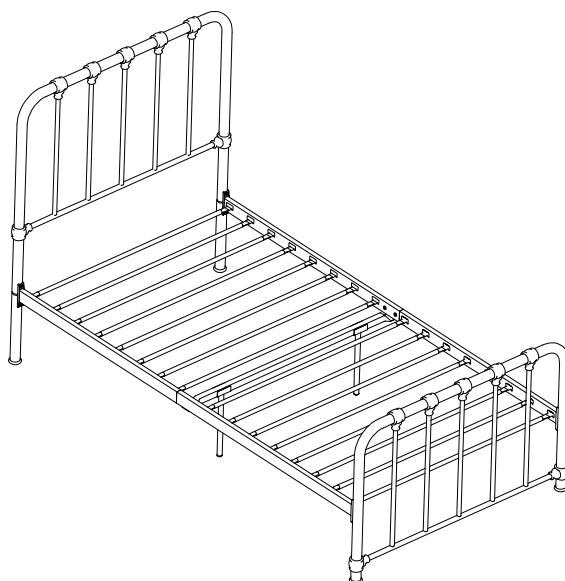

For items use on wooden floor, hard surfaces or carpets, it is recommended to install protective pads under all legs and supports to avoid/prevent from damages/scratches and discoloration.