


ASSEMBLY INSTRUCTIONS

TEAK TROLEY CART

IT-300240T

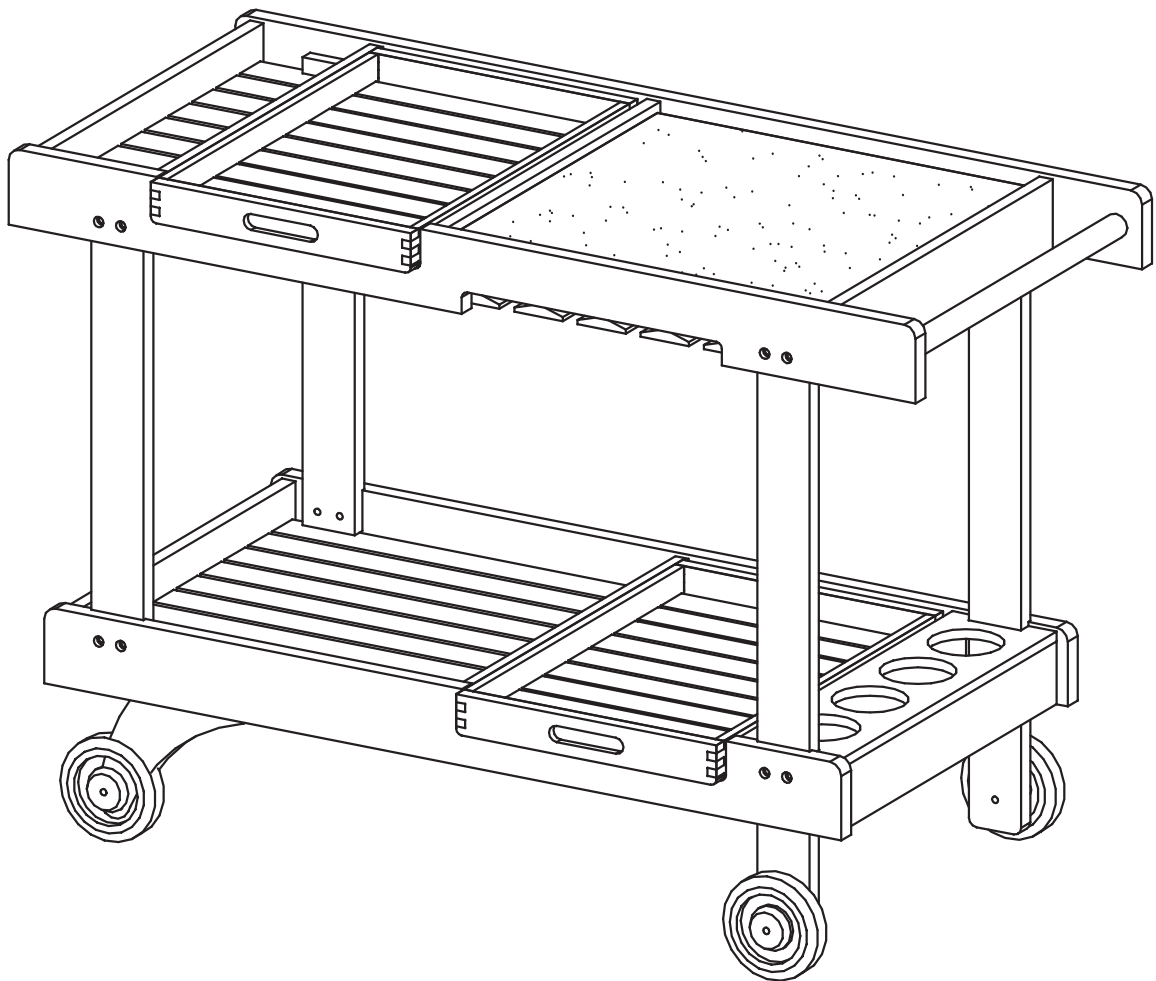

CUSTOMER SERVICE INFORMATION

Please do not return to the store. If any pieces are missing call our toll free number at 1-888-287-4275 from 9:00 am to 5.00 pm CST (Monday to Friday) for replacement parts. For faster service, have the style number handy when calling.

GENERAL INFORMATION & TIPS

1. Please read the assembly instructions prior to assembling the Trolley cart.
2. To avoid damage, assemble the Trolley cart on a non-abrasive surface such as carpet.
3. Make sure all bolts tightly fastened before the Trolley cart is used.
4. This Trolley cart is not for commercial use.

Please make sure you have all parts before beginning assembly. Please wait until all steps are completed before tightening bolts.


1. Ø4 mm Allen Wrench (Provided).
- For tightening all Ø1/4" bolts.




2. Ø5 mm Allen Wrench (Provided).
- For tightening all Ø5/16" bolts.










3. Wrench (Provided).
- For tightening all nuts.









4. 8" Philips screwdriver (Not provided).
- For tightening all screws.

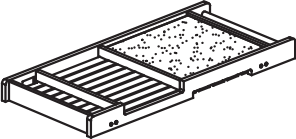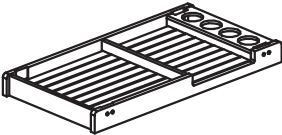

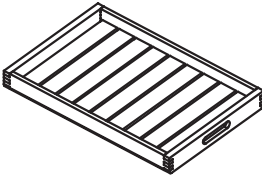
PARTS AND HARDWARE LIST

A1. Top frame	A2. Bottom frame	B1. Long leg	B2. Short leg
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 2 Pcs	Qty : 2 Pcs
C1. Right bottom leg	C2. Left bottom leg	D. Tray	
			
Qty : 1 Pc	Qty : 1 Pc	Qty : 2 Pcs	

PARTS AND HARDWARE LIST


E. 3" Bolt	F. 1 1/2" Bolt	G. Nut	H. Spring washer
			
Qty : 4 Pcs + 1	Qty : 16 Pcs + 1	Qty : 4 Pcs + 1	Qty : 8 Pcs + 1
I. Wheel	J. 1" Screw		
			
Qty : 4 Pcs	Qty : 6 Pcs + 1		

STEP 1

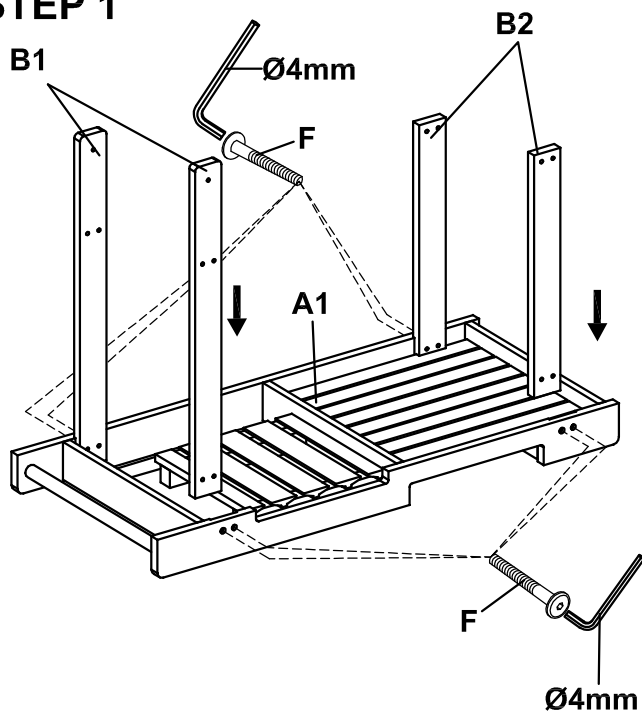


Attach long legs (B1) and short legs (B2) onto top frame (A1). Insert 1 1/2" Bolts (F) using Ø4mm Allen wrench. As picture shown.

STEP 2

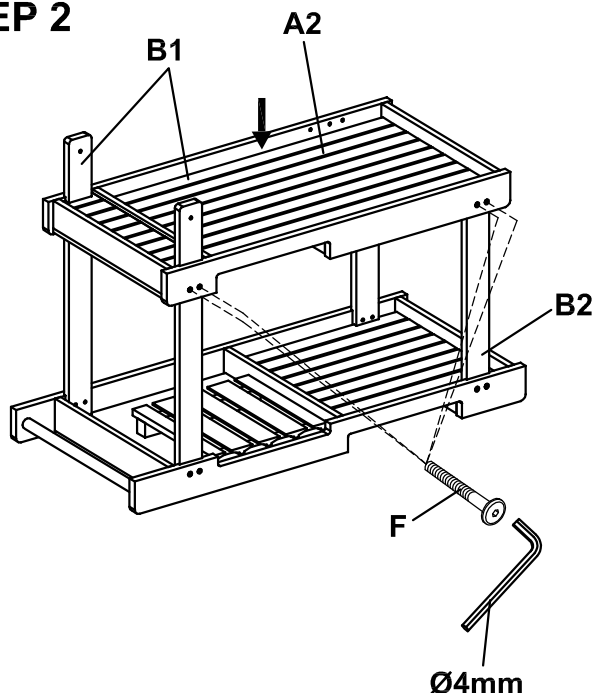


Attach bottom frame (A2) onto legs (B1&B2). Insert 1 1/2" Bolts (F), make sure all part are correctly connected and fully tighten the bolts using Ø4mm Allen wrench.

STEP 3

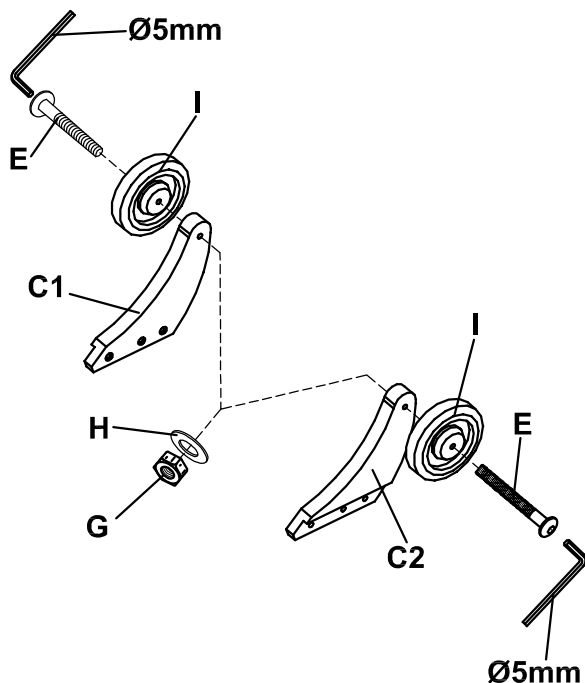

Attach wheel (I) on to right & left bottom leg (C1&C2). Insert 3" Bolts (E), Spring washer(H), and nut (G) hold on the bolts using Ø5mm Allen wrench, and tighten nut using wrench.


STEP 4

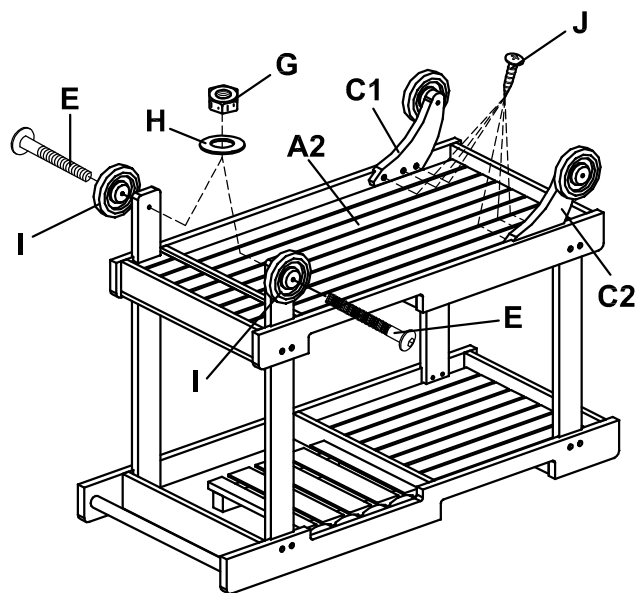

Attach right and left bottom leg (C1&C2) which has wheels attached on to Bottom frame (A2) secure using 1" screws (J).


Attach wheel (I) on to long leg (B1). Insert 3" Bolts (E), Spring washer (H), and nut (G) hold on the bolts using Ø5mm Allen wrench, and tighten nut using wrench.

STEP 5

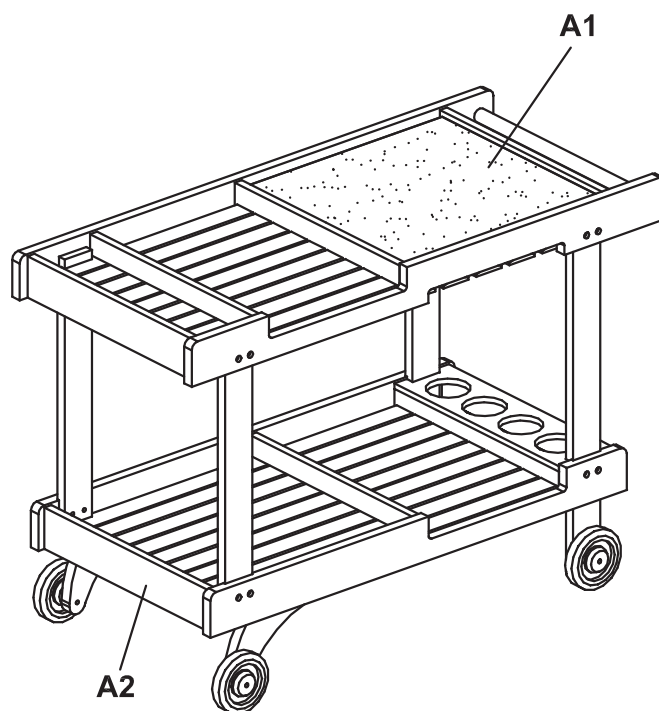

Up right the Trolley cart

STEP 6

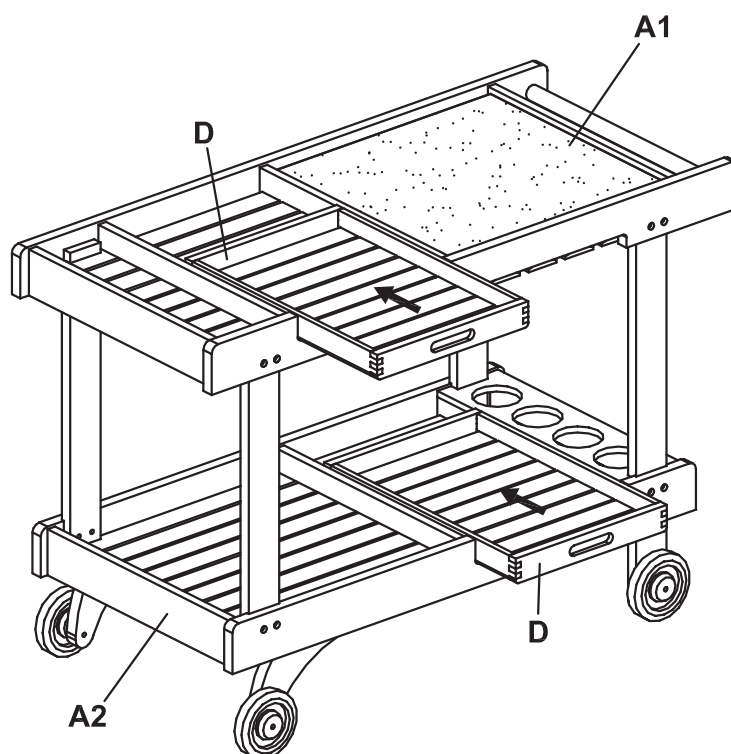

Attach the trays (D) to the section Top frame (A1) and bottom frame (A2).
THE TROLEY CART IS NOW READY FOR USE.