




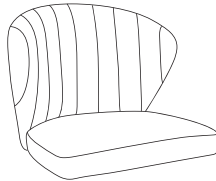




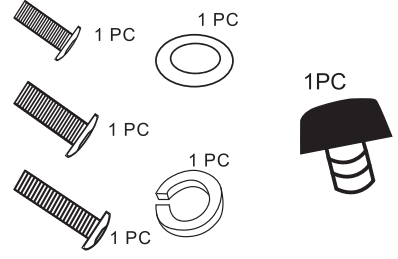



# ASSEMBLY INSTRUCTIONS

## Item No:CHM6125A


Components:
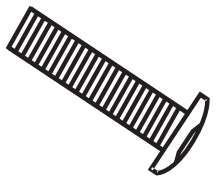
<p><b>A</b></p>  <p>1 PC</p>	<p><b>B</b></p>  <p>1 PC</p>	<p><b>C</b></p>  <p>1 PC</p>	<p><b>D</b></p>  <p>1 PC M6x35</p>	<p><b>E</b></p>  <p>2 PCS M6x45</p>	<p><b>F</b></p>  <p>2 PCS M6x50</p>
<p><b>G</b></p>  <p>5 PCS</p>	<p><b>H</b></p>  <p>5 PCS</p>	<p><b>I</b></p>  <p>1 PC</p>	<p><b>J</b></p>  <p>4 PCS</p>	<p><b>EXTRA PARTS</b></p> 	

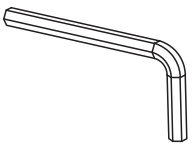
**Step 1:** Use bolt D, spring washer H, flat washer G, allen wrench I to connect metal leg part A and B together, don't fasten the bolt at this stage.

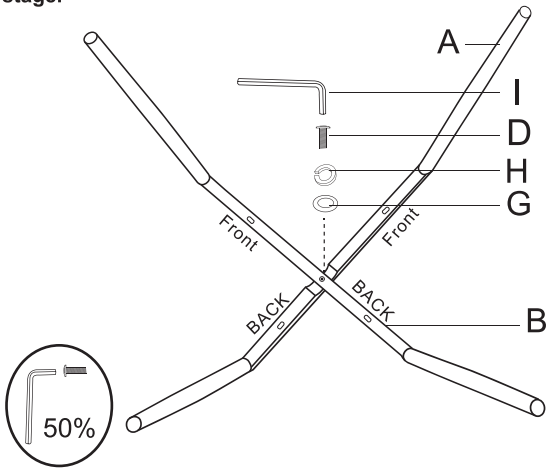

**Step 2:** Use bolt E, spring washer H, flat washer G, allen wrench I to attach the whole metal leg assembly to bottom of the seat.

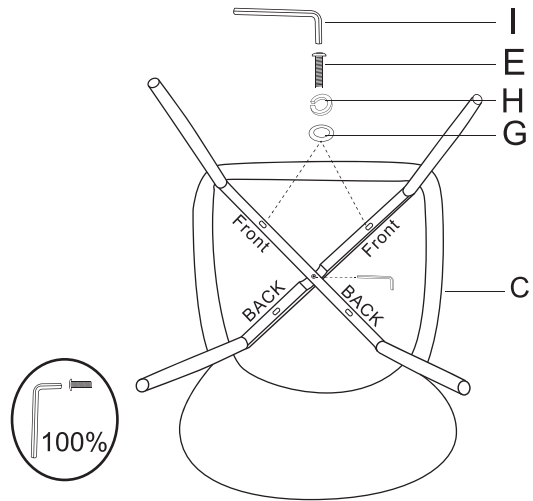

**Step 3:** Make sure all holes on legs align with holes on bottom of seat then fasten all bolts to secure.

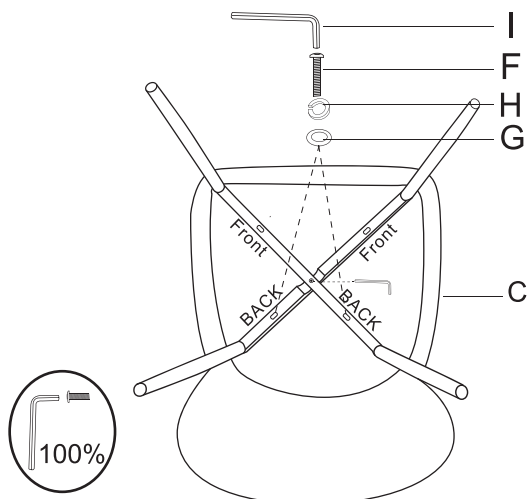

Please pay attention to the length of screws during Installation. Incorrect use of screws will lead to Instability or failure to Install. Be sure to check all packing material carefully for small parts, which may have come loose inside the carton during shipment.

