
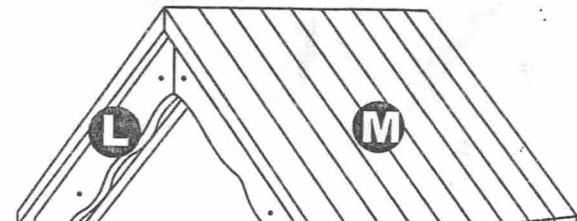
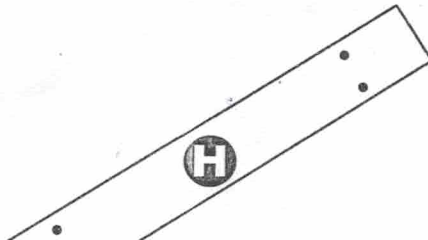
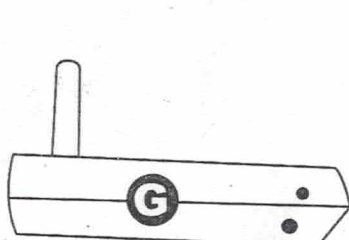
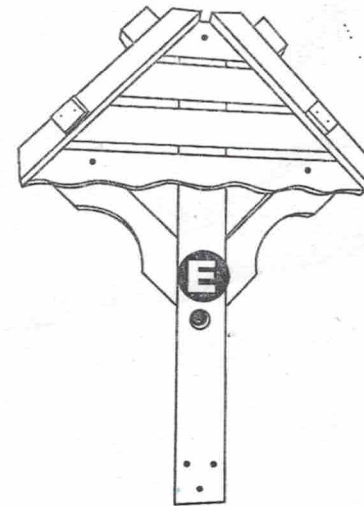
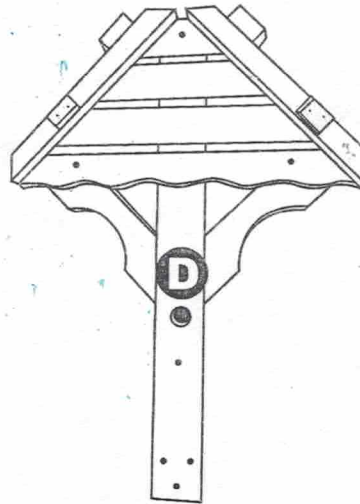




Wishing Well Assembly Instructions #4986

TOOLS NEEDED: Philips screwdriver, power drill optional

CAUTION: When assembling ottoman, **DO NOT** completely tighten the nuts and bolts until all the parts & holes are properly aligned and positioned.

PARTS INCLUDED

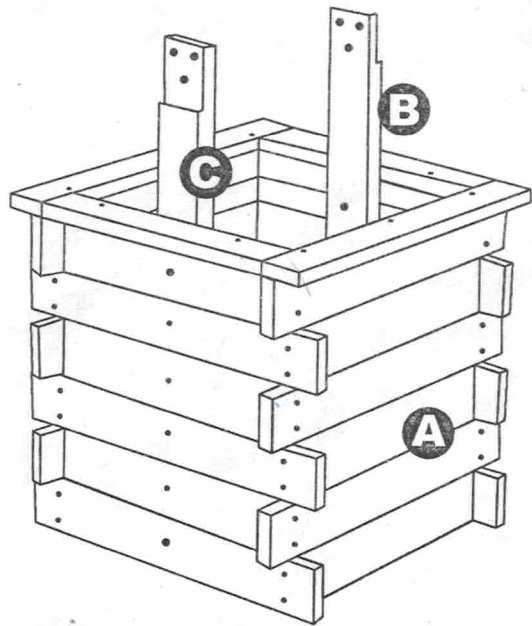

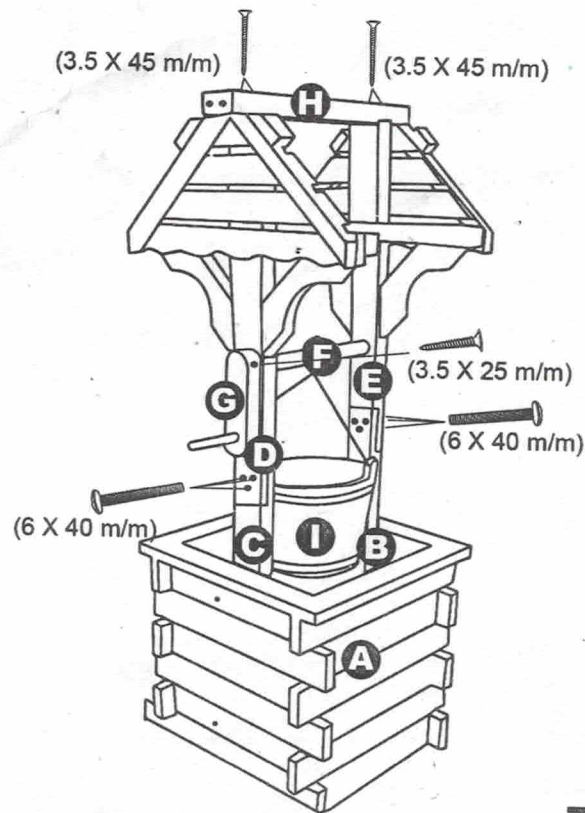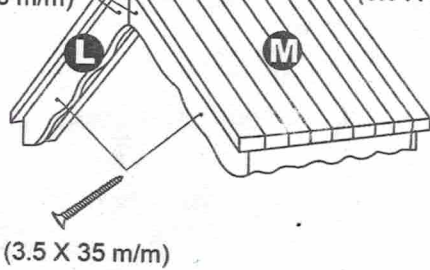

USING 3SETS (6 X 40 m/m) SCREWS.

STEP 2 : ATTACH SPINDLE **F** TO POLE **E** THEN ATTACH POLE **D** TO **C** (ATTACHED TO BASE **A**) , USING 3 SETS (3.5 X 45 m/m) SCREWS, ALLOWING SPINDLE **F** TO ENTER HOLE IN POLE **D** .

STEP 3 : ATTACH HANDLE **G** TO SPINDLE **F** USING 1PC (3.5X 35 m/m) SCREW.

STEP 4 : ATTACH **H** ONTO THE TOP OF THE WISHING WELL
USING 4PCS (3.5 X 45 m/m) SCREWS.

STEP 5 : ATTACH ROOF PANELS **L** AND **M** ONTO **H** USING 8PCS (3.5 X 35 m/m) SCREWS.

STEP 6 : ATTACH BUCKET **I** TO SPINLE **F** BY INSERTING THE TWINE INTO THE HOLE.

TOOLS RECOMMENDED: PHILLIPS SCREW DRIVER



1 PC SCREW
(3.5 X 25 m/m)



4 PC SCREW
(3.5 X 45 m/m)



8 PC SCREW
(3.5 X 35 m/m)



6 PC SCREW
(6 X 40 m/m)

TOOLS NEEDED: Philips Screwdriver, power drill optional

TIGHTEN ALL NUTS AND BOLTS WHEN YOU ARE COMPLETELY DONE ASSEMBLING THE WISHING WELL.