












Important safety instructions:

- Please read carefully all instructions before assembly.
- For your safety and ease, assembly by two or more adults is recommended.
- Keep instructions for future use.











Pre-assembly:

- Do not discard any content until assembly is complete to avoid accidentally discarding small parts or hardware.
- Take out all parts and hardware from box.


Parts List

Item	Description		QTY	Item	Description		QTY
P1	Top Panel		1	P5R	Door Panel (Right)		1
P2L	Side Panel (Left)		1	P6	Divider Panel		1
P2R	Side Panel (Right)		1	P7	Shelf		2
P3	Bottom Panel		1	P8	Leg Frames		2
P4	Back Panel		1	P9	Leg Frame Stretchers		5
P5L	Door Panel (Left)		1				


Hardware List

Item	Description		QTY	Item	Description		QTY
H1	Confirmat Screw 6x40mm		16	H6	Door Handle		2
H2	Bolt M6 X 35mm		4	H7	Bolt M4 x 25mm		4
H3	Bolt M6 X 15mm		10	H8	Allen Wrench 4mm		1
H4	Flat Washer M6		12	H9	Allen Wrench 3mm		1
H5	Shelf Pin		8	H10	Anti Tip Kit		1 SET

TOOL REQUIRED



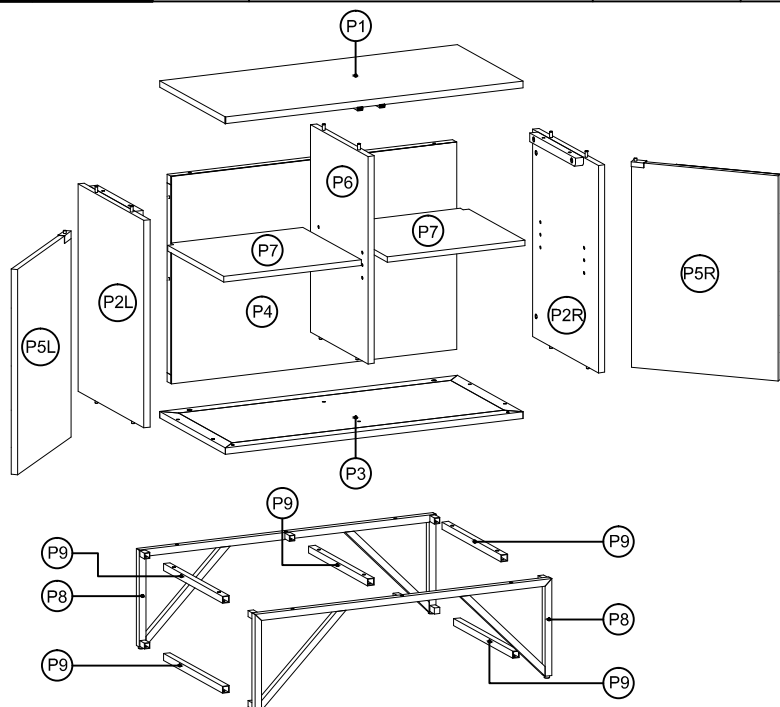


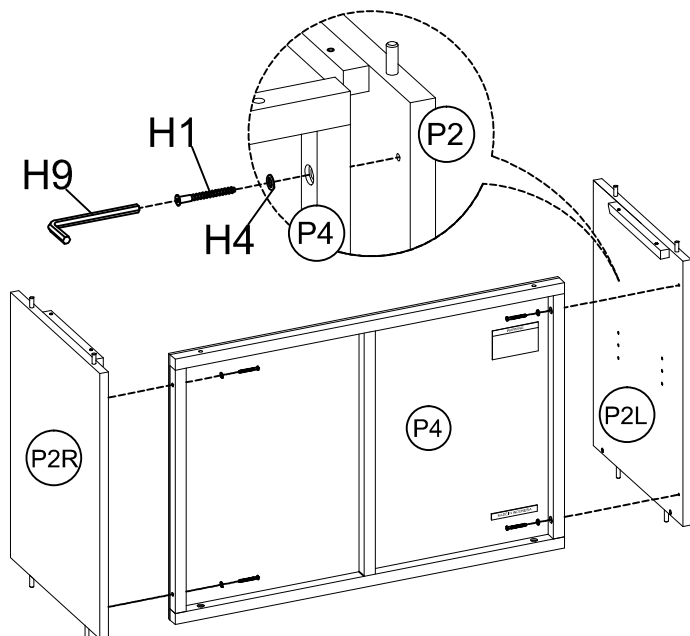
Phillip Screw Driver






Assembly Procedures:


Step 1: Attach side panels (P2) to back panel (P4) as shown below.

(H1)x4	Confirmat Screw 6x40mm	
(H4)x4	Flat Washer M6	
(H9)x1	Allen Wrench 3mm	




Step 2 : Attach top panel (P1) to the back panel (P4), side panel (Left) (P2L) and side panel (right) (P2R) as shown below.

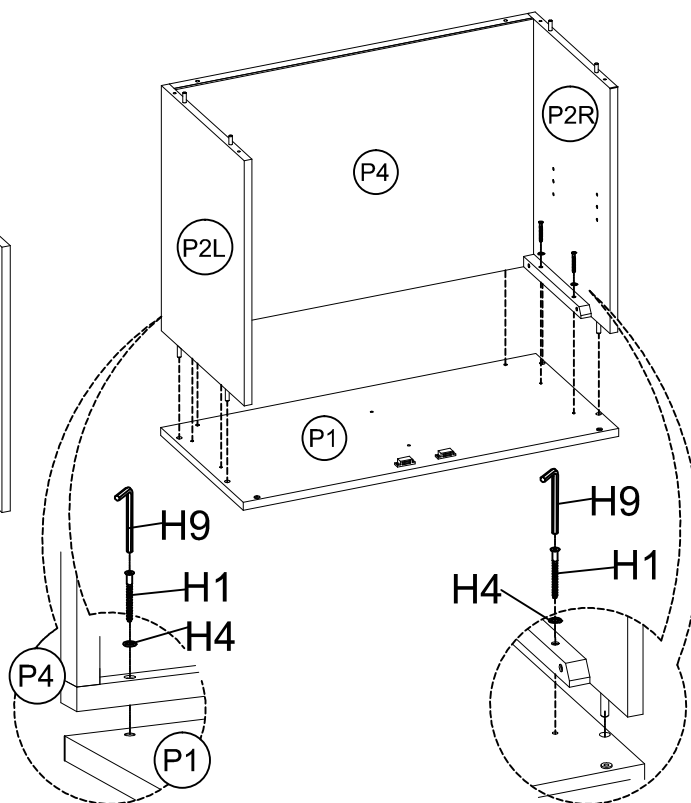


(H1)x6	Confirmat Screw 6x40mm	
(H4)x6	Flat Washer M6	
(H9)x1	Allen Wrench 3mm	

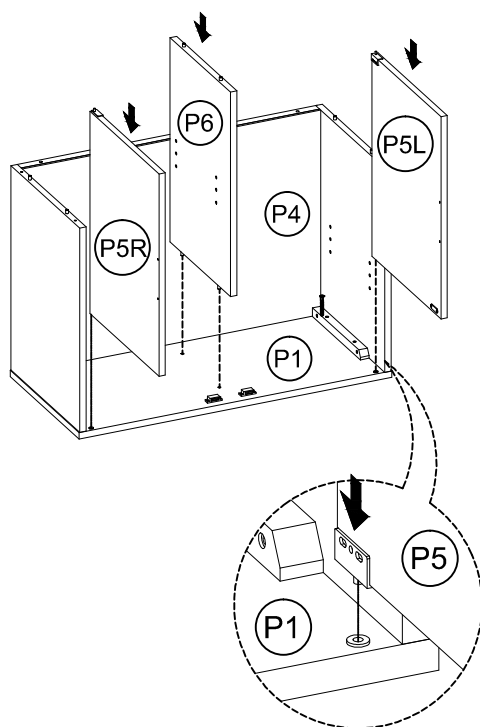


Step 3 : Attach divider panel (P6) and door (Left) (P5L) and door (right) (P2R) to the top panel (P1) as shown below.





Step 4 : Attach bottom panel (P3) to the divider panel (P6), side panel (Left) (P2L), side panel (right) (P2R), door (Left) (P5L) and door (right) (P2R) as shown below.

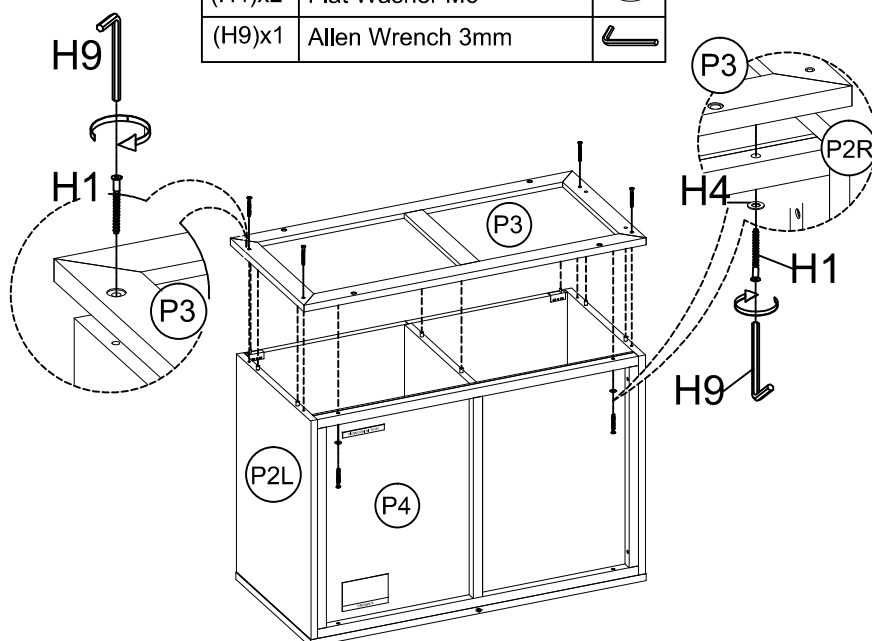

(H1)x6	Confirmat Screw 6x40mm	
(H4)x2	Flat Washer M6	
(H9)x1	Allen Wrench 3mm	




Step 5 : Attach door handle to each door as shown below.

Step 6 : Attach each stretcher (P9) to the leg frame (P8) as shown below.


(H6)x2	Door Handle	
(H7)x4	Bolt M4 x 25mm	

(H3)x10	Bolt M6 X 15mm	
(H8)x1	Allen Wrench 4mm	

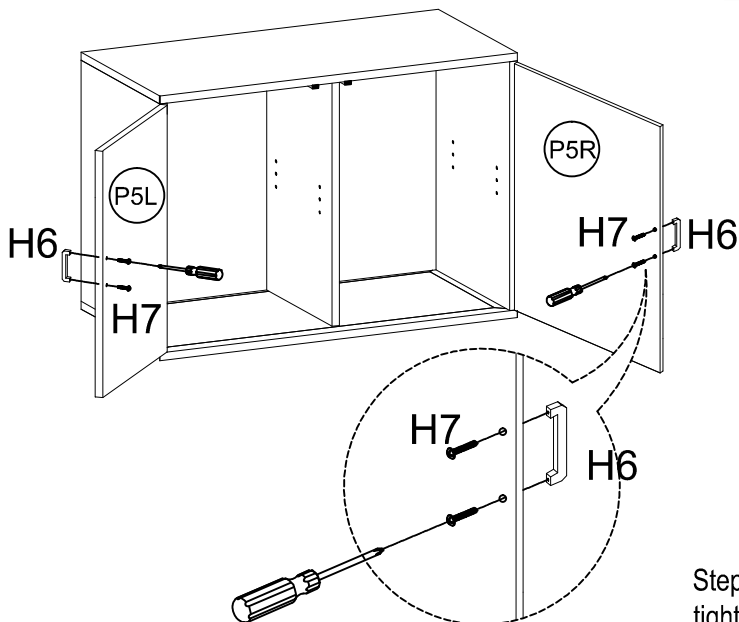

Phillip Screw Driver



Step 7 : Attach the assembled base to the bottom of cabinet as shown below.

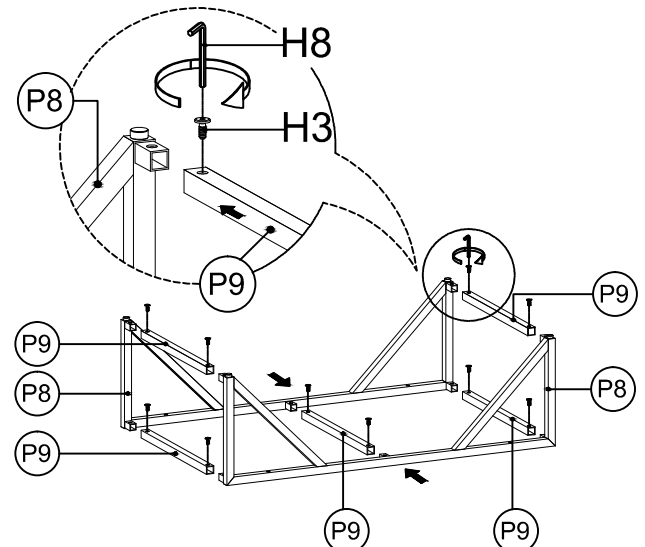




Step 8: Securely tighten all screws and bolts, but do not over tighten. Turn the assembled chest to an upright position. Assembly is complete.

*Insert each pin into the holes on side panels (P5L & P5R) and divider panel (P6), then lay each shelf (P7) on the shelf pins as shown below

*Recommend that you attach the products to a wall as a safely precaution. Please see the other instruction "Furniture Tipping Restraint."

(H2)x4	Bolt M6 X 35mm	
(H8)x1	Allen Wrench 4mm	

(H5)x8	Shelf Pin	
--------	-----------	---

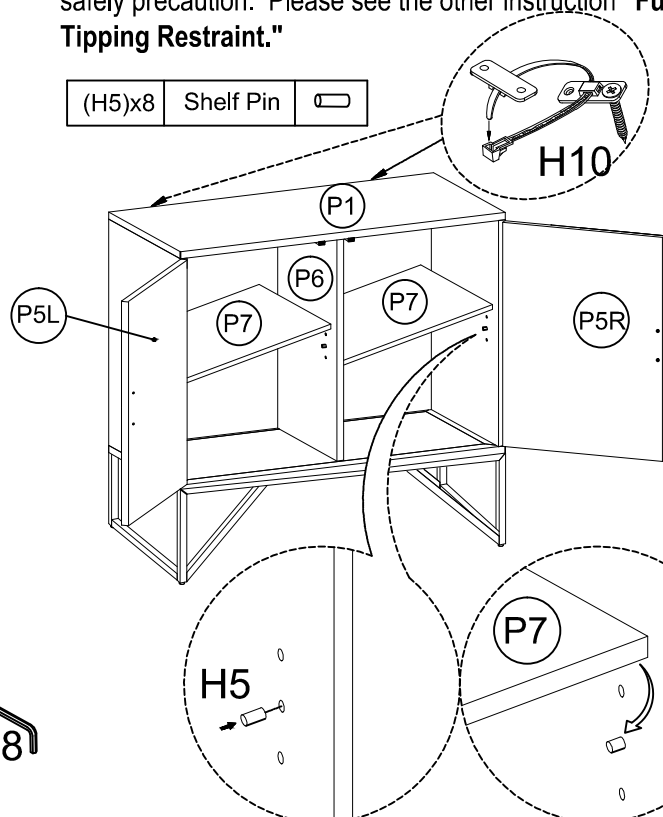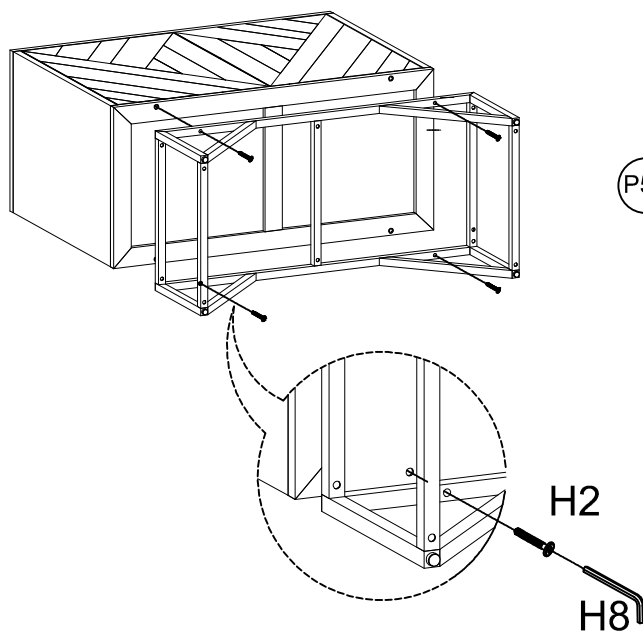

ADDITIONAL NOTE ABOUT SAFETY: BOLTS MAY LOOSEN DURING NORMAL EVERYDAY USE. THEY SHOULD BE PERIODICALLY INSPECTED AND RE-TIGHTENED TO PREVENT DAMAGE OR INJURY. ALWAYS CHECK TO ENSURE THAT ALL HARDWARE IS KEPT TIGHTENED.

Thank you for your purchase