

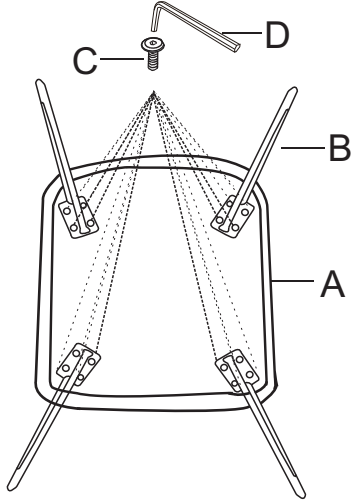
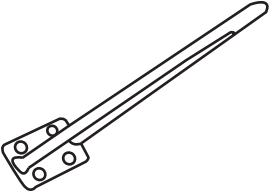

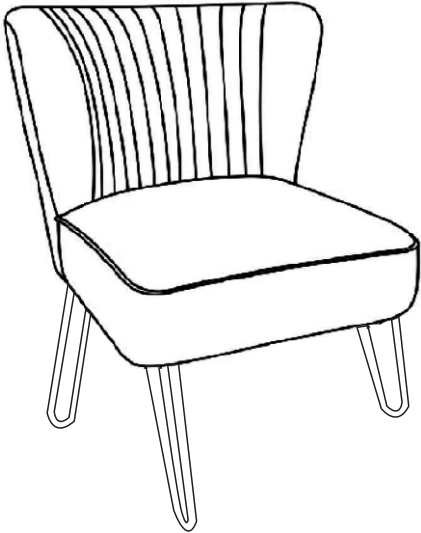



# Assembling Instruction

<div>Ax1</div> <div></div> <div>1 PC</div>	<div>EXTPA PATRS</div> <div></div> <div>2 PCS</div>	<div>①</div> <div>Do not fully tighten the bolts until all the bolt align with the hole. Pls be sure you align the hole first.</div> <div></div>
<div>Bx4</div> <div></div> <div>4 PCS</div>		
<div>Cx16</div> <div></div> <div>16 PCS</div>		<div>②</div> <div></div>
<div>Dx1</div> <div></div> <div>1 PC</div>		