




9751 King Headboard


Assembly Instructions

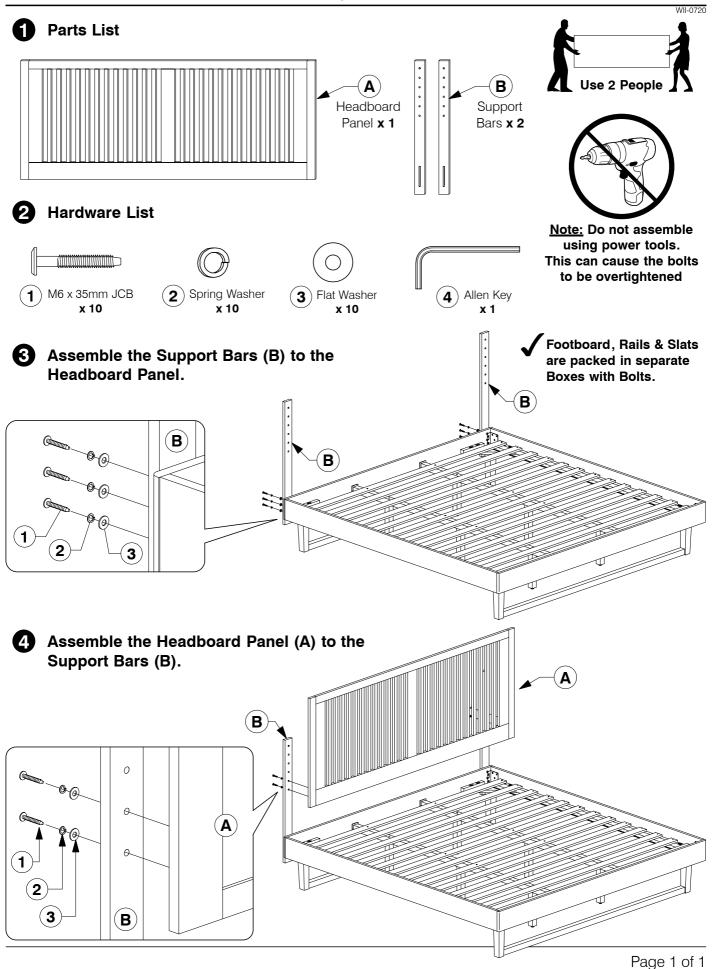


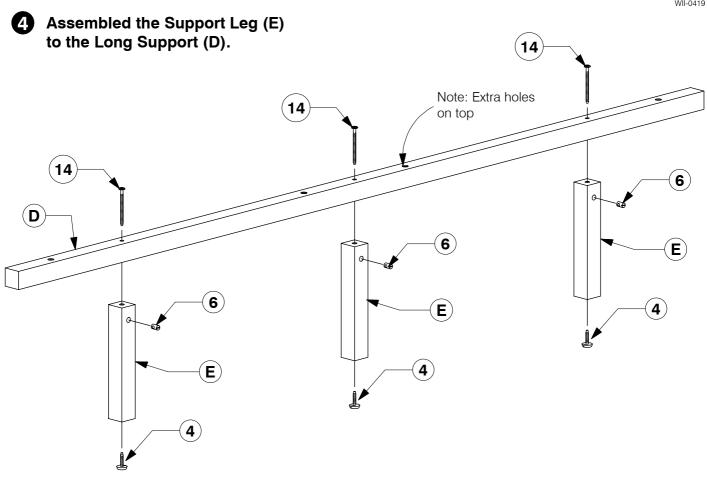


5 Fit the Post (F) to the Support Panel (G).

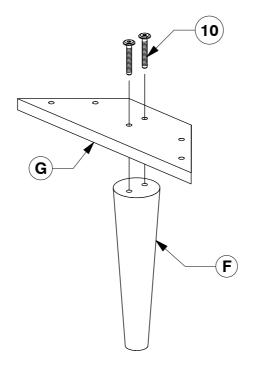

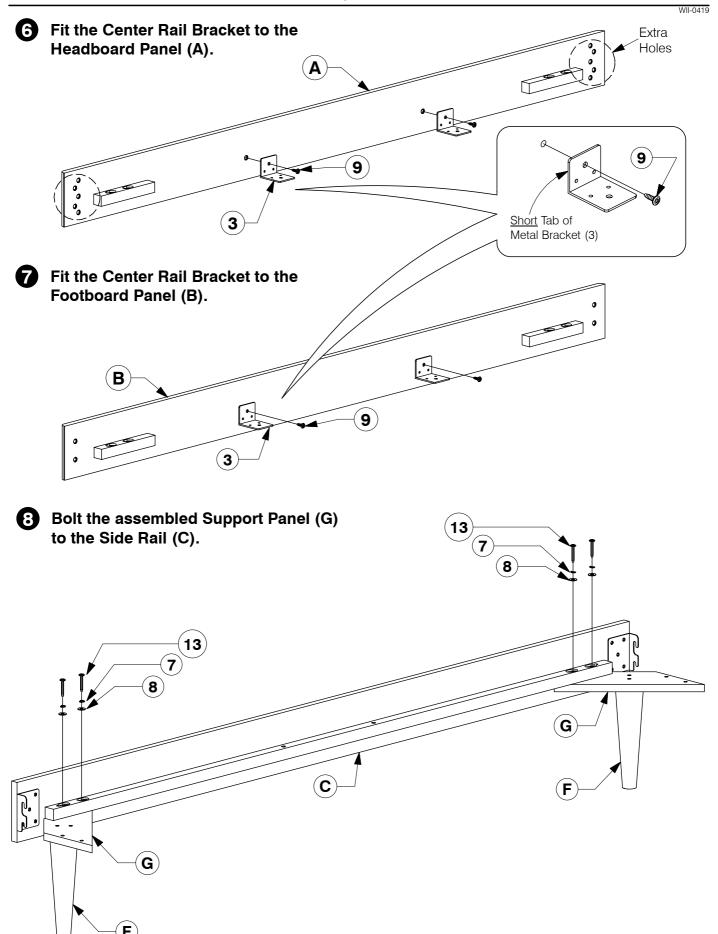

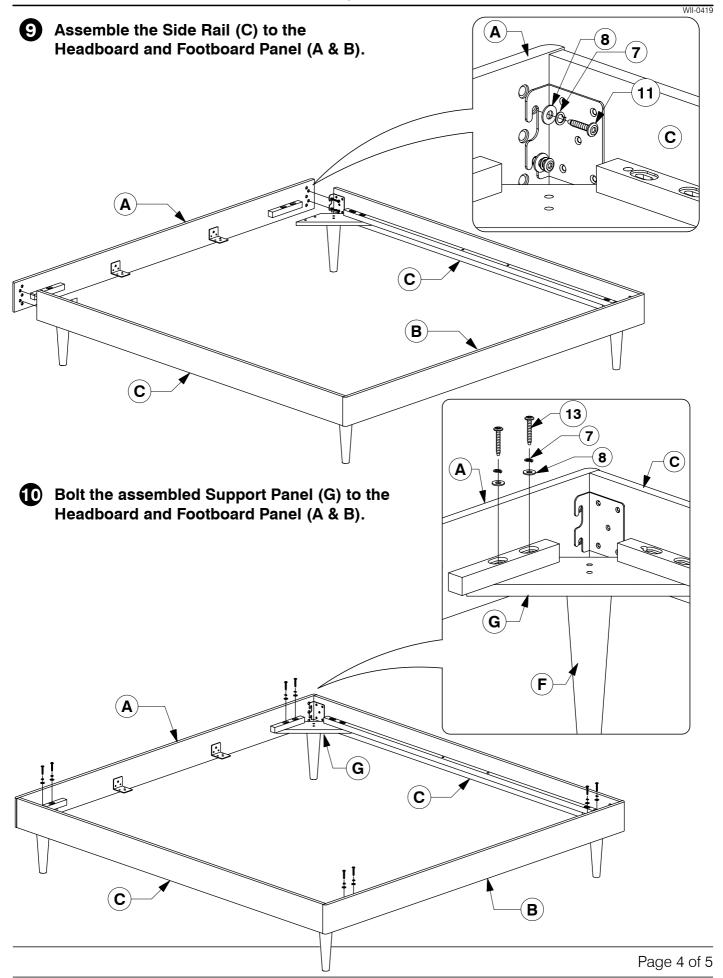

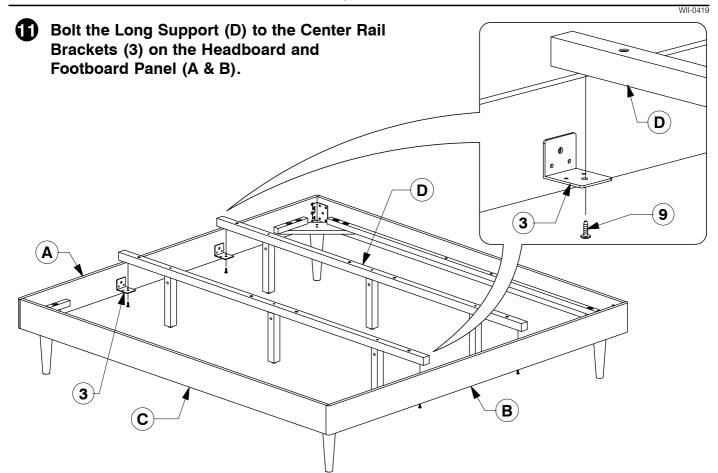

Bolt & screw the Bed Slats (H) to the Side Rail (C).

