
97151 Twin Bed

Assembly Instructions

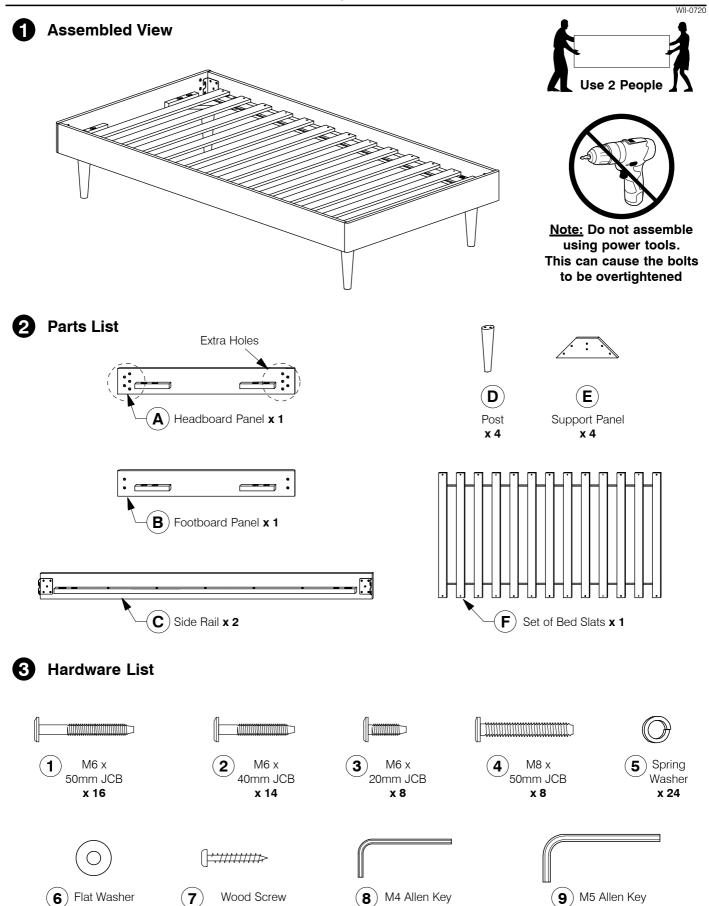

x 1


x 24

(M4 x 32mm) **x 12**

x 1

9751 Twin Headboard

Assembly Instructions

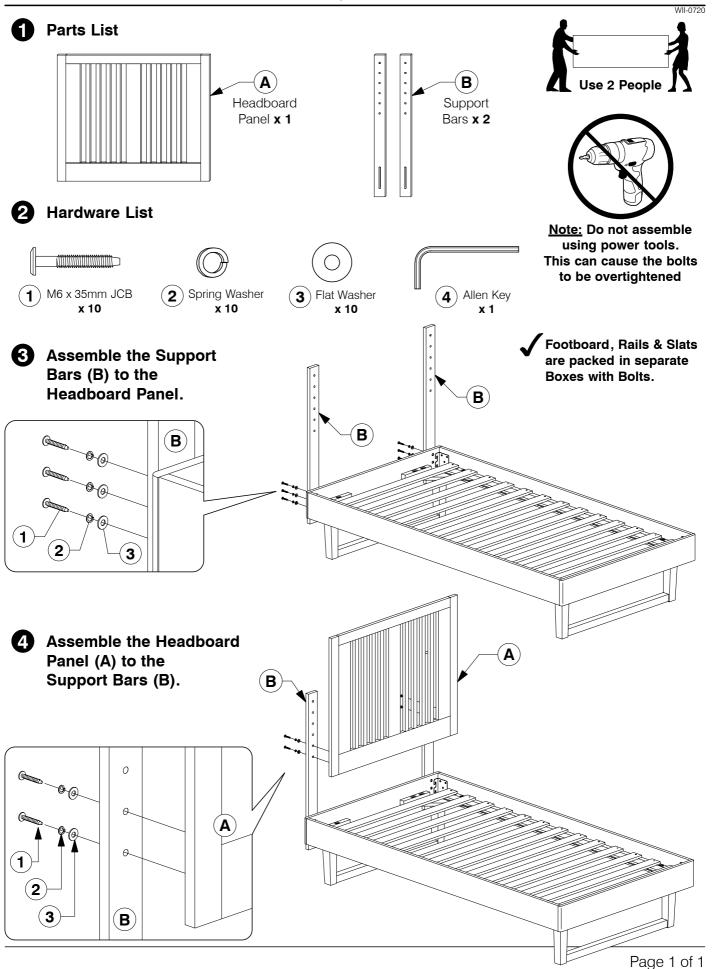


97151 Twin Bed

Assembly Instructions

WII-0720


4 Fit the Post (D) to the Support Panel (E).



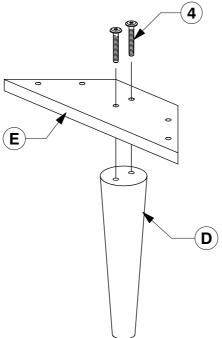


Bolt the Post & Support Panel (D & E) to the Side Rail (C).



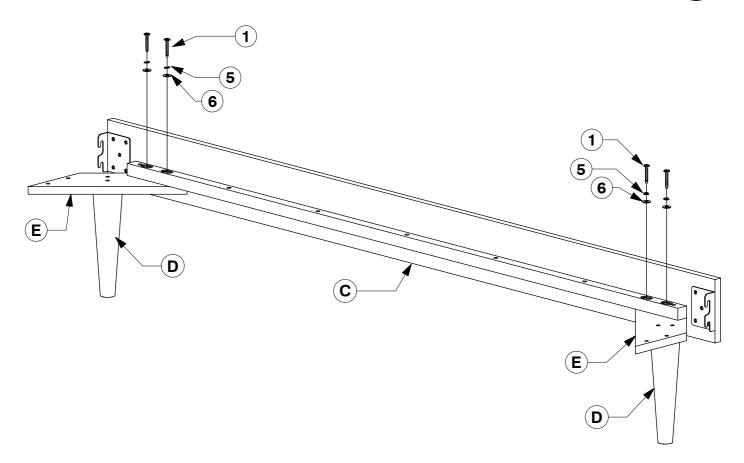


97151 Twin Bed

Assembly Instructions

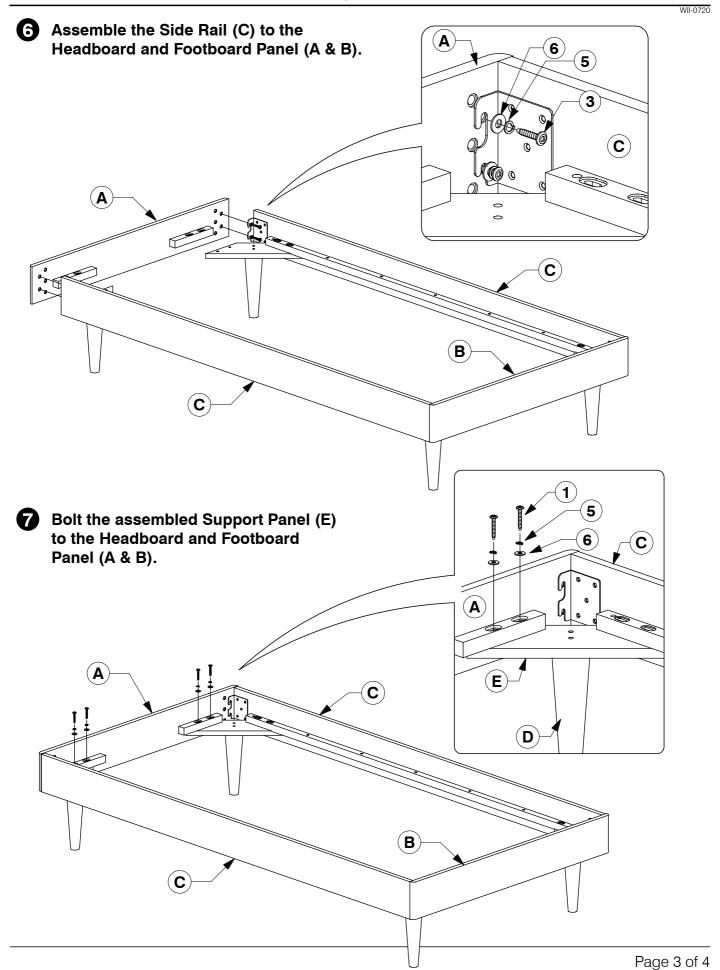

NII-0720

8 Bolt the Bed Slats (F) to the Side Rail (C).

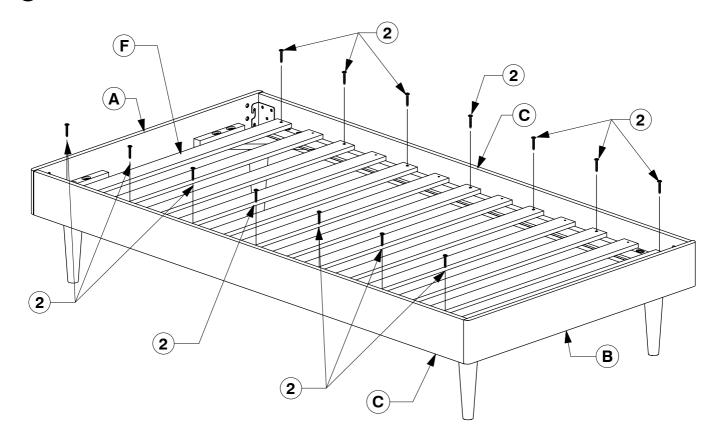

9 Screw the Bed Slats (F) to the Side Rail (C).

