



9751 Full / Queen Headboard

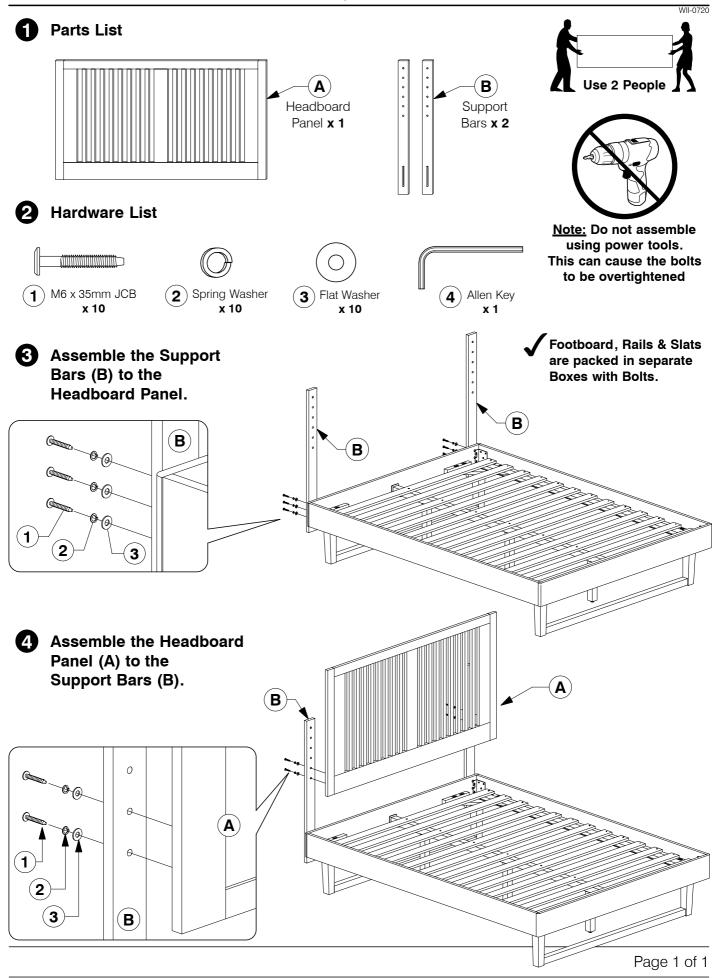



Assembly Instructions


M/II 0.410

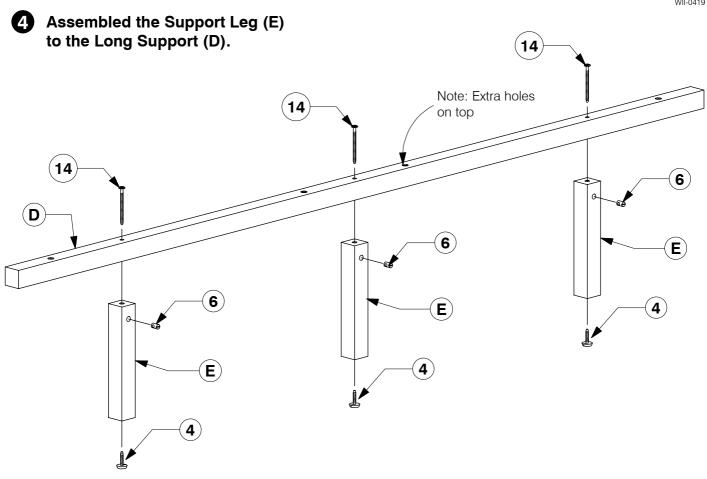


5 Fit the Post (F) to the Support Panel (G).

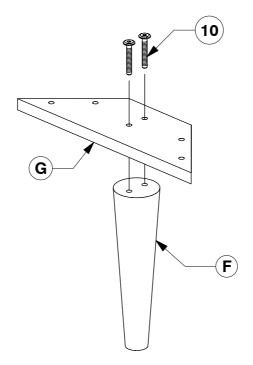

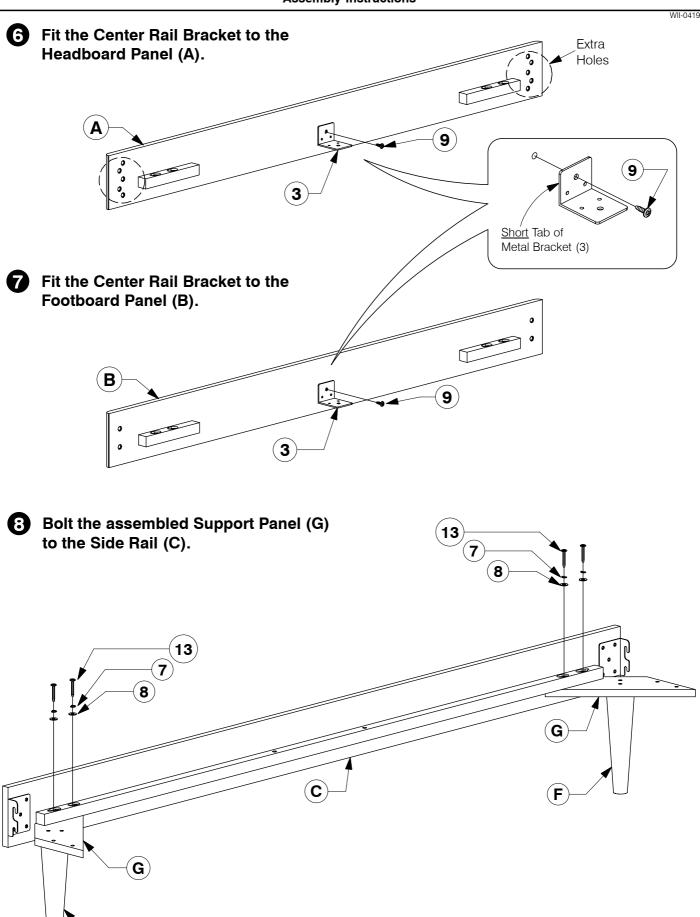

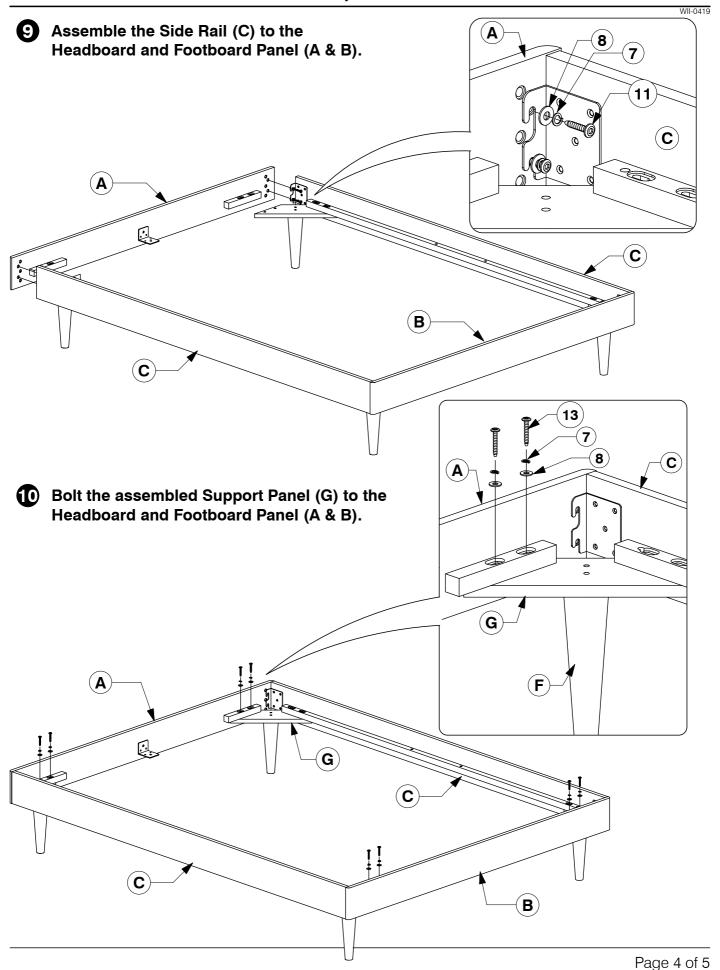

Assembly Instructions

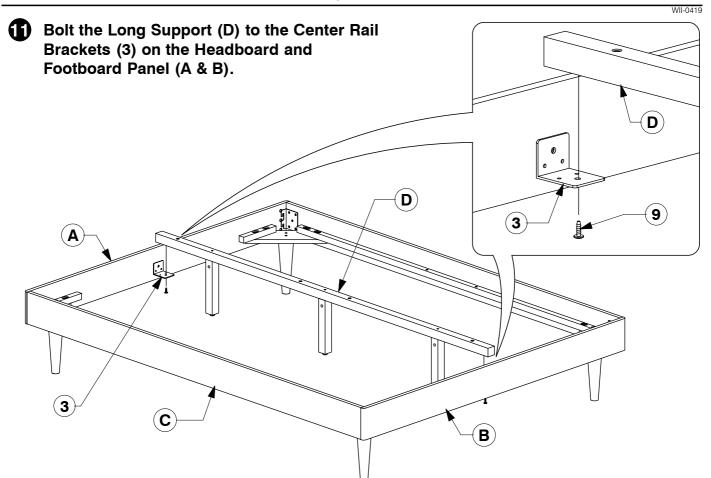

Bolt & screw the Bed Slats (H) to the Side Rail (C).

