

Assembly Instruction Sheet #S-1121P48
For Style 1121P48

Tools Required: Flathead screwdriver, Phillips screwdriver, pliers, wire cutters, wire strippers, electrical tape, safety glasses.

Light Source: (G3) LED G9 MAX SW (Not Included)
Estimated Assembly Time: 15-30 minutes
Preparation: Identify and inspect all parts before beginning installation. Check package content list and diagrams before to be sure all parts are present. If any parts are missing or damaged, do not attempt to assemble, install, or operate the fixture. Contact customer service for replacement parts.

A Warnings and Cautions

Turn off electricity at circuit breaker or main fuse box before installation. Consult a licensed electrician if in doubt. These instructions are provided for your safety. It is very important you read them completely before installing the fixture. We strongly recommend that a licensed, professional electrician perform the installation. Disconnect fixture from power source before replacing bulbs. Make sure bulbs are given sufficient time to cool before removal.

Package Contents

- A First layer x1
- B Second layer x1
- C Third layer x1
- D Ceiling Canopy x1
- 1 Glass x21
- 2 Glass x21
- 3 Glass x14
- 4 Glass x7

Hardware Contents	
PART	DESCRIPTION
BB	Wire nut
CC	Outlet Box Screw
BB	Outlet Box Screw
CC	Outlet Box Screw

STEP 1 - Release Crossbar from Ceiling Canopy .

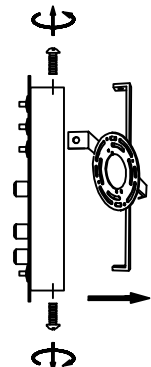


Figure 1

STEP 2- Install Third layer to Ceiling

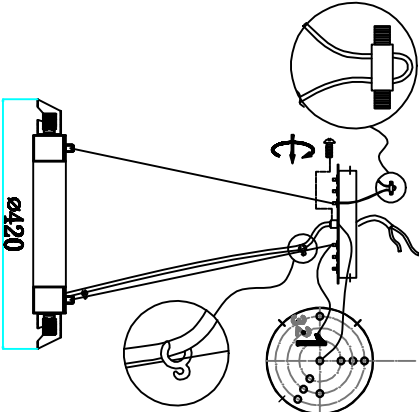


Figure 2

STEP 3- Install Second layer to Ceiling.

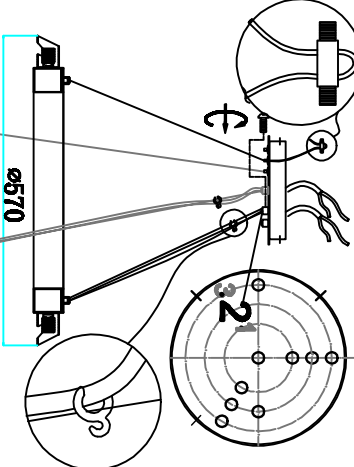


Figure 3

STEP 5 - Wire Connections

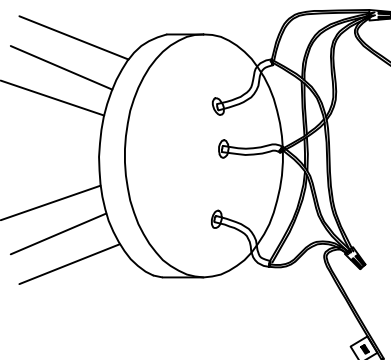


Figure 5

STEP 4- Install First layer to Ceiling

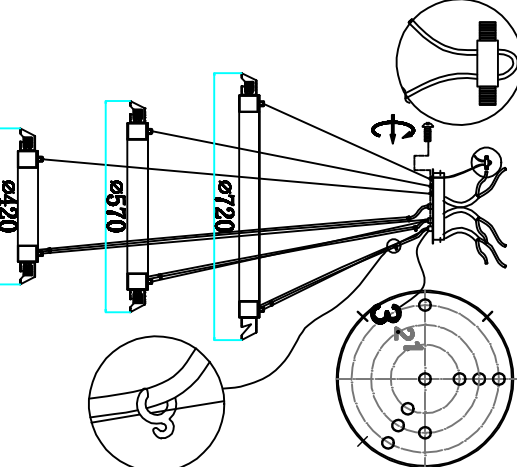


Figure 4

STEP 6 - Attach Crossbar to Outlet Box
A. Pass the supply wires through the Mounting bracket (EE). Attach the Mounting bracket (EE) to the Outlet Box with the head of the Green Ground Screw facing you. Secure it with Outlet Box Screws (CC). Tighten until snug.

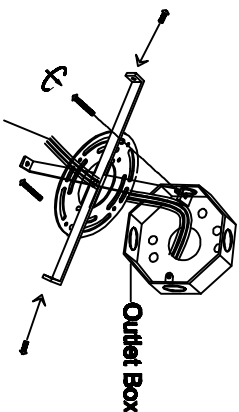


Figure 6

Supply Wires with
Outlet Box Screws Ground Wire

STEP 7 - Wire Connections

- A** Use standard wire connectors to make all wire connections. Twist connectors until wires are tightly joined together. Wrap each connection with approved electrical tape and carefully stuff all the connected wires into the Outlet Box.

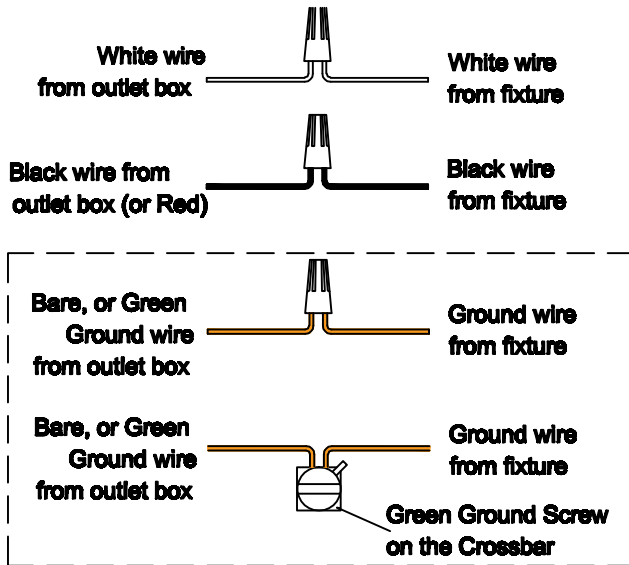


Figure 7

STEP 8 - Install Ceiling Canopy to Ceiling

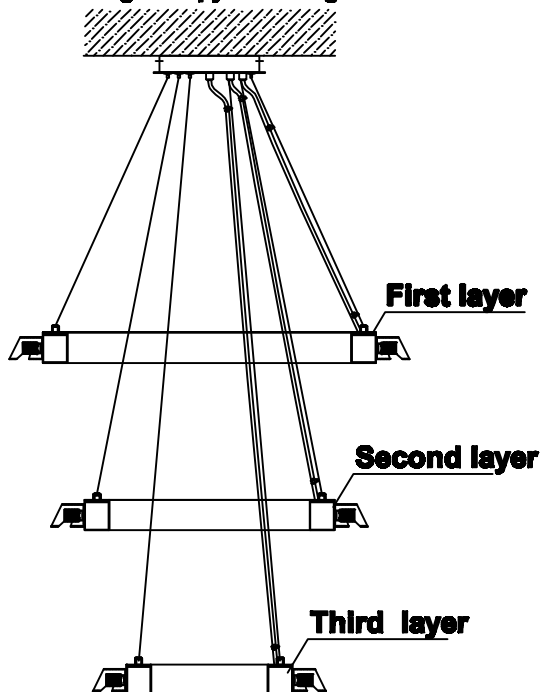


Figure 8

STEP 9 - Install Glass and bulb.

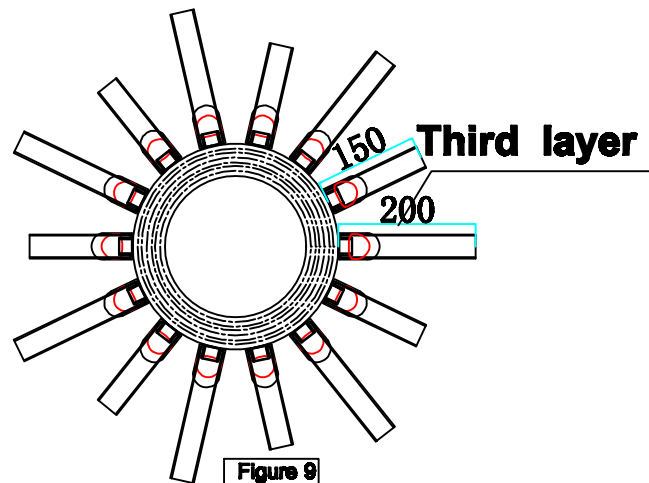
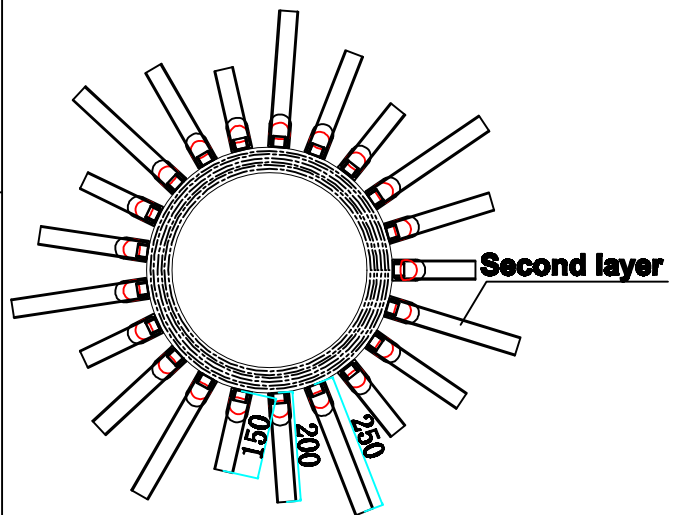
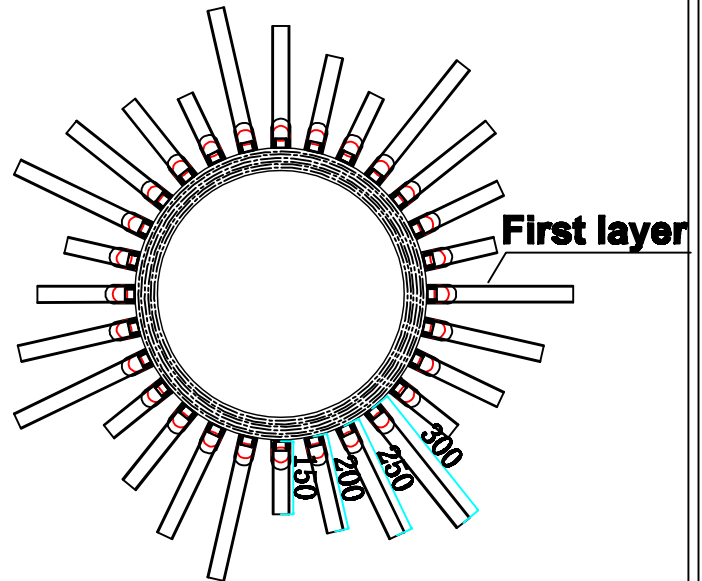


Figure 9