# Assembly Instruction LSF CHAISE ITEM NO.: 194S9509MGY/DG-5L

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.


# **COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

# **HARDWARE LIST (FOR RRPWH)**


NO.	DRAWING	QTY	DESCRIPTION
1		1 PC	ADAPTOR
2		1 PC	PLUG WITH WIRE

STEP#1 QP-AI-P022-108-1

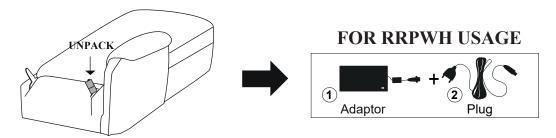


# STEP#2


Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

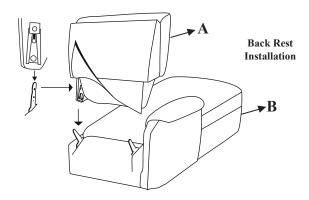

# STEP#3

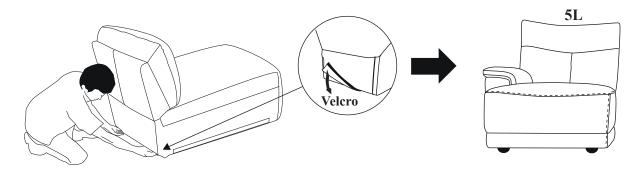


# STEP#4




#### **REMARK:**


\*Adaptor set is packed in 5L for sectional combination with RRPWH.



#### **REMARK:**

\*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.

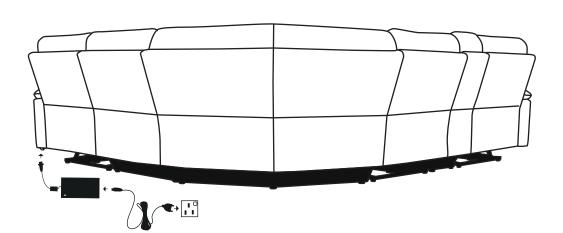

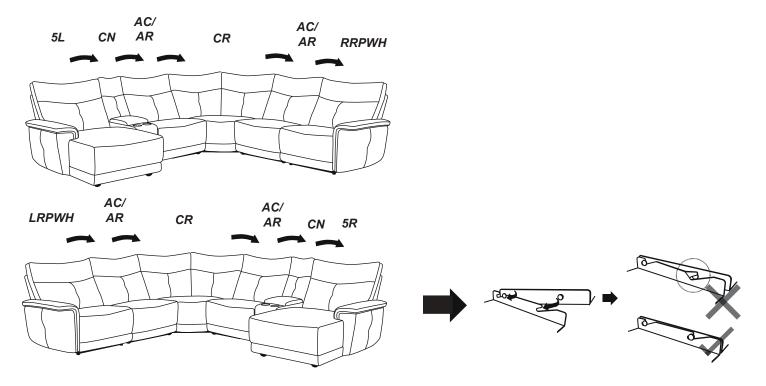

## CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

# Assembly Instruction ITEM NO.: 194S9509MGY/DG-AC ARMLESS CHAIR


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

# **COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	SEAT

STEP#1 QP-AI-P022-105-1

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

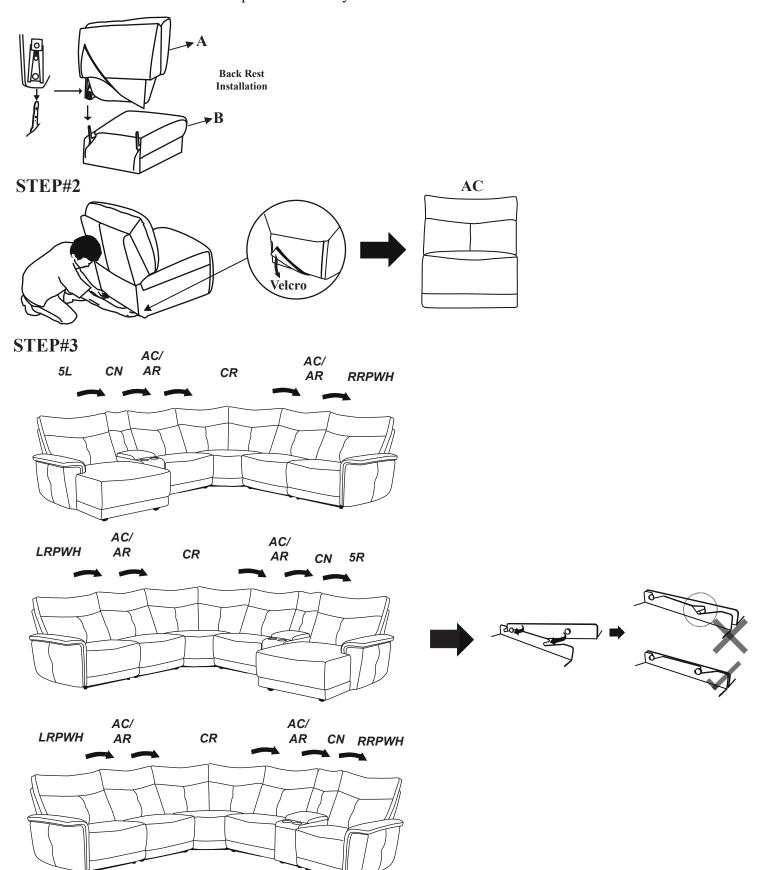

# **CARE INSTRUCTION FOR POLYESTER:**

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

# Assembly Instruction ITEM NO.: 194S9509MGY/DG-CR CORNER SEAT


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

# **COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	LSF CORNER BACK REST
В		1 PC	RSF CORNER BACK REST
C		1 PC	CORNER SEAT


# **HARDWARE LIST**

NO.	DRAWING	QTY	DESCRIPTION
1		1 PC	EXTENSION CORD
2		1 PC	WRENCH
3		1 PC	ALLEN KEY

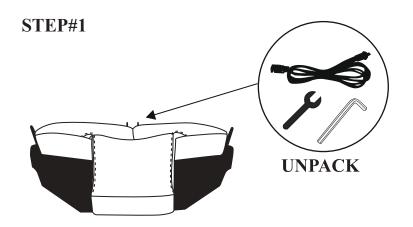





# STEP#3

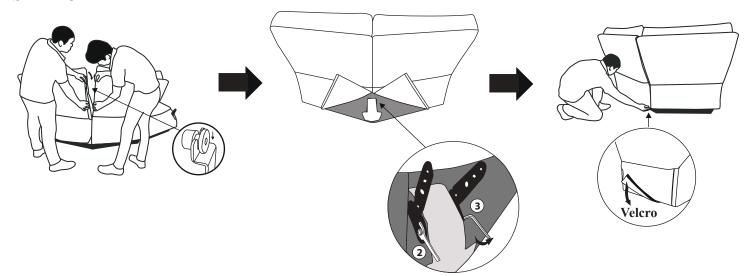


# STEP#4

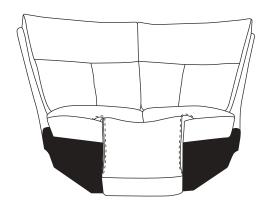




#### **REMARK:**

\*Adaptor set is packed in 5L for sectional combination with RRPWH.




#### **REMARK:**

\*Adaptor set and Y cable are packed in LRPWH for sectional combination with RRPWH.

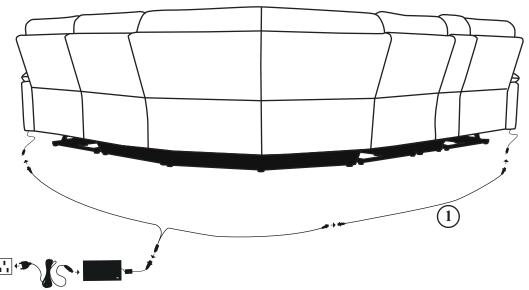

## STEP#6

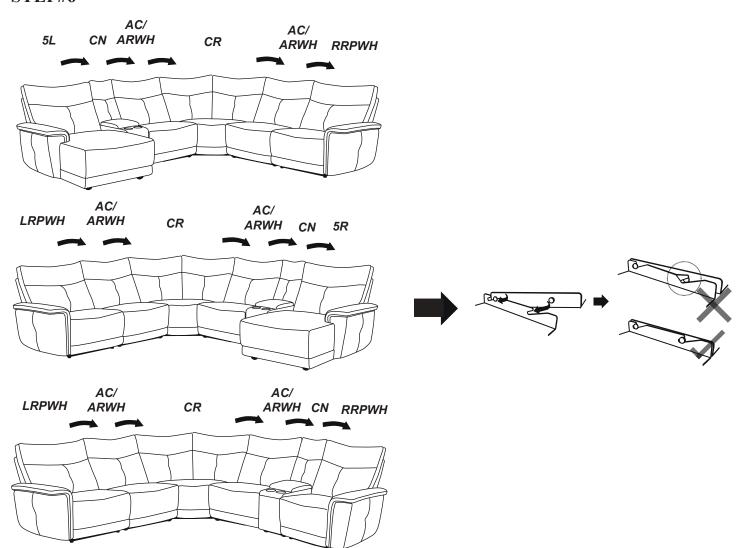

## CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

# Assembly Instruction ITEM NO.: 194S9509MGY/DG-CN CONSOLE WITH STAINLESS STEEL CUPHOLDERS


NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

# **COMPONENT LIST (CHAIR)**


NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	BACK REST
В		1 PC	CONSOLE


STEP#1 QP-AI-P022-107-1


Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

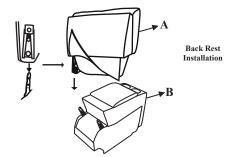

# STEP#2

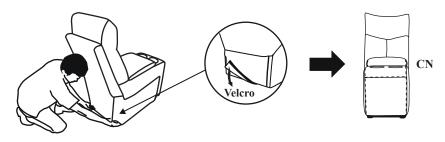


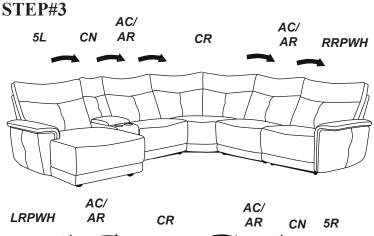

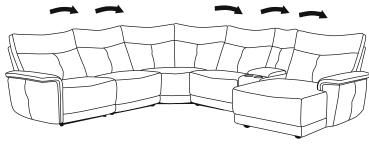

CR





# CARE INSTRUCTION FOR POLYESTER

AC/

AR

**LRPWH** 

In order to maintain the original appearance of your polyester furniture, please follow below simple care procedure:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.

AC/

AR

CN


# Assembly Instruction ITEM NO.: 194S9509MGY/DG-RR RSF RECLINING CHAIR

NOTE: Do not use power tools for assembly. Power tools increase the risk of over tightening which leads to splitting or cracking the wood.

# **COMPONENT LIST (CHAIR)**

NO.	DRAWING	QTY	DESCRIPTION
A		1 PC	RSF BACK REST
В		1 PC	RSF SEAT

Align the female brackets at the back rest onto the male brackets at the seat, insert back rest to the seat then push to the end and make sure it is fixed in position securely.

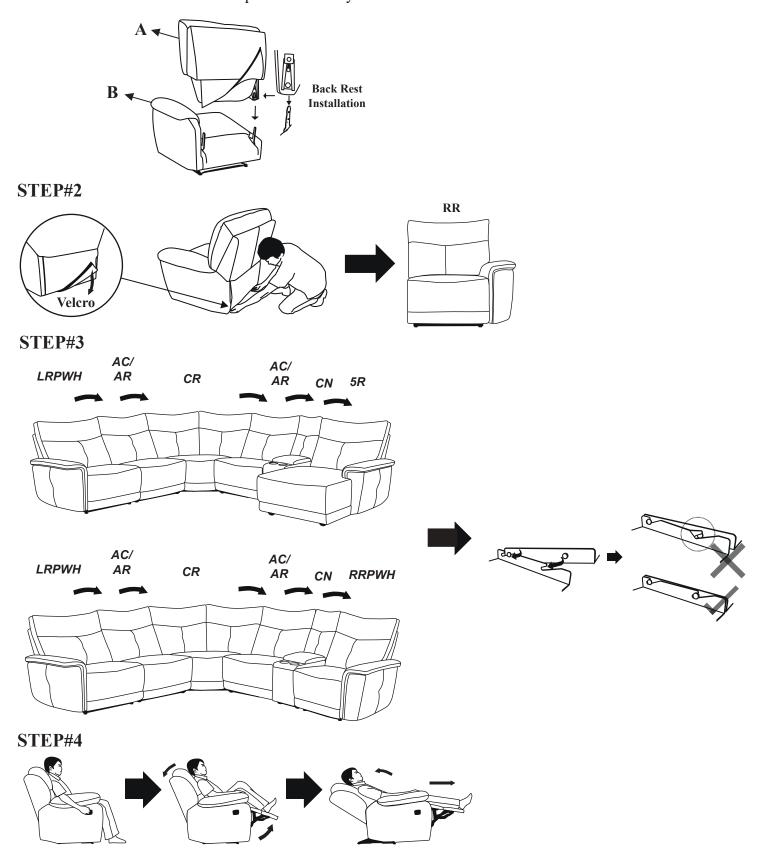

## CARE INSTRUCTION FOR POLYESTER:

- Avoid exposing furniture directly to sunlight or heating and air conditioning outlets. Exposure to sunlight or heating and air conditioning outlets will fade/damage polyester.
- Wipe gently with a damp soft cloth to remove dust, dirt and any grime build up.