


INSTRUCTION MANUAL

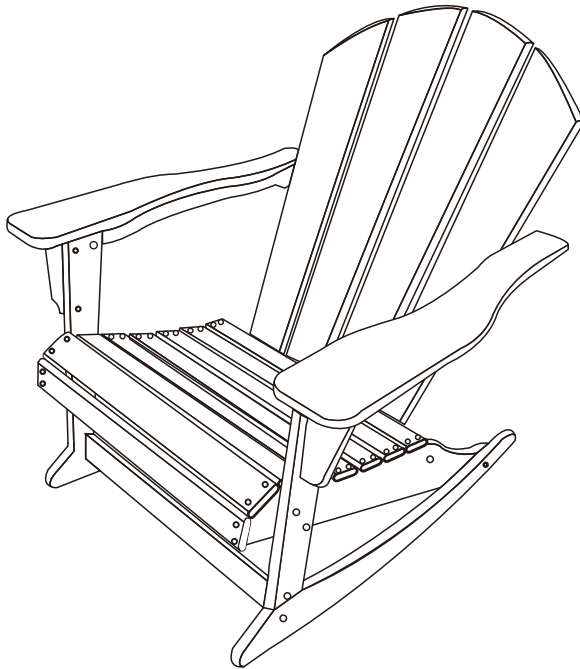

Outdoor Rocking Poly Adirondack Chair
SKU: 2001-RC

! NOTICE

Do not overtighten screws. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Be aware that some parts are heavy and have sharp edges.
- Be very careful when folding chair to avoid smashing your hands or fingers.

TOOLS REQUIRED



ALLEN WRENCH
(PROVIDED)



WRENCH
(PROVIDED)



CHAIR
330 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 30 MIN.
ASSEMBLY

HARDWARE

1


M6 x 80mm
SCREW



2 PCS

2


M6 x 50mm
BOLT



6 PCS

3


M6 x 50mm
BOLT



6 PCS

4

M6 x 60mm
BOLT



2 PCS

5

ST4 x 45mm
SCREW



4 PCS

6

M6 NUT



8 PCS

7


M6 WASHER



8 PCS

8

WRENCH



1 PC

9

ALLEN
WRENCH




1 PC

PARTS

A


CHAIR SEAT

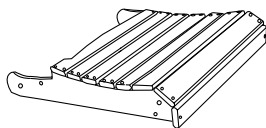

1 PC

B


CHAIR BACKREST

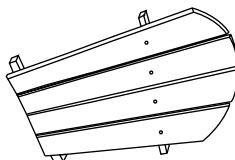

1 PC

C

LEFT CHAIR ARM

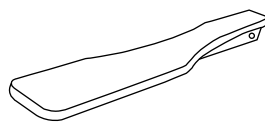


1 PC

PARTS

D


RIGHT CHAIR ARM

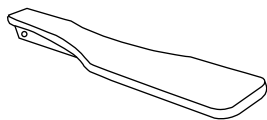

1 PC

E


LEFT CHAIR LEG

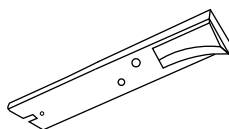

1 PC

F

RIGHT CHAIR LEG

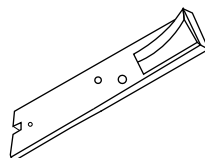

1 PC

G


ROCKING BASE



2 PCS

H

FRONT RAIL

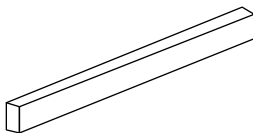


1 PC

PRODUCT ASSEMBLY - OVERALL VIEW

1

Look at following overall view of this chair and learn the exact position of each parts to be assembled.

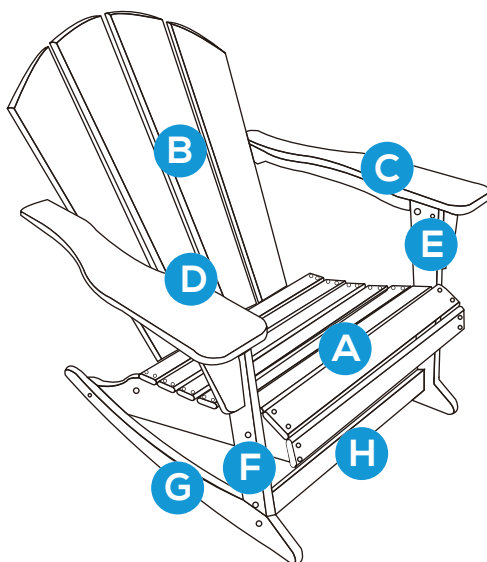


PRODUCT ASSEMBLY

1


Attach part C Left Chair Arm to part E Left Chair Leg with 1 PC of part 4 bolt and part 7 washer and part 6 Nut. Do same to part F Right Chair Leg and part D Right Chair Arm.

Do not tighten screws too much at this stage.

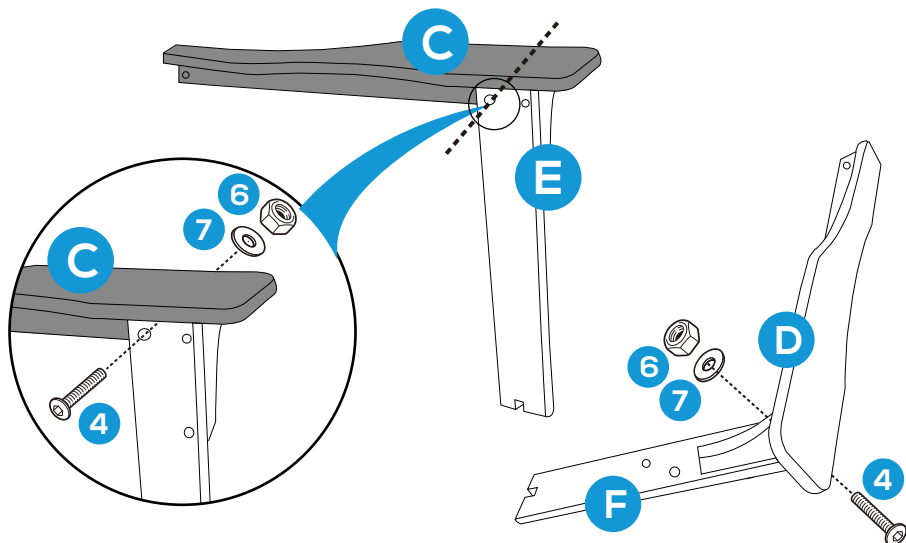

2


Attach part F right Chair Leg and part E Left Chair Leg to part A Chair Seat with 4 PCS of part 2 bolt and part 7 washer and part 6 Nut.

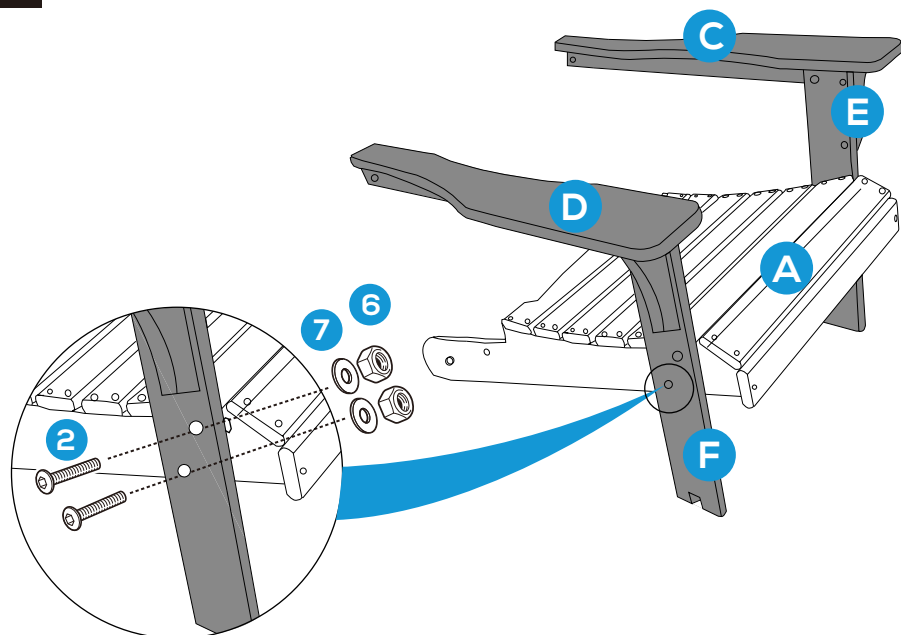

PRODUCT ASSEMBLY

3

Attach part F Backrest to part A Chair Seat and part D Right Chair Arm as well as part C Chair Left Arm with 2 PCS of part 1 Screw and 2 PCS of part 3 Screw.

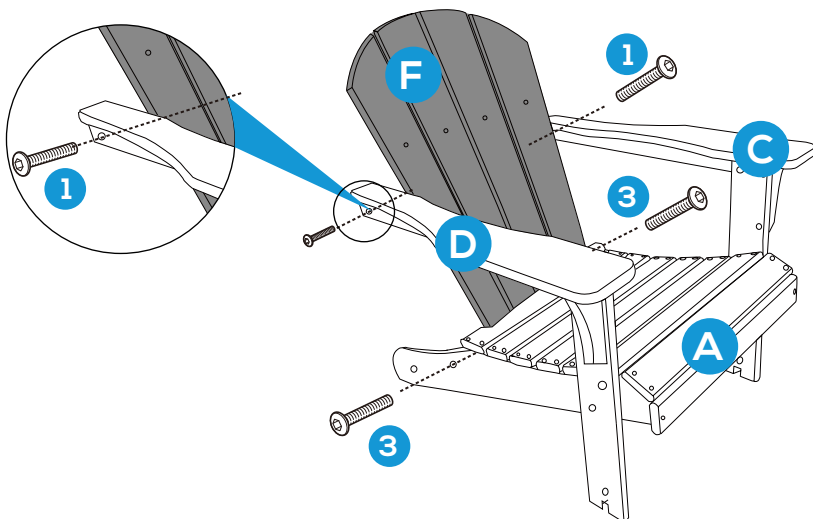


4

Turn the chair upside down and fix part G Rocking Base to part E Chair Left Leg and fix with 2 PCS of part 5 Screw using the cross head of Allen wrench provided.

Attache the rocking base to part A Chair Seat with 1 PC of part 2 bolt and part 7 washer and part 6 nut.

Do the same to the other Rocking base.

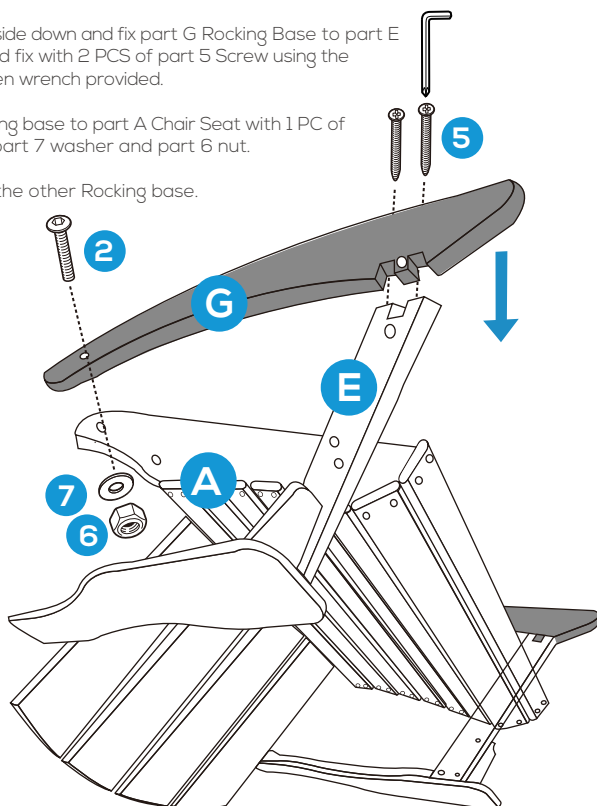


PRODUCT ASSEMBLY

5

Attach part H Front rail with part G Rocking base to part G Rocking base and part E Left Chair Leg with 2 PCS of part 3 bolt.


Do the same to the right side to finish the assembly.

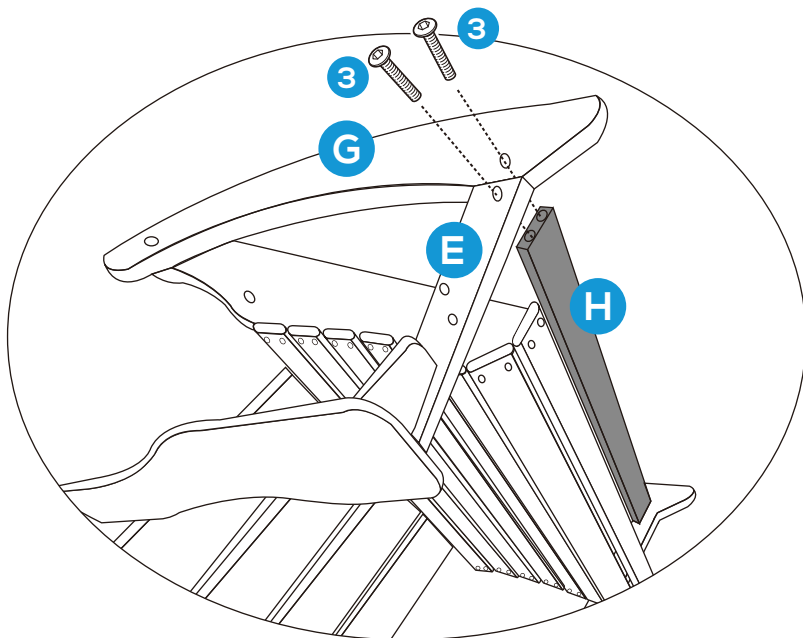

Tighten all the screws and bolt connections to ensure a steady use of this chair.



INSTRUCTION MANUAL

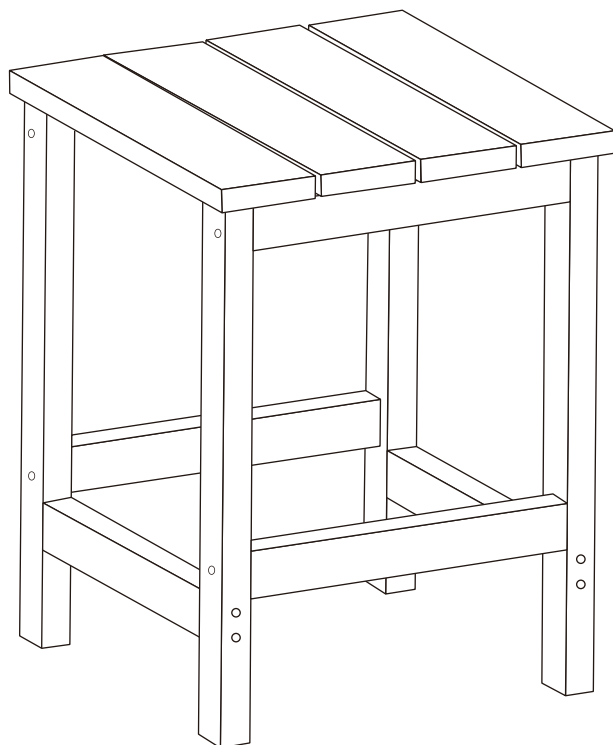

Outdoor Poly Adirondack Side Table
SKU: 2001-CS

! NOTICE

Do not overtighten screws or bolts. (Insert all screws before tighten screws.)

- Please do not exceed the weight limitations of this item.
- Do not stand on or use any part of this item as a step ladder.
- Firmly secure all bolts, screws and nuts before use.
- Reconfirm that all bolts, screws, and nuts are secure every 90 days.
- Do not use or store this item in the proximity of open flame or flammable/combustible chemicals.
- Avoid using strong power tool for avoiding to crack the PE board when assembling.

NO TOOLS REQUIRED



TABLE
180 LBS
CAPACITY



1 PERSON
ASSEMBLY




UP TO 20 MIN.
ASSEMBLY

HARDWARE

1

M6x45mm
BOLT



8 PCS

2

ALLEN
WRENCH




1 PC

PARTS

A


TABLE TOP



1 PC

B


TABLE LEG



2 PCS

C

WOODEN BRACE

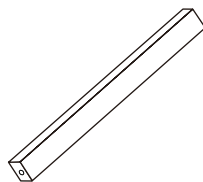


2 PCS

PRODUCT ASSEMBLY

1


Attach part B Table Leg to part A Table Top with 2 PCS of part 1 bolt using an allen wrench

Do not tighten screws too much at this stage.

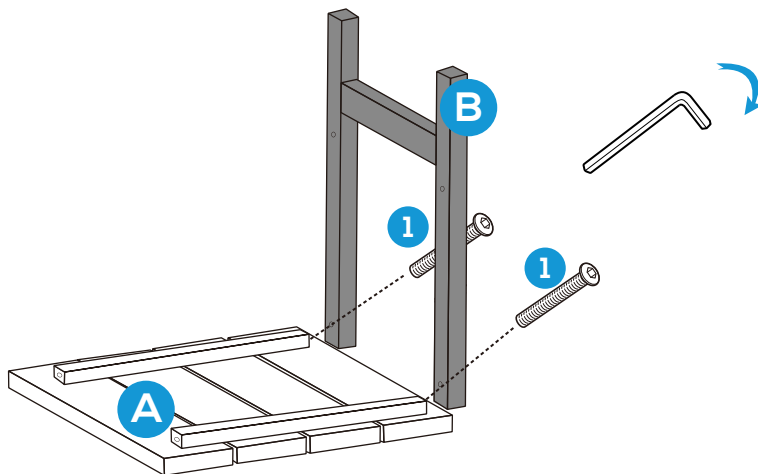

2

Attach part C Table Wooden Braces to part B Chair Leg with 2 PCS of part 1 bolt.

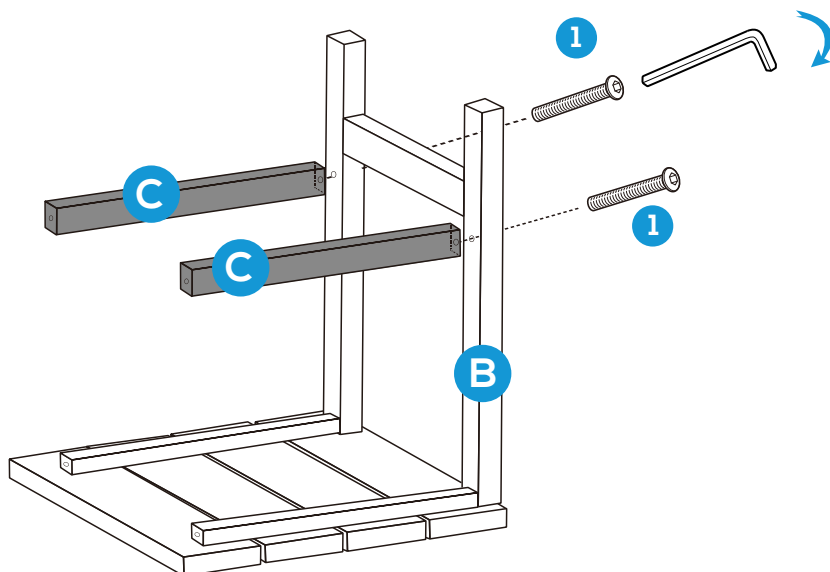

PRODUCT ASSEMBLY

3

Attach part B Table Leg to part A Table Top and part C Wooden brace with 2 PCS of part 1 bolt using an Allen wrench.

