


# ASSEMBLY INSTRUCTIONS

SKU: DLC-W



175 Southbelt Industrial Dr,  
Houston, TX 77047

Email: [sales@eastwestfurniture.net](mailto:sales@eastwestfurniture.net)

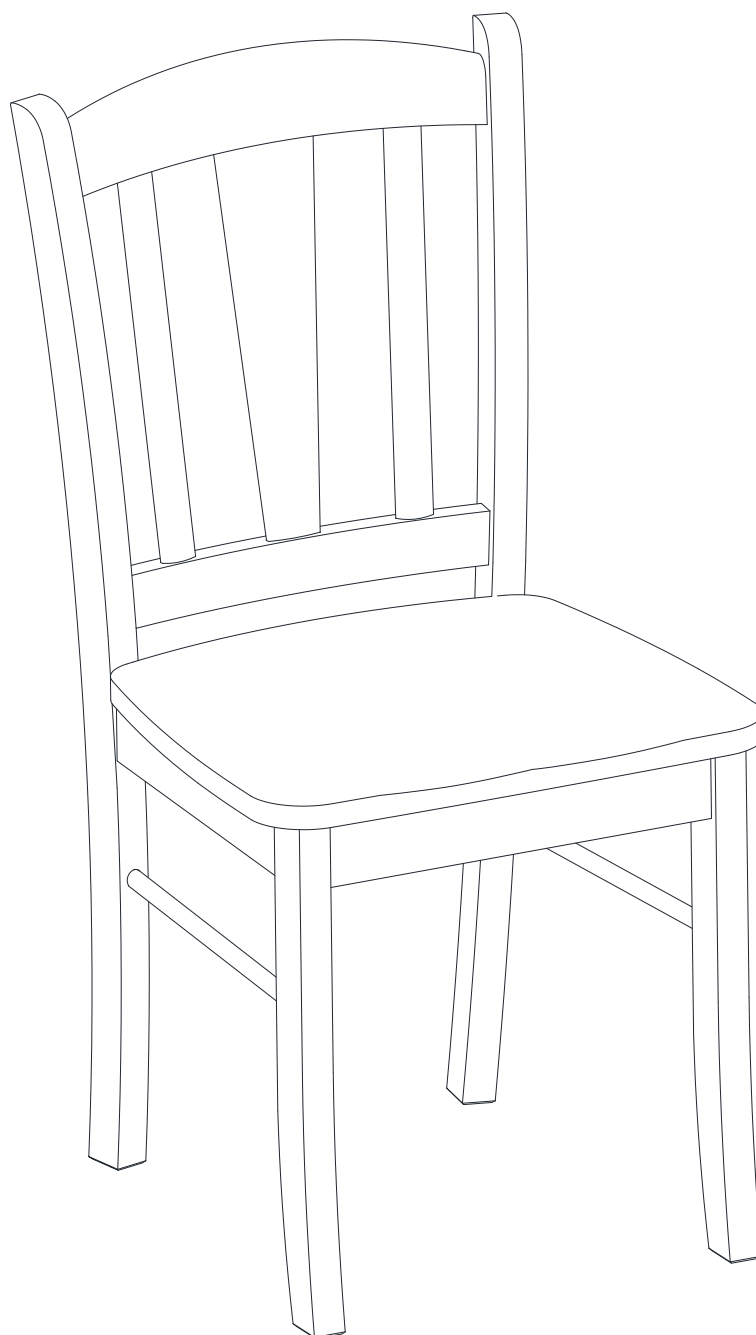

*Description: DUBLIN CHAIR WITH WOOD SEAT*

Product Dimension : W.18"xD.19" 1/2xH.35" 1/2

Cube Size : 37.5"x19.4"x9.4"

NW: 28.6 LBS

GW: 35.2 LBS

**DUBLIN CHAIR WITH WOOD SEAT**

## BEFORE ASSEMBLY

Thank you for purchasing our product. This product has been designed for easy assembly and long lasting use. Please take the time to read and follow the assembly instructions carefully.

Be sure to check all packing material carefully for small parts which may have come loose inside the carton during shipment. Please separate, identify, and count all parts and metal hardware. Compare with part list to be sure all parts are present.


If hardware is missing or you have difficulty assembling this product, please call for us.

### IMPORTANT NOTE:

- Place all wooden parts on a clean and smooth surface such as a rug or carpet to avoid the parts from being scratched.
- Remove all wrapping material, including staples & packing straps before you start to assemble.
- DO NOT tighten all screws and bolts until completely assembled.
- Keep all hardware parts out of reach of children.






### ASSEMBLY TOOLS REQUIRED

NOT INCLUDED

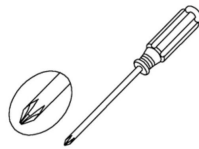

## PART LIST

When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have the following parts:

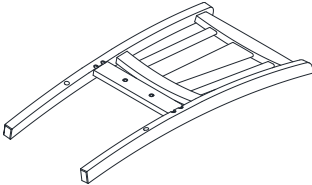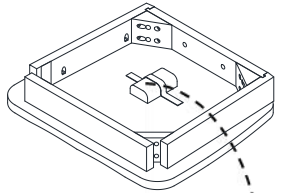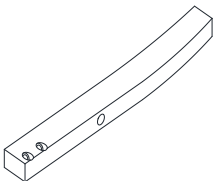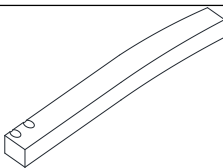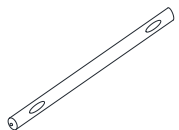NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
A	Chair back	1		B	Seat Frame	1	 <div data-bbox="1193 1411 1497 1529" style="border: 1px dashed black; padding: 5px; margin-top: 10px;">                     Hardware bag location                 </div>
C-R	Front Leg	1					
C-L		1		D	Side stretcher	2	

**DUBLIN CHAIR WITH WOOD SEAT**

## HARDWARE LIST


When unpacking, please be careful not to discard any parts with the packaging. Before continuing, please make sure you have all of the following hardware:

NO	Description	Qty	Sketch	NO	Description	Qty	Sketch
1	Long bolt (M6x80mm)	4		2	Medium bolt (M6x60mm)	4	
3	Short bolt (M6x40mm)	2		4	Lock Washer (Ø6.5X9)	10	
5	Flat Washer (Ø6.5x19)	10		6	Allen Key (4mm)	1	
7	Screw (M4x30mm)	4					

### STEP 1

**Attach** frame (B) to the back (A) by using bolts (3) and (1) and washers (4) and (5). Tighten with Allen Key (6).

Note: **DO NOT** tighten any of the bolts, until the chair is assembled.

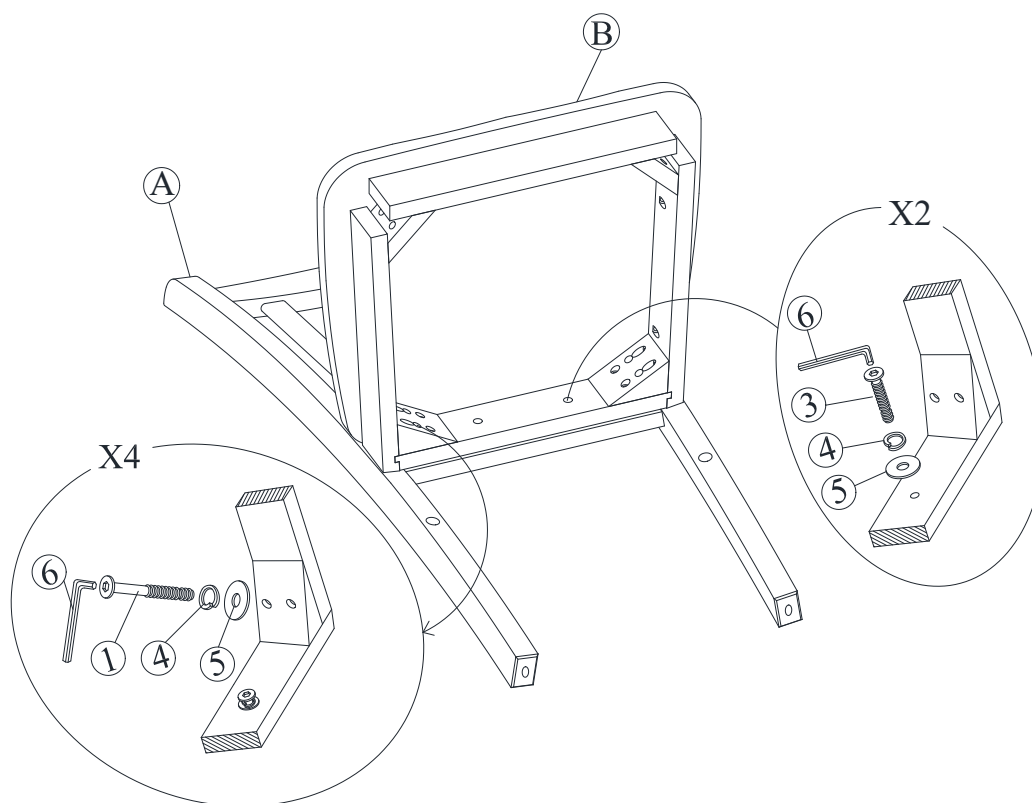


**DUBLIN CHAIR WITH WOOD SEAT**

## STEP 2


Attach front legs (C-L) and (C-R) to the seat frame. Use bolts (2), washers (4) and (5). Tighten with Allen Key (6).

**Note:** DO NOT tighten any of the bolts, when chair is assembled, then tighten the bolts and the screws.

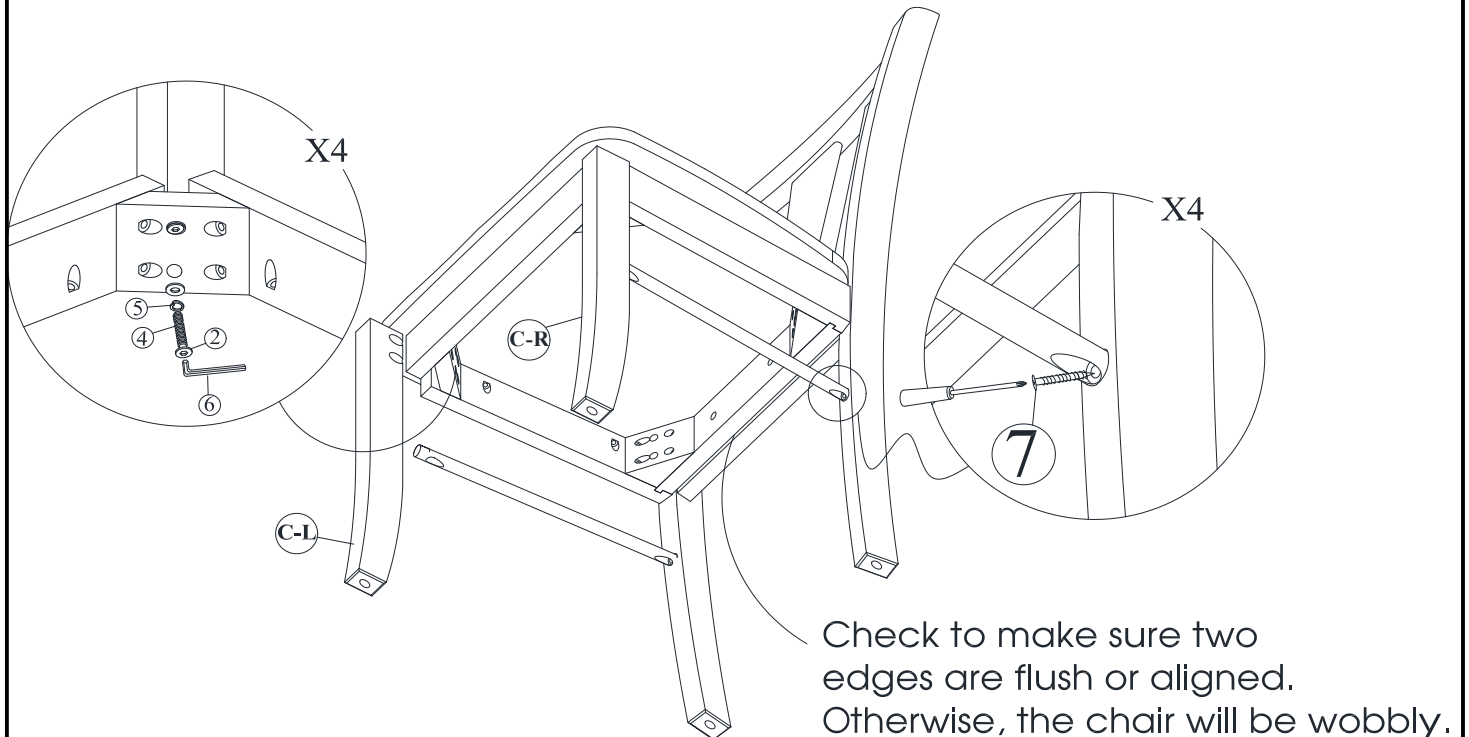

## STEP 3

Put the chair on a flat level surface to make sure the chair is level and then tighten the all bolts.

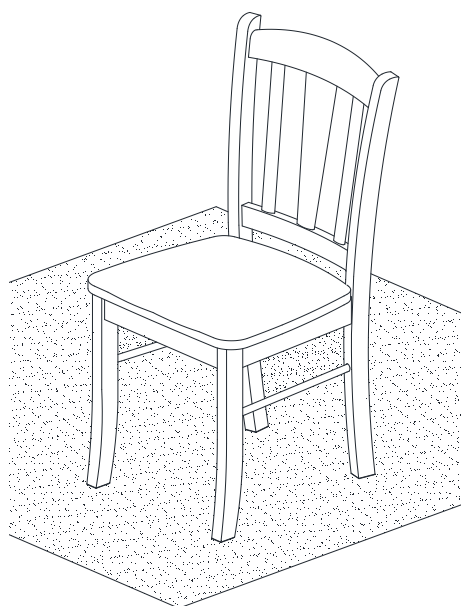

**DUBLIN CHAIR WITH WOOD SEAT**