
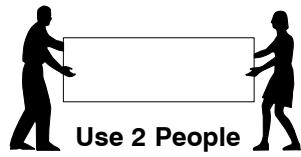


# 0016-1 Full Daybed

## Assembly Instructions


WII-0720

### 1 Assembled View

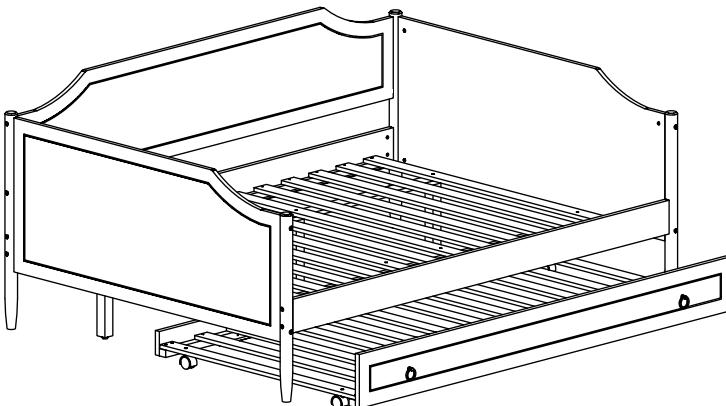


**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts in this Box

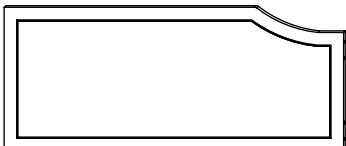

**A** Side Panel (Left Hand) **x 1**

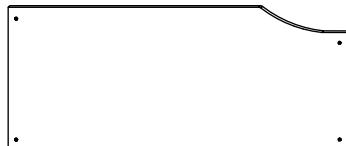

**B** Side Panel (Right Hand) **x 1**



**C** Back Panel **x 1**




**D** Side Rail **x 2**




**F** Support Leg **x 4**

Slats are packed in separately in Box B

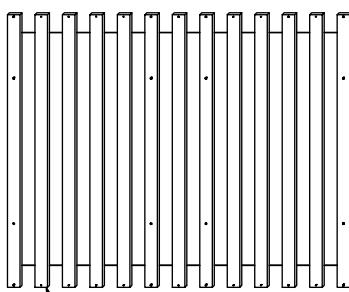

**L** Set of Slats **x 1**

### 3 Hardware in this Box




**E** Long Support **x 1**



**1** M6 x 90mm JCB **x 24**



**4** Barrel Nut **x 24**



**2** M6 x 40mm JCB **x 8**




**5** Wood Dowel (10 x 40mm) **x 16**




**3** Wood Screw (M4 x 32mm) **x 18**



**6** Allen Key **x 1**



**7** Adjustable Foot **x 4**

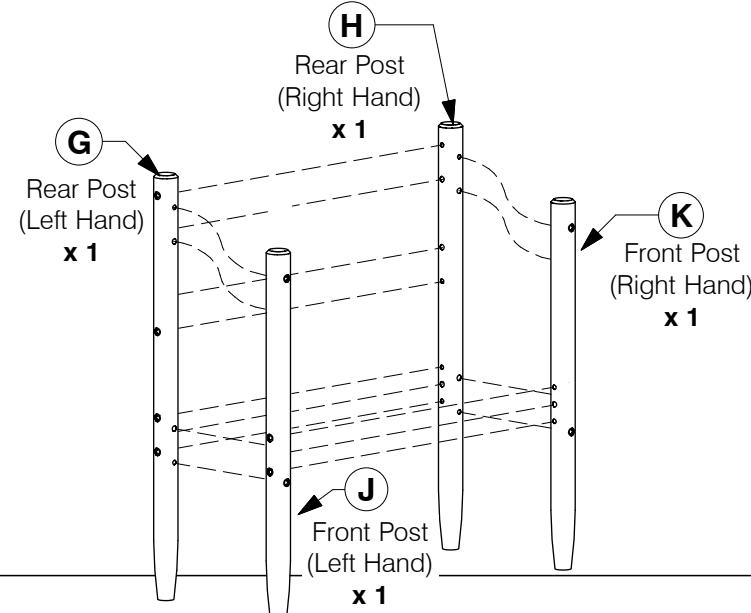


# 0016-1 Full Daybed


## Assembly Instructions

WII-0720

**4** Fit the Adjustable foot to the bottom of the Support Leg (F).

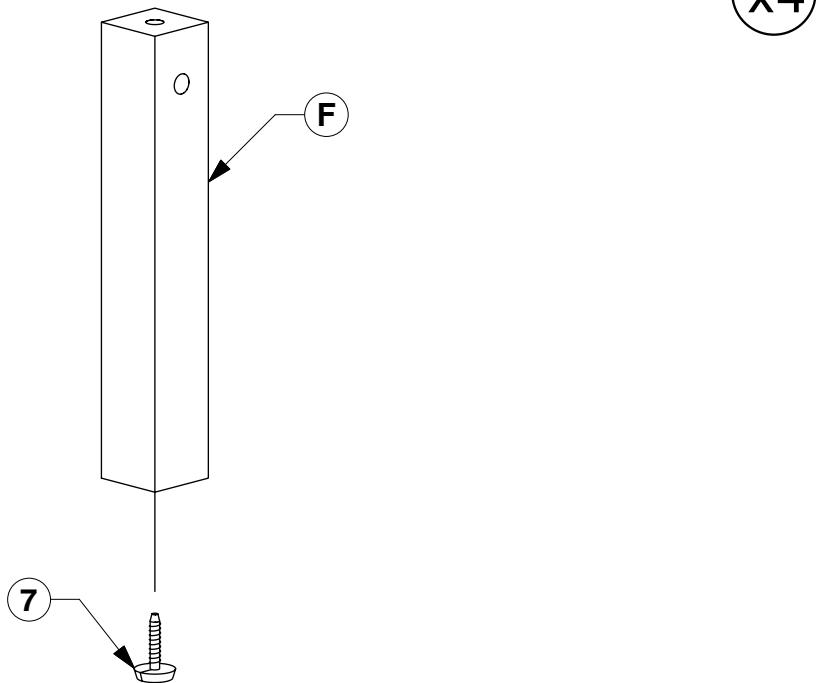

**5** Assemble the Rear Post (G/H) to the Side Panel (A/B).

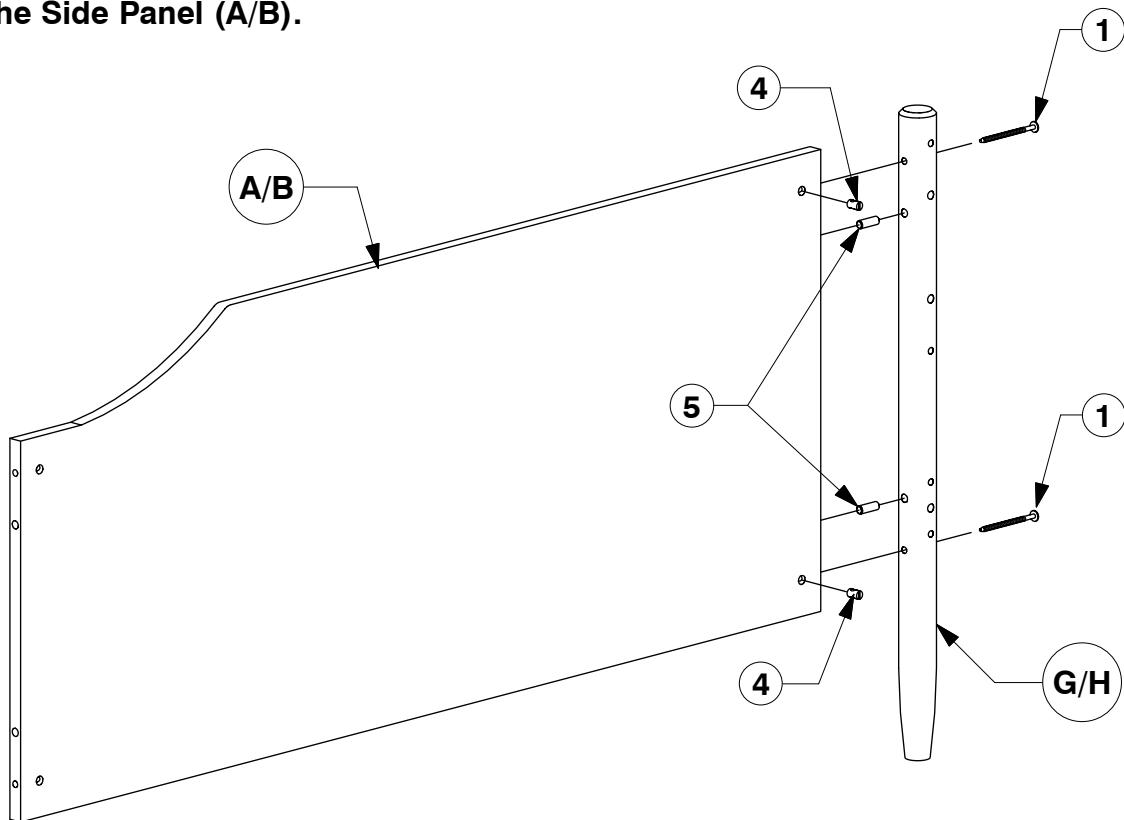


# 0016-1 Full Daybed


## Assembly Instructions

WII-0720

### 6 Assemble the Front Post (J/K) to the Side Panel (A/B).

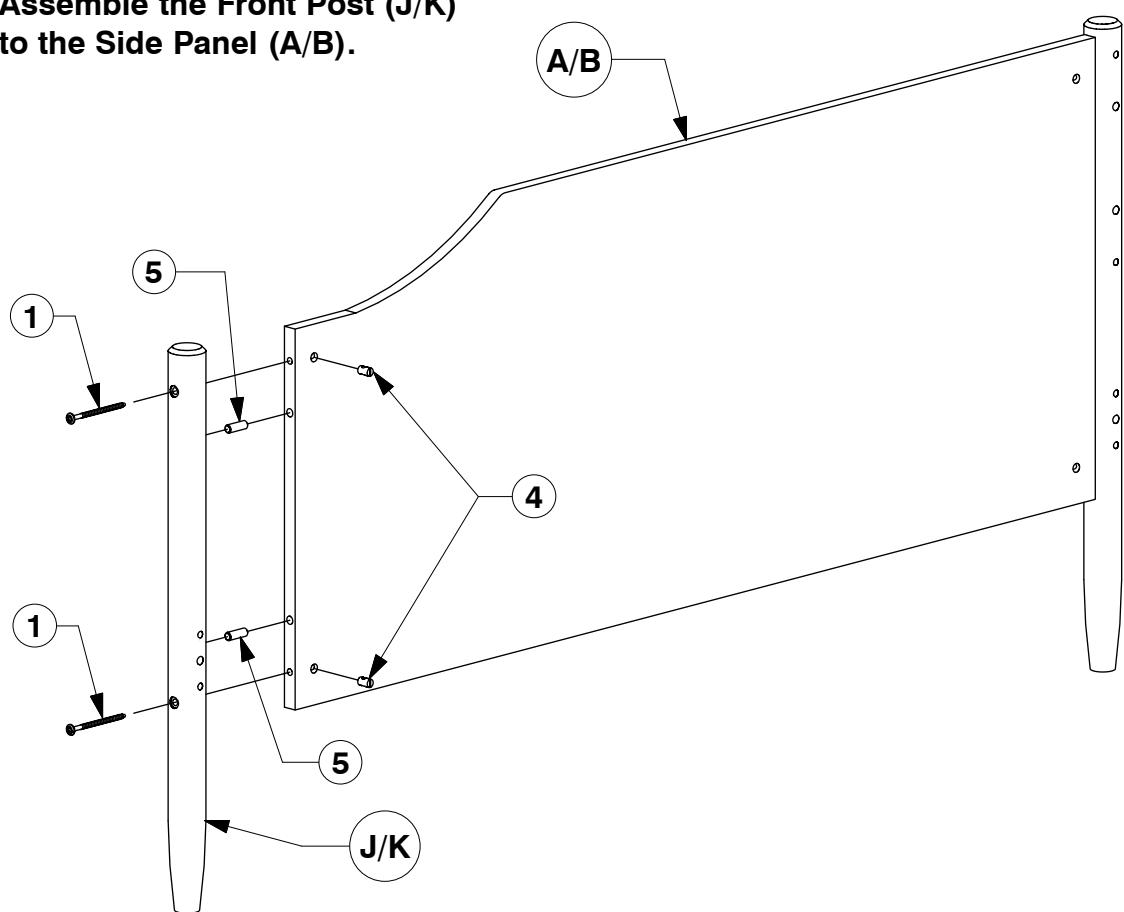

### 7 Assemble the Side Panel (A/B) to the Back Panel (C) & Side Rail (D).

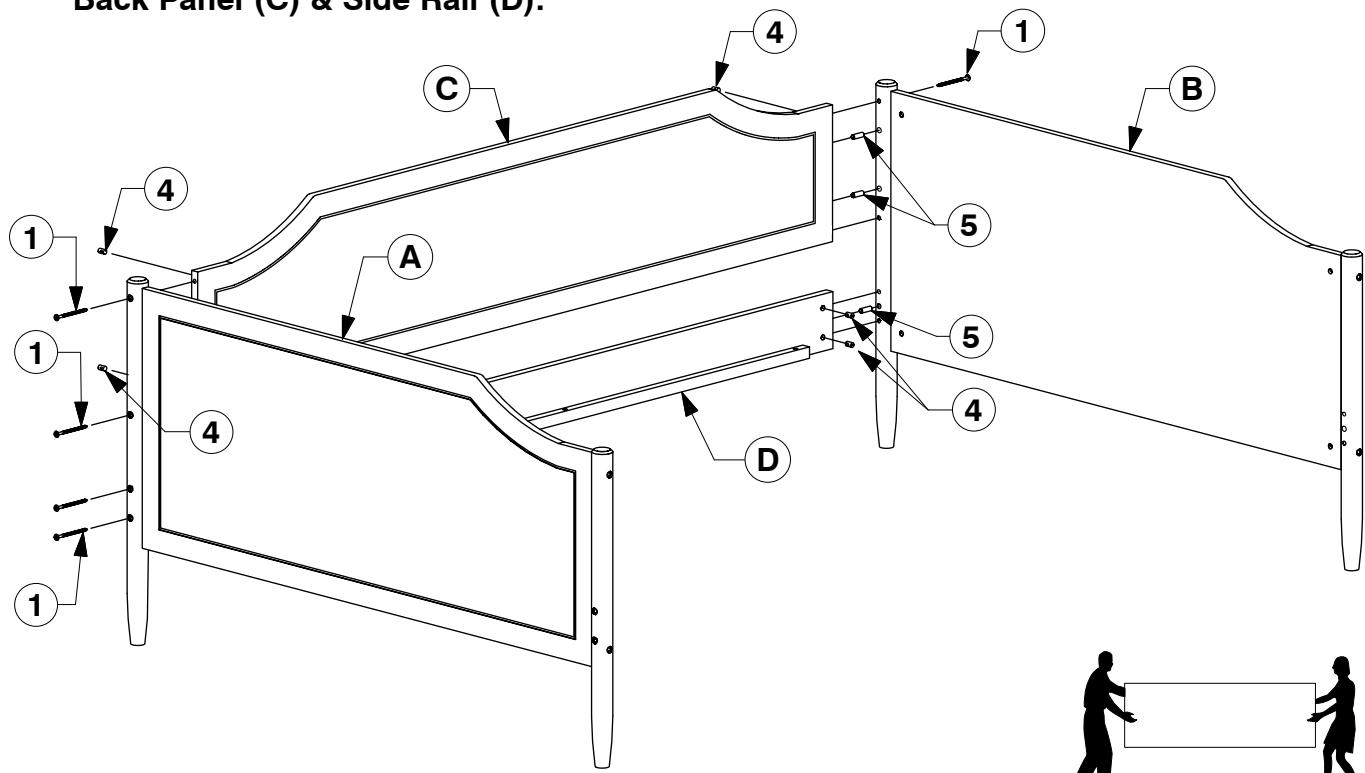


# 0016-1 Full Daybed


## Assembly Instructions

WII-0720

8 Assemble the Side Panel (A/B) to the Side Rail (D).

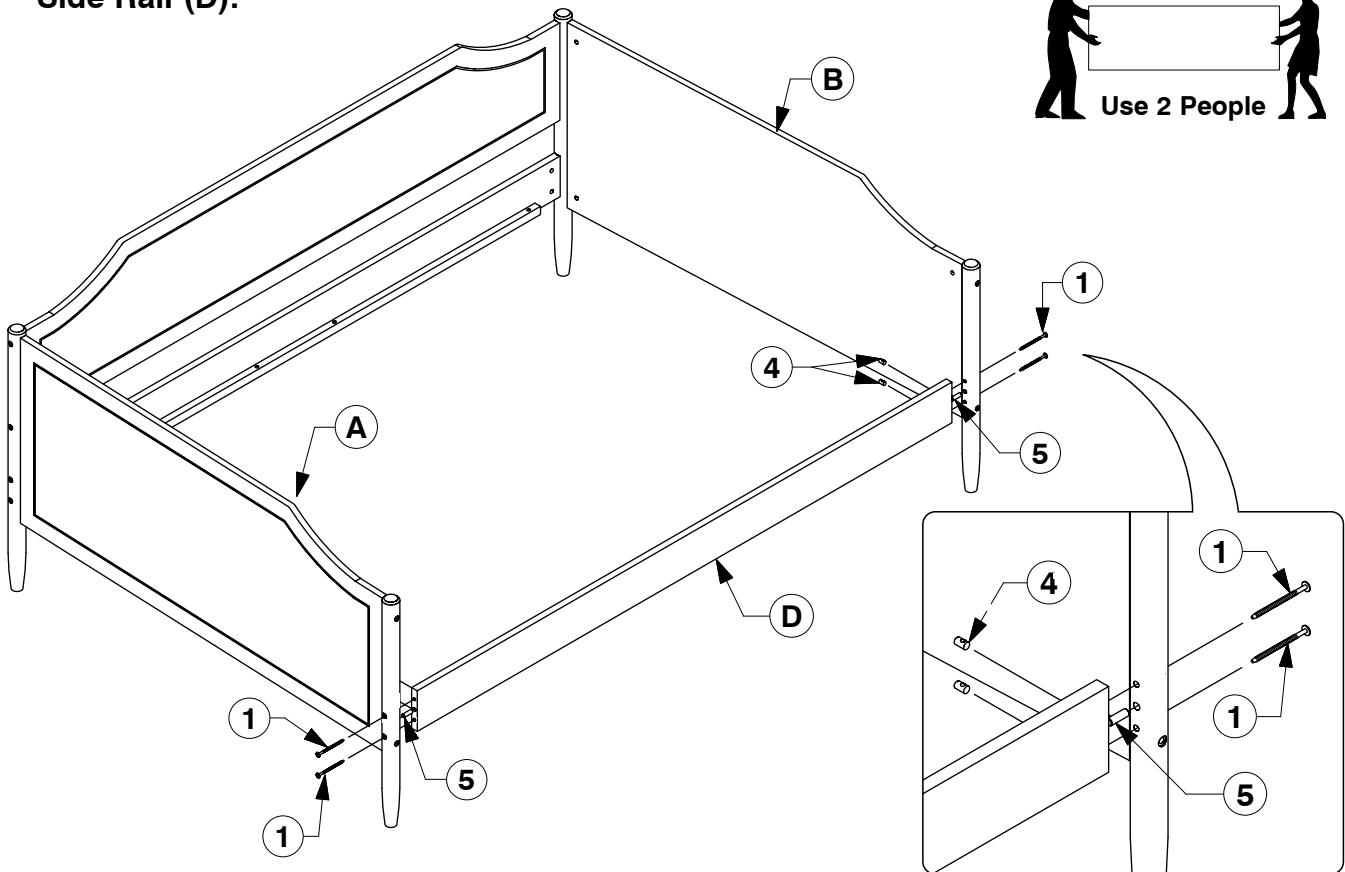

9 Fit the first Slat and assemble the Support Leg (F) to the Bed Slat (L). Bolt the Bed Slats (L) to the Side Rail (D) & Long Support (E).

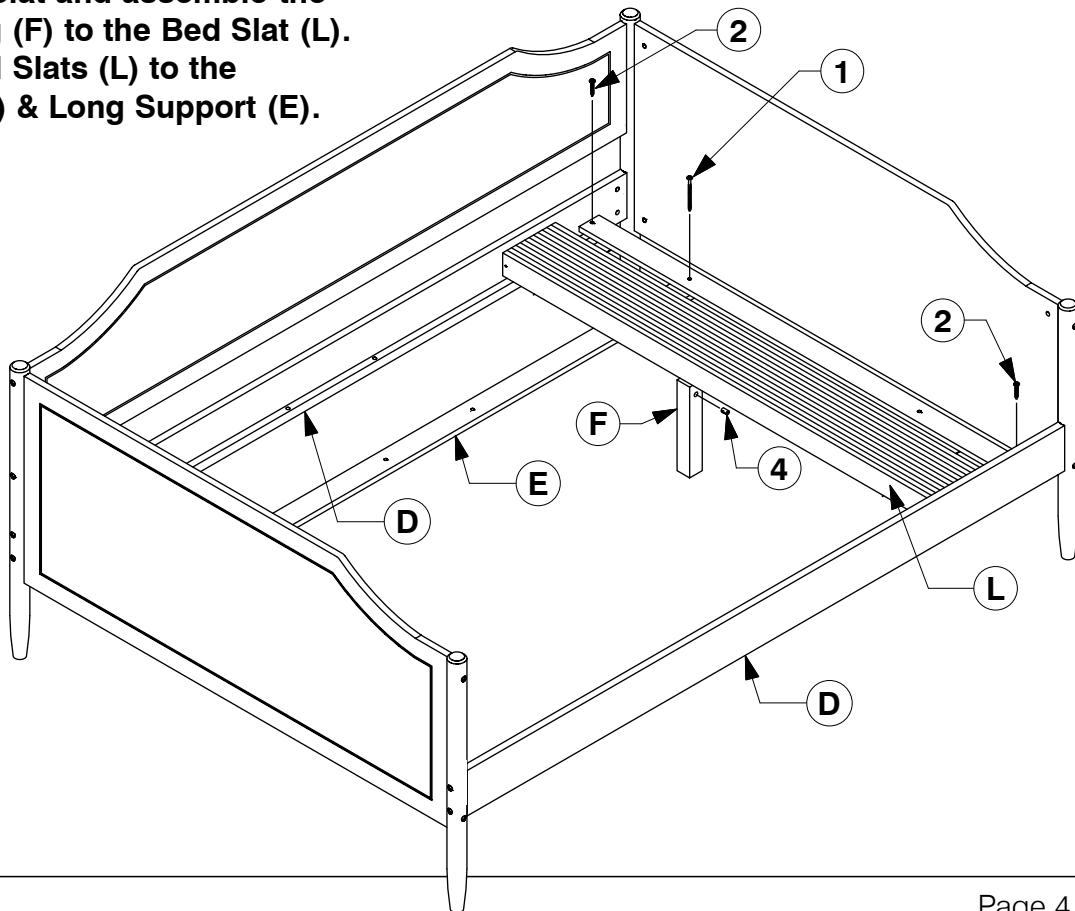


# 0016-1 Full Daybed


## Assembly Instructions

WII-0720

**10** Fit the other Slats out and assemble the Support Leg (F) to the Bed Slat (L).  
Bolt & screw the Bed Slats (L) to the Side Rail (D) & Long Support (E).

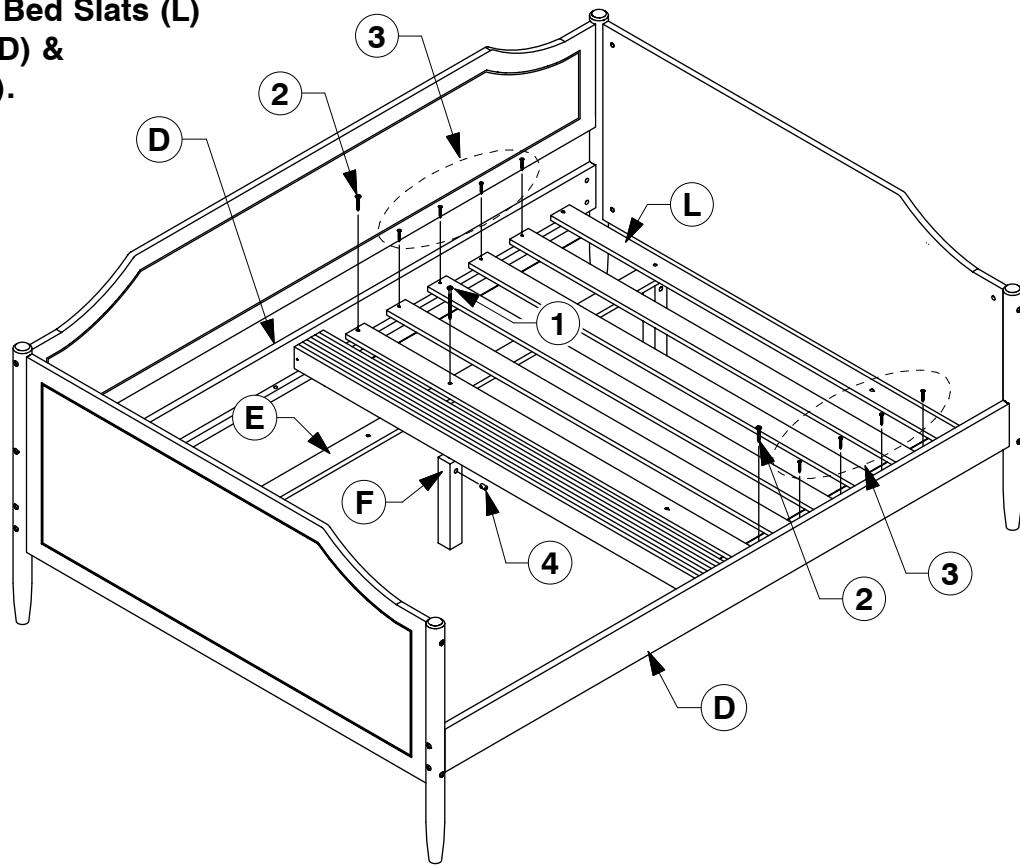

**11** Fit the other Slats out and assemble the Support Leg (F) to the Bed Slat (L).  
Bolt & screw the Bed Slats (L) to the Side Rail (D) & Long Support (E).

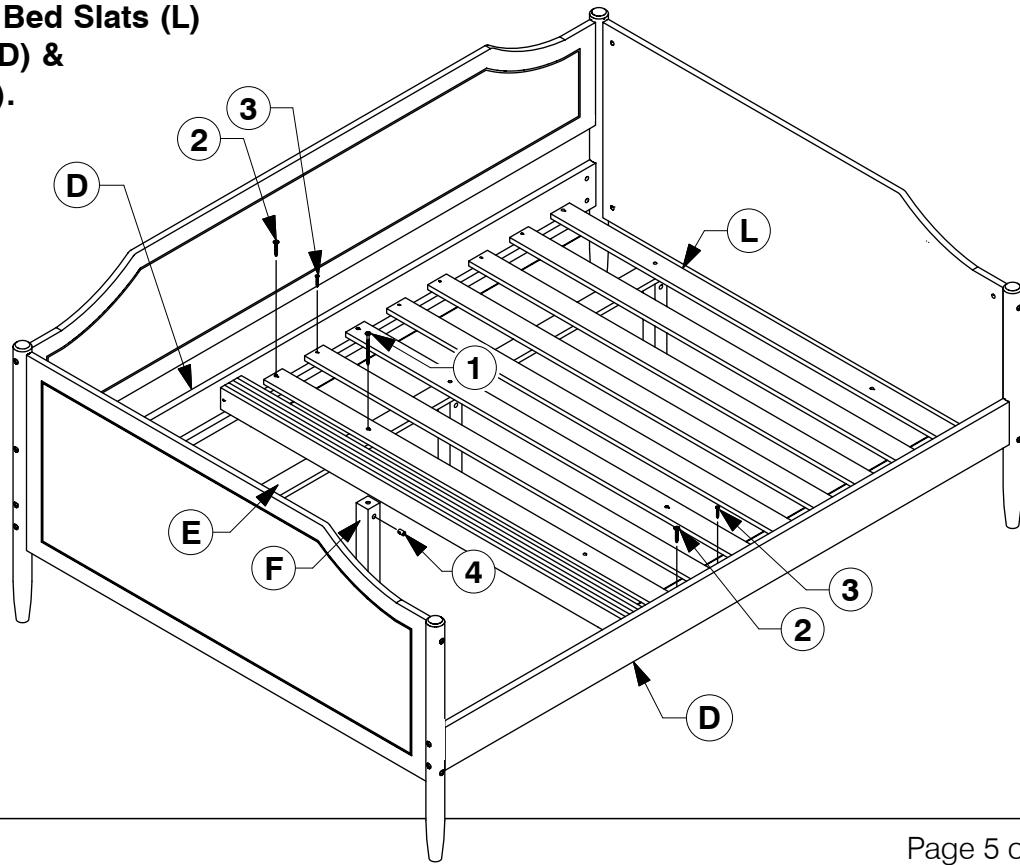


# 0016-1 Full Daybed


## Assembly Instructions

WII-0720

**12** Assemble the Support Leg (F) and bolt & screw the remaining Bed Slats (L) to the Side Rail (D) & Long Support (E).

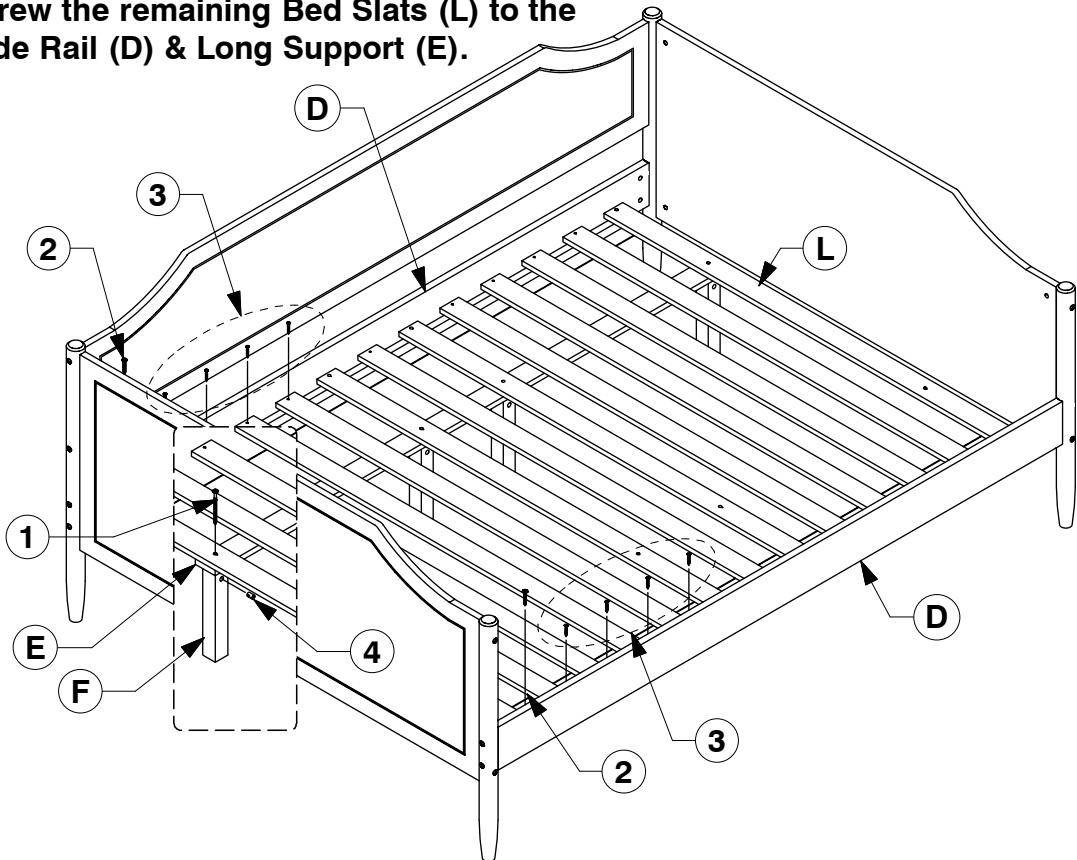

**13** Finally, fit the assembled trundle.

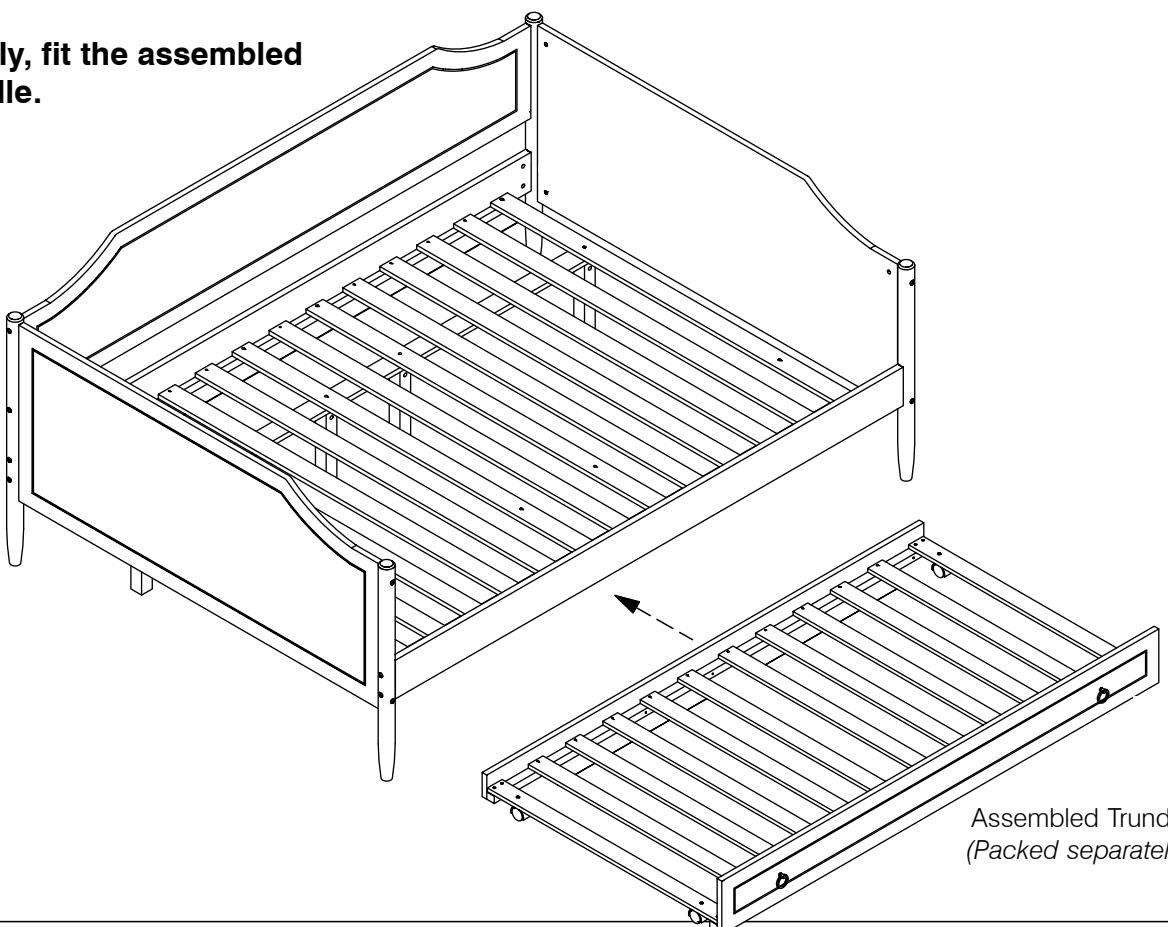



Assembled Trundle  
(Packed separately)

# 0016-1 Daybed Trundle

## Assembly Instructions


WII-0120

### 1 Assembled View

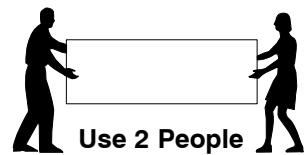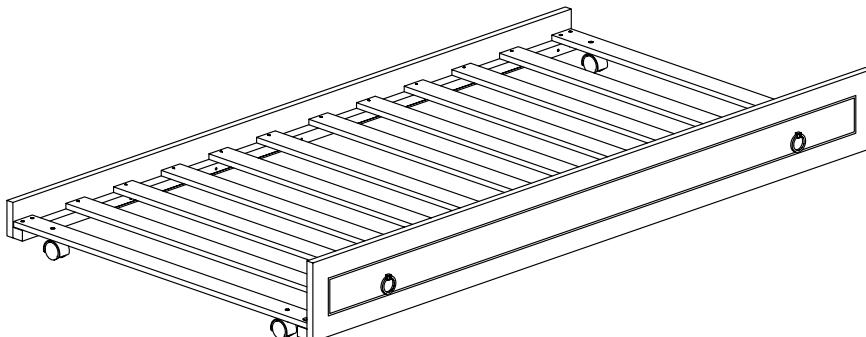

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts List




**A** Trundle Front Panel **x 1**



**C** Trundle Support Rail **x 2**



**B** Trundle Rear Panel **x 1**

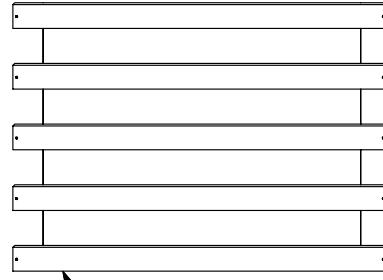


**D** Set of Slats **x 2**


### 3 Hardware List



**1** M6 x 40mm JCB  
**x 8**



**2** Wood Screw  
(M4 x 32mm)  
**x 20**



**3** Wood Screw  
(M4 x 22mm)  
**x 2**



**4** Allen Key  
**x 1**



**5** Handle  
**x 2**





**6** Wheels  
**x 4**

# 0016-1 Daybed Trundle


## Assembly Instructions

WII-0120

**4** Fit the Wheels (6) to the Trundle Support Rail (C).

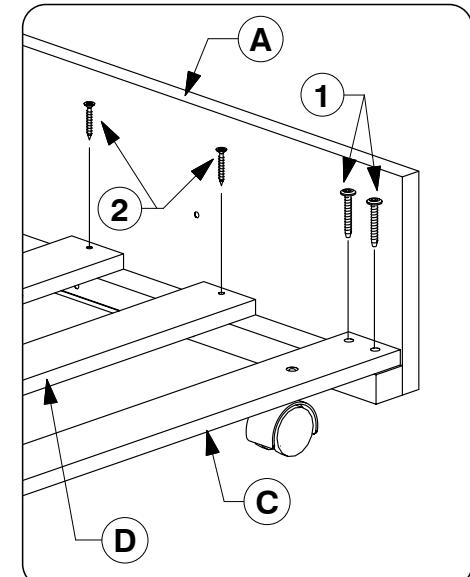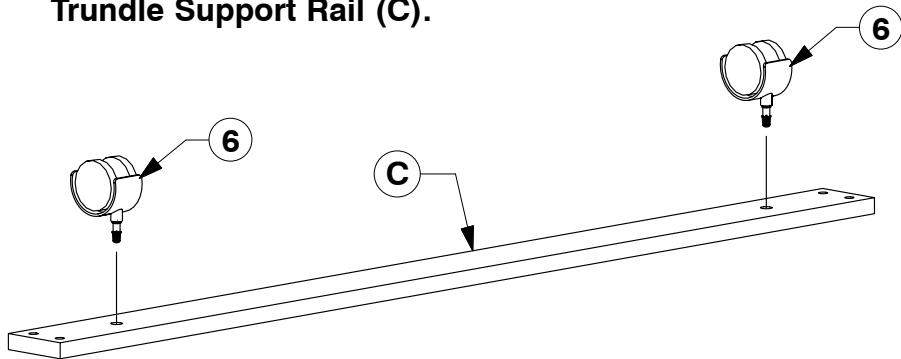

**5** Assemble the Set of Slats (D) & Trundle Support Rail (C) to the Trundle Front Panel (A) & Trundle Rear Panel (B).

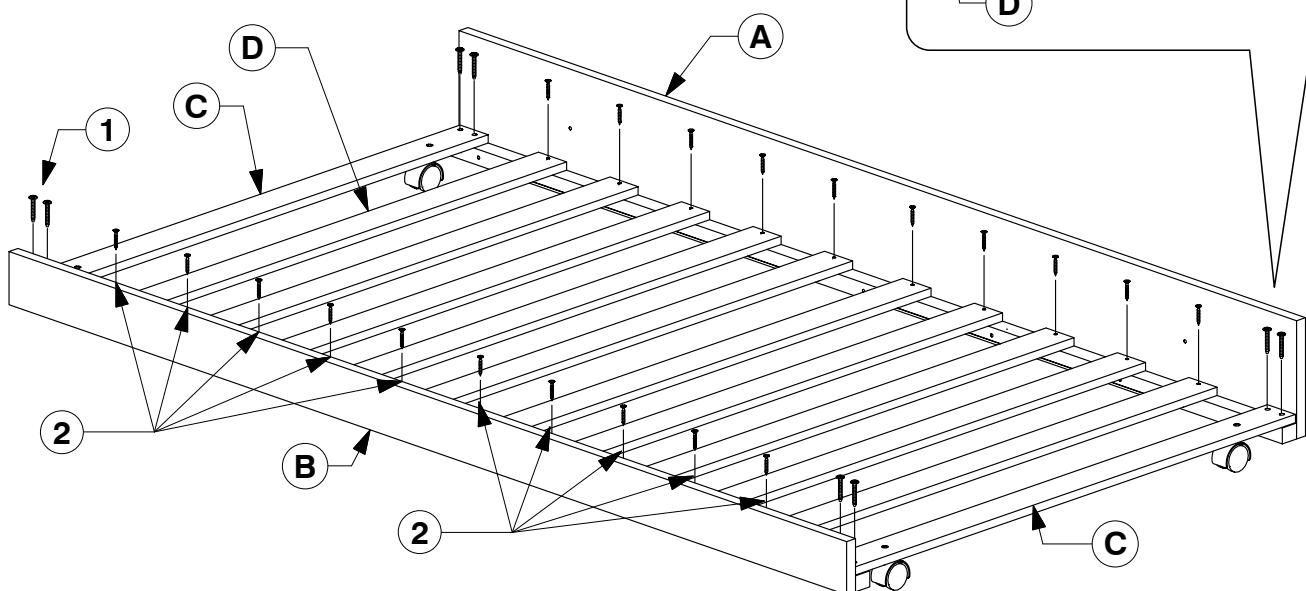

**6** Fit the Handle (5) to the Trundle Front Panel (A).

