


BD006

54" x 75"

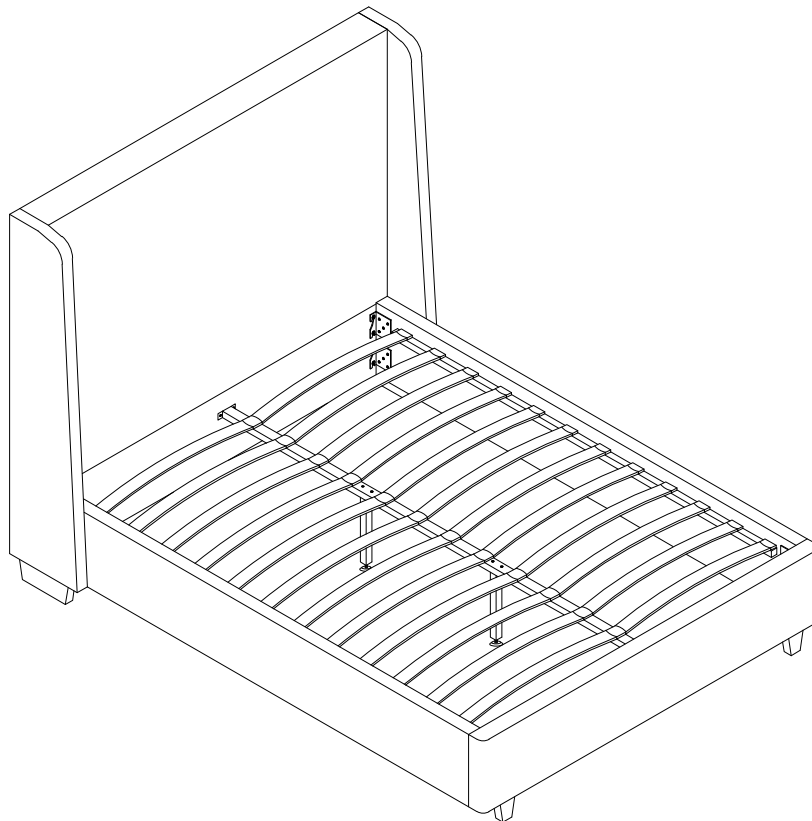


IMPORTANT NOTE


1. PLEASE CHECK THAT ALL PARTS ARE PRESENT BEFORE YOU START THE ASSEMBLY OF YOUR FURNITURE.
2. FOR THE PROTECTION OF YOUR FURNITURE, PLACE ALL PARTS ON A CLEAN AND SMOOTH SURFACE TO PREVENT ANY DAMAGE.
3. DO NOT USE POWER TOOLS TO ASSEMBLE THE BED.
4. PLEASE PERIODICALLY CHECK ALL FITTINGS AND RE-TIGHTEN AS NECESSARY.
5. DO NOT USE THE BED UNLESS ALL BOLTS AND SCREWS ARE FIRMLY SECURED.

PART LIST

(1)Headboard x 1pc

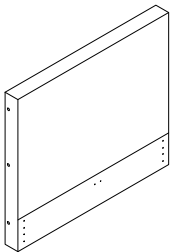


(2)Footboard x 1pc

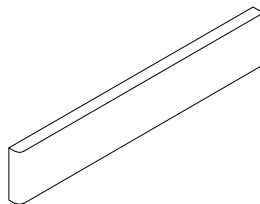


(3)Support Leg x 2pcs




(4)Crossrail x 2pcs

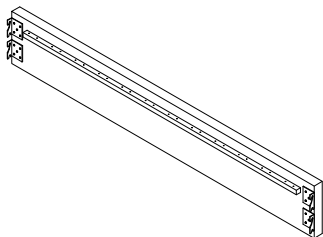

(5)Centre Support Bar x 1pc

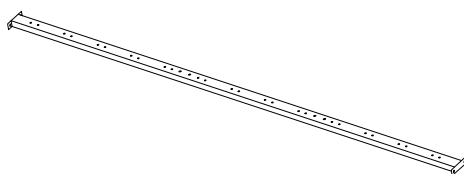

(6)Slat x 24pcs

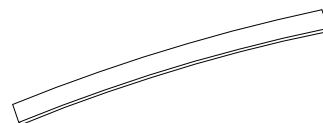


(7)Double Plastic Cap
x 12pcs



(8)Single Plastic Cap
x 24pcs




(9)Headboard Wing Leg
x 2pcs

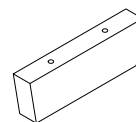

(10)Footboard Leg x 2pcs



(11)Headboard Wing (Left)
x 1pc




(12)Headboard Wing (Right)
x 1pc




HARDWARE LIST

(A)Bolt M8 x 30mm x 20pcs



(B)Bolt M8 x 40mm x 4pcs



(C)Nut M8 x 13mm x 4pcs



(D)Spring Washer x 16pcs



(E)Flat Washer Ø17 x 8mm
x 30pcs



(F)Allen Key M5 x 1pc




(G)Spanner x 1pc




(H)Flat Washer Ø22 x 8mm
x 6pcs




(I)Bolt M8 x 50mm x 12pcs




STEP 1

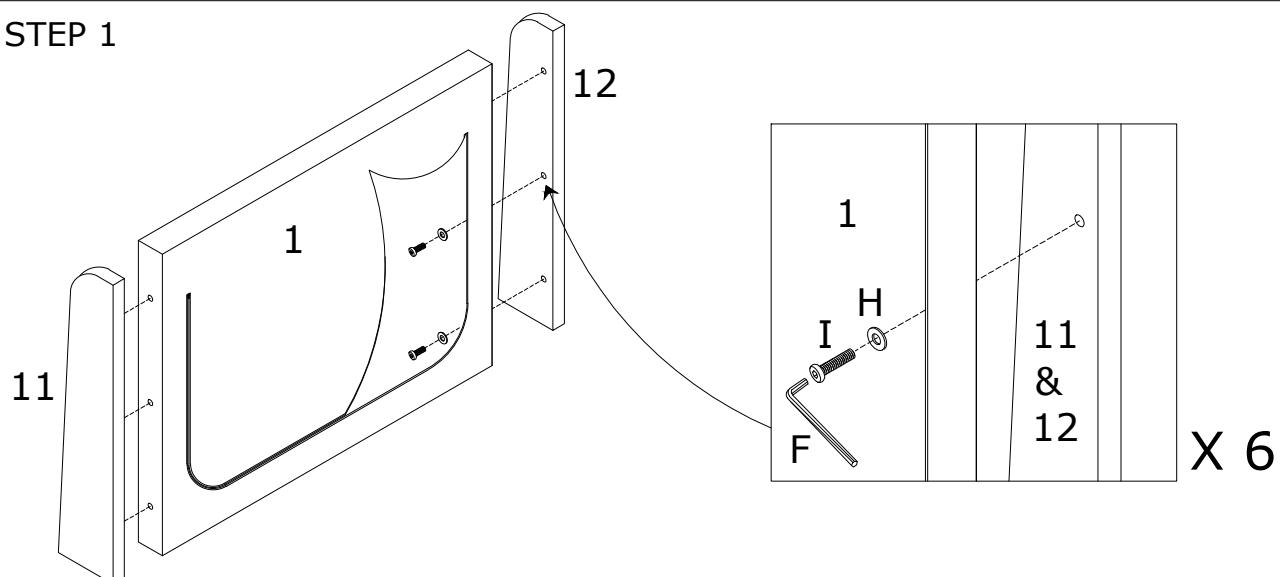


STEP 2

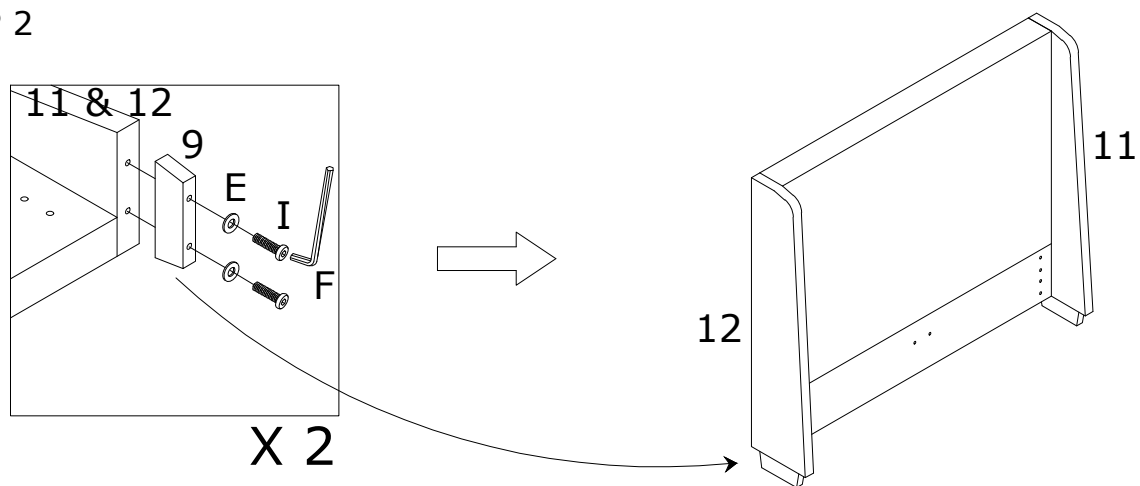


STEP 3

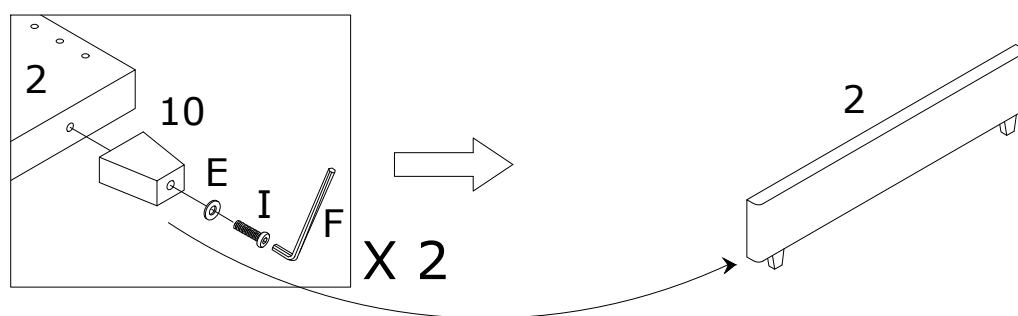


STEP 4

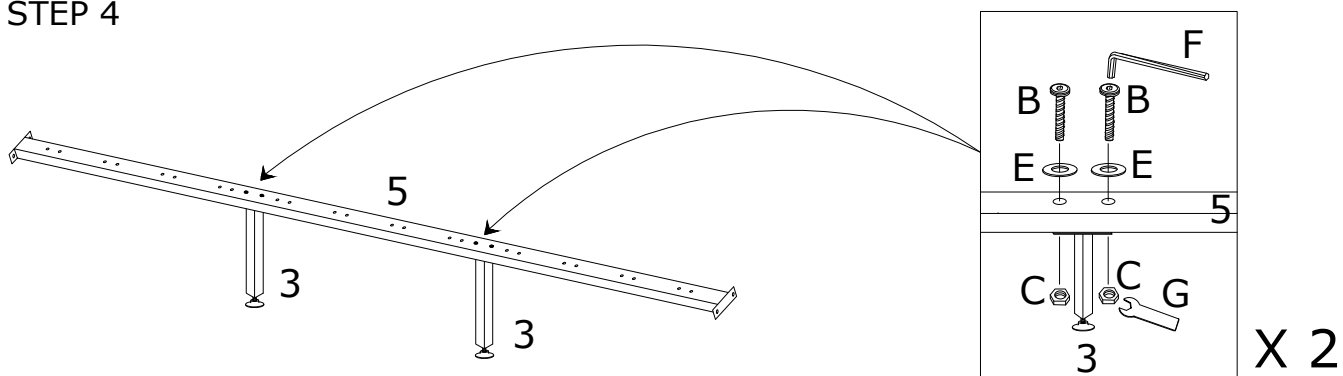

STEP 5

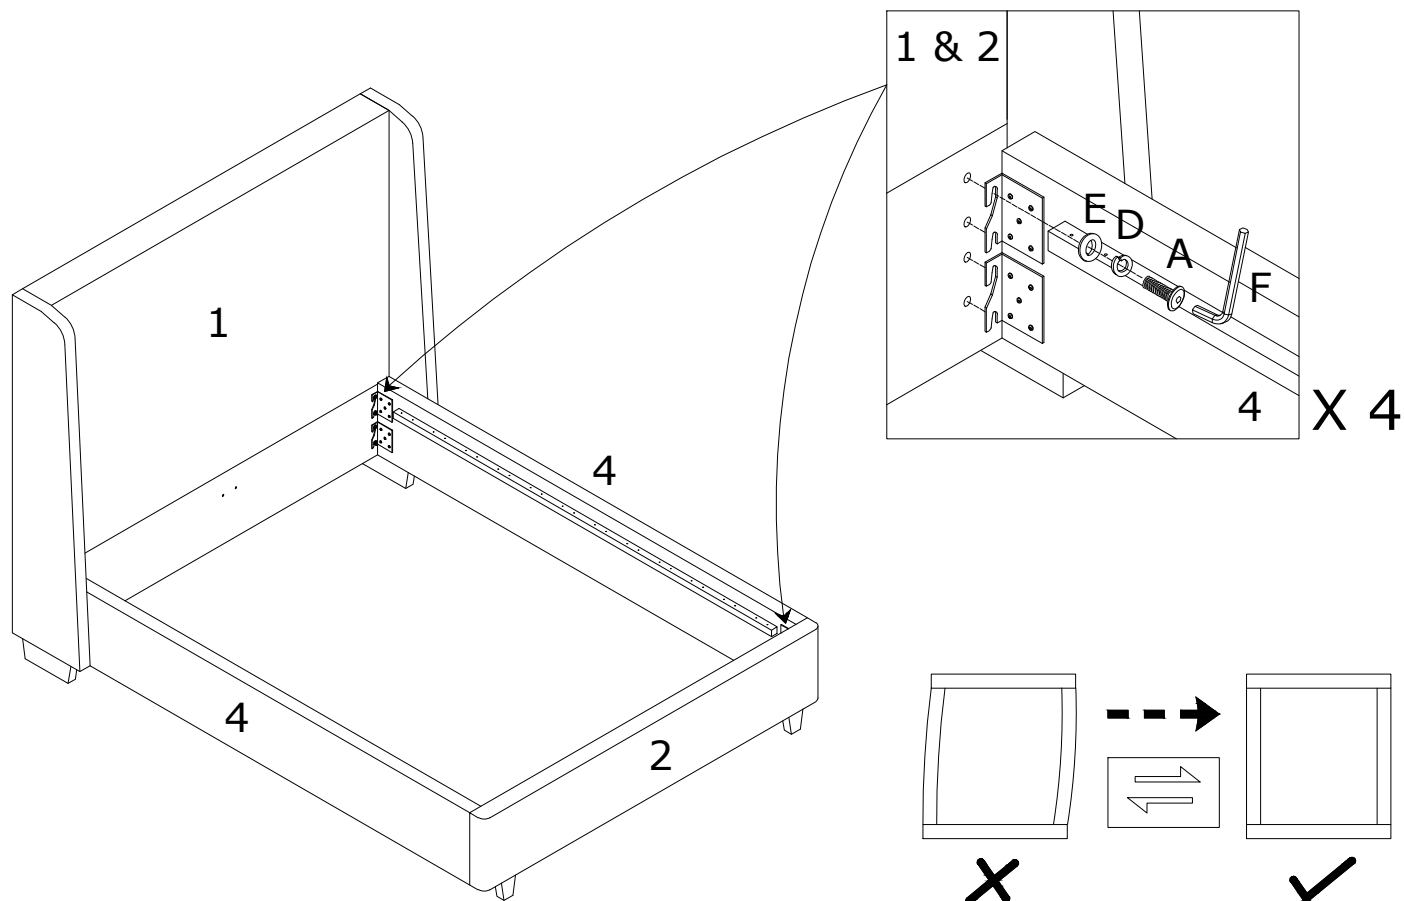

STEP 6

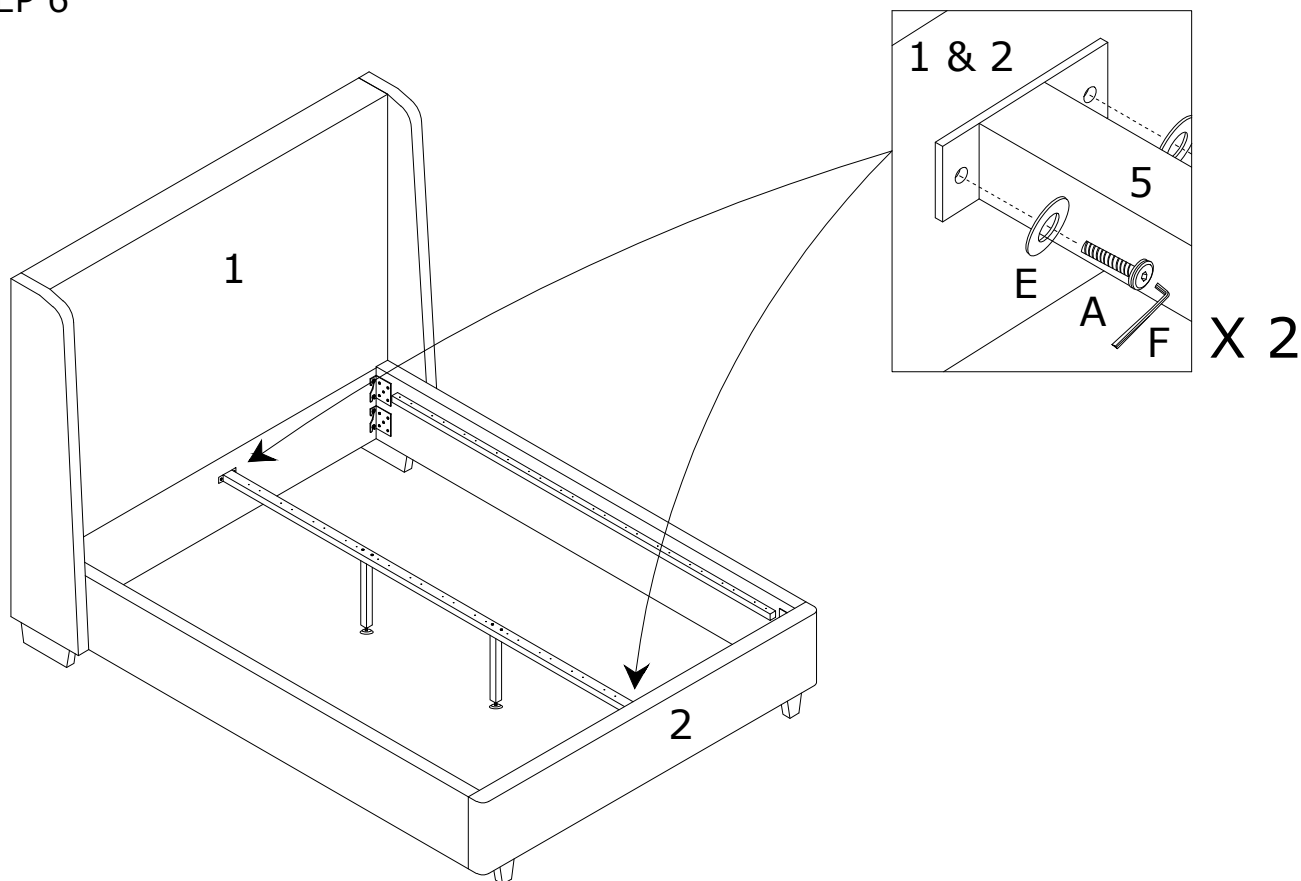

STEP 7

