
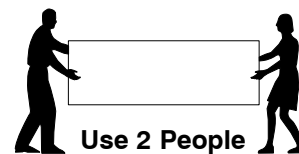


# 0001 Twin Bed

## Assembly Instructions





W11-0720

### 1 Assembled View

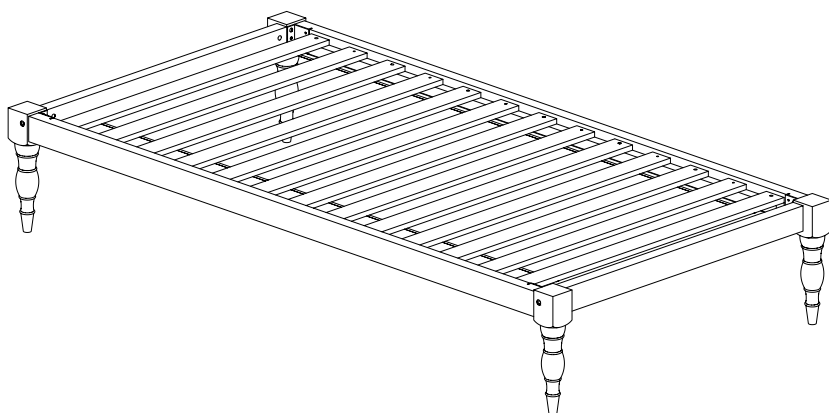

**Note:** Do not assemble using power tools. This can cause the bolts to be overtightened


### 2 Parts List

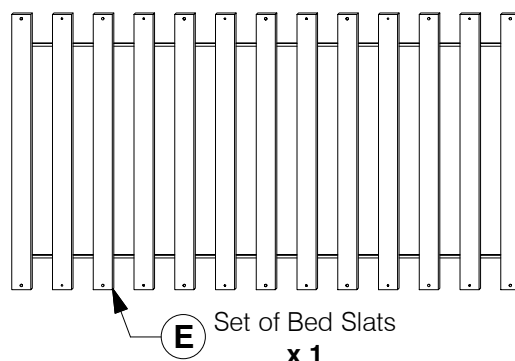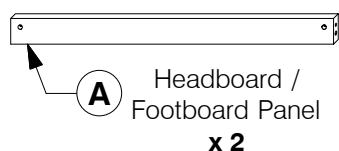

### 3 Hardware List



**1** M6 x 100mm JCB  
x 4



**2** M6 x 40mm JCB  
x 14



**3** M6 x 20mm JCB  
x 8



**4** Wood Dowel  
(M10 x 40mm) x 4




**5** Barrel Nut  
x 4



**6** Spring Washer  
x 8



**7** Flat Washer  
x 8



**8** Wood Screw  
(M4 x 32mm) x 12




**9** Allen Key  
x 1

# 0001 Twin Bed


## Assembly Instructions

WII-0720

- 4** Assemble the Post (B & C) to the Headboard / Footboard Panel (A).

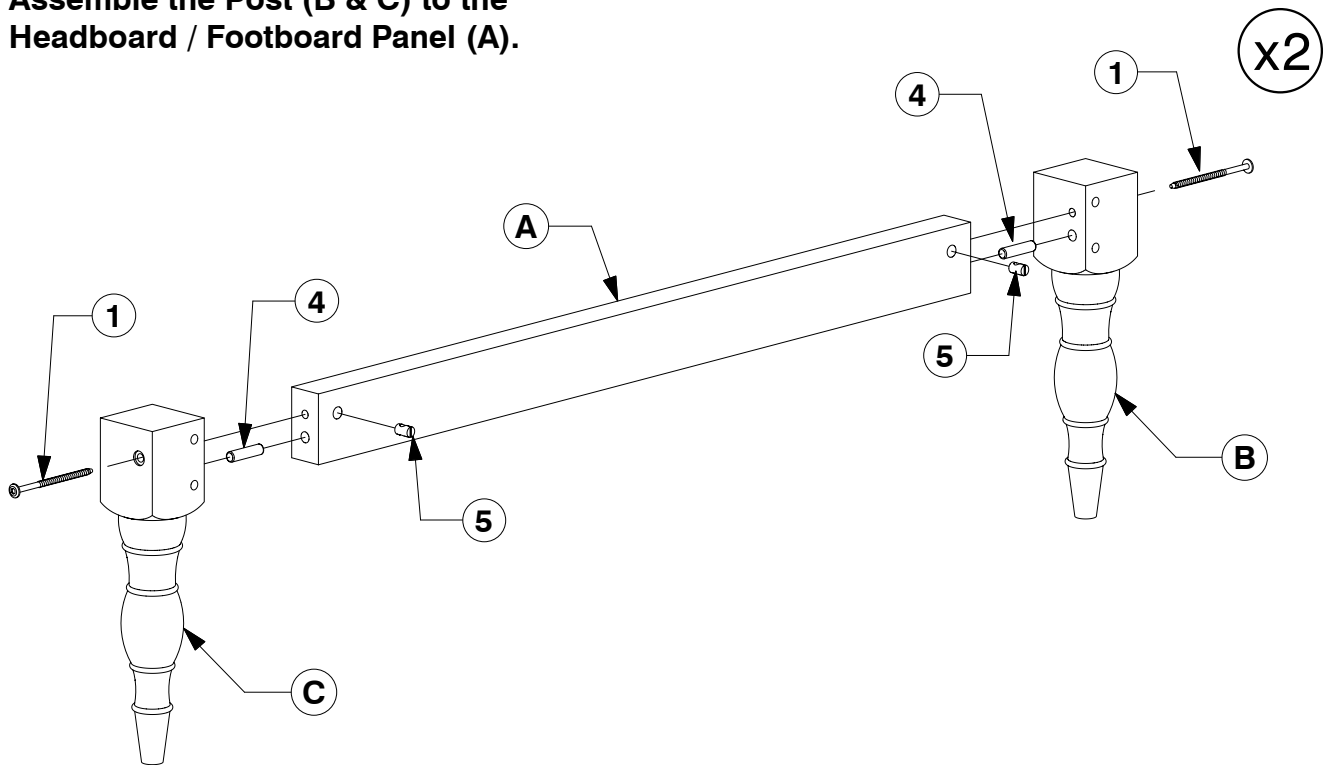

- 5** Assemble the Side Rail (D) to the assembled Headboard / Footboard Panel (A).

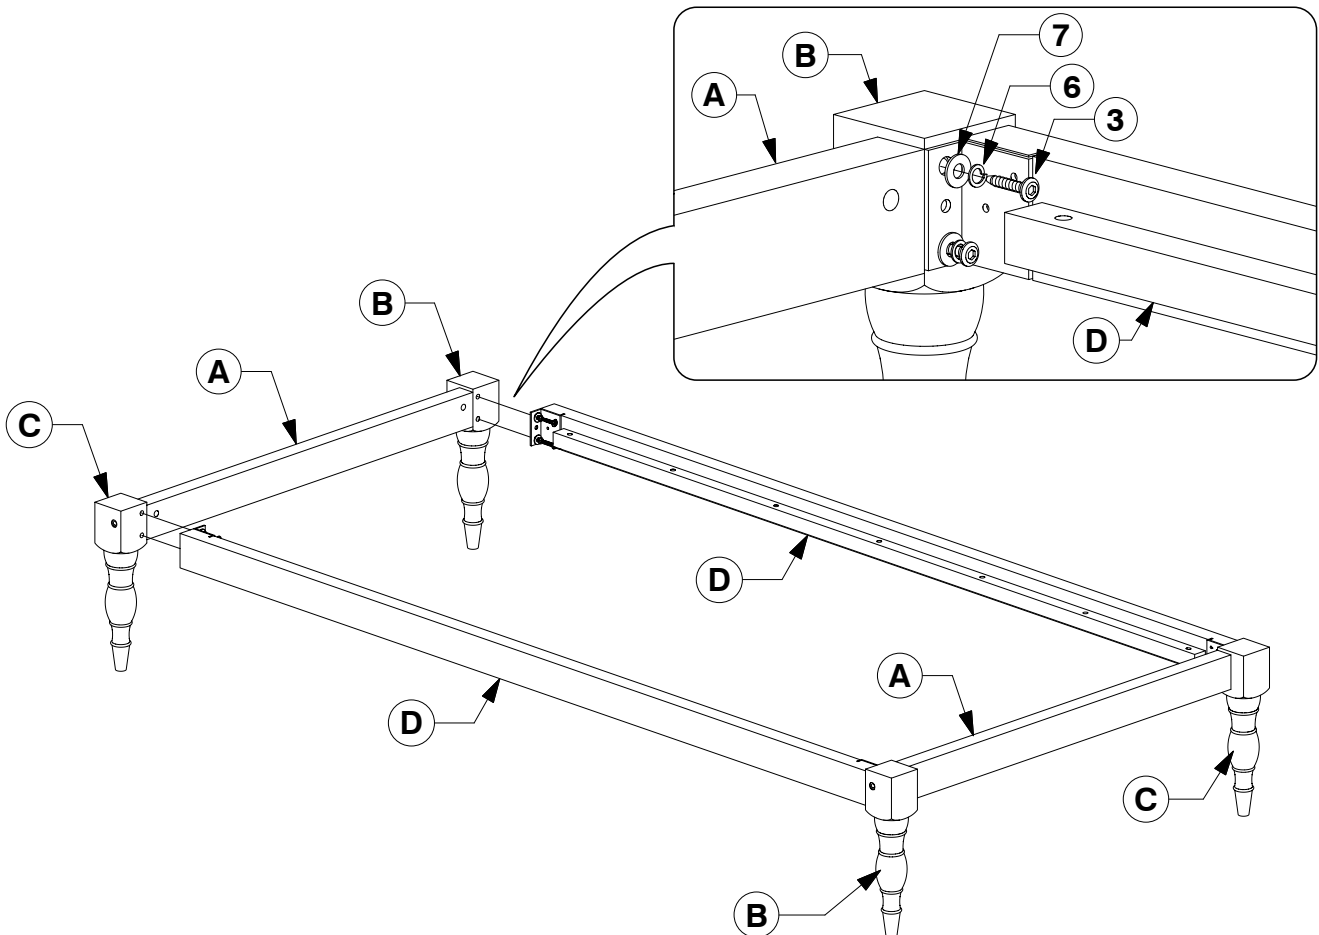


# 0001 Twin Bed

## Assembly Instructions

W11-0720

### 6 Bolt the Bed Slats (E) to the Side Rail (D).

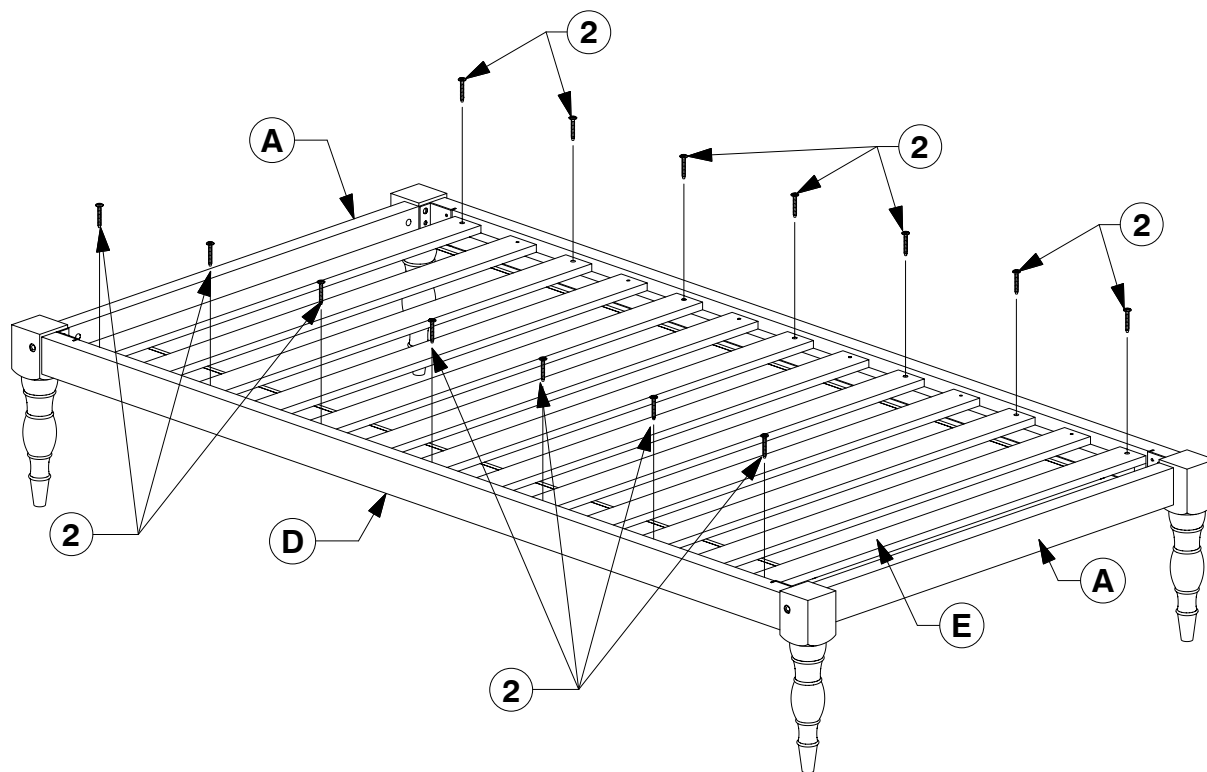

### 7 Screw the Bed Slats (E) to the Side Rail (D).

