



**ASSEMBLY INSTRUCTION**  
**ITEM NO.: 193D2601-24**  
**COUNTER HEIGHT STOOL**

**PART LIST:**

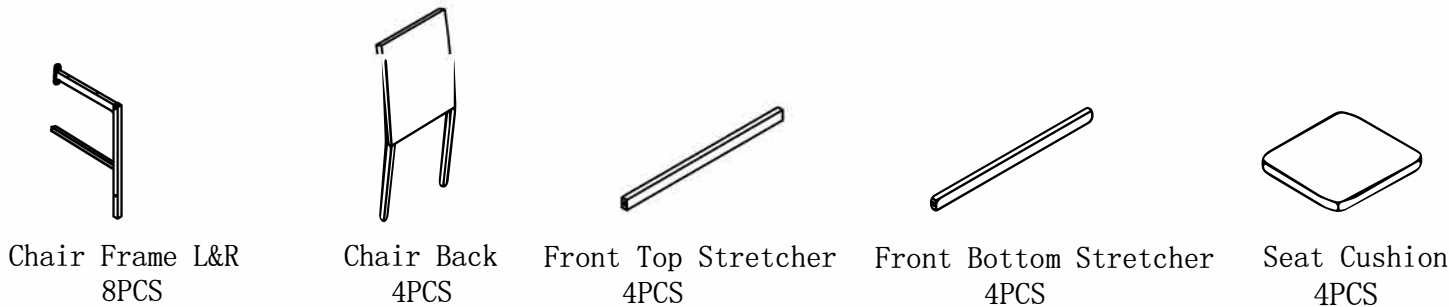


HARDWARE LIST				
A		Long Bolt	1/4"*38mm	16pcs
B		Long Bolt	1/4"*19mm	16pcs
C		Long Bolt	1/4"*43mm	8pcs
D		Screw	5mm*56mm	16pcs
E		L-Allen Key	4mm	1pc


**STEP 1**

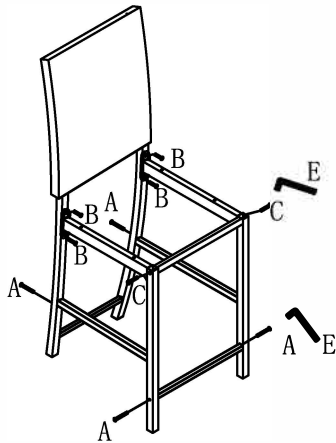

**STEP 2**

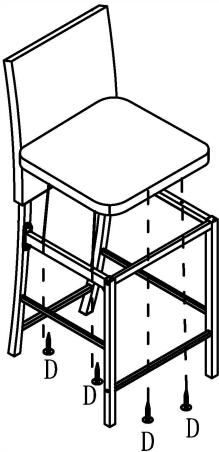

**COMPLETED**

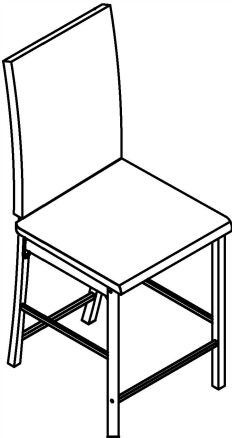

- (1) Align the chair frame L&R to the chair back and front rail, insert the bolt to the holes and tighten it.
- (2) Attach the seat cushion to the seat, insert the screw then tighten it.