


ASSEMBLY INSTRUCTION

ITEM NO.: 193D5655-24 COUNTER HEIGHT CHAIR


Thank you for purchasing this quality product. Be sure to check all packing material carefully for small parts that may have come loose inside the carton during shipment.

PART LISTS				HARDWARE LISTS				
NO.	Description	Sketch	Q'ty	NO.	Description	Sketch	Size	Q'ty
A	CHAIR BACK		1PC	1	SHORT BOLT		Ø1/4" * 45mm	1PC
B	SEAT CUSHION WITH FRAME		1PC	2	LONG BOLT		Ø1/4" * 63.5mm	8PCS
C	LFS/RSF FRONT LEG		2PCS	3	SPRING WASHER		Ø1/4" * 10D*1.1mm	9PCS
D	FRONT STRETCHER		1PC	4	FLAT WASHER		Ø1/4" * 19D * 2mm	9PCS
E	LSF/RSF SIDE STRETCHER		2PCS	5	ALLEN KEY		4mm	1PC
				6	WOOD SCREW		Ø8 x 45mm	6PCS


STEP 1

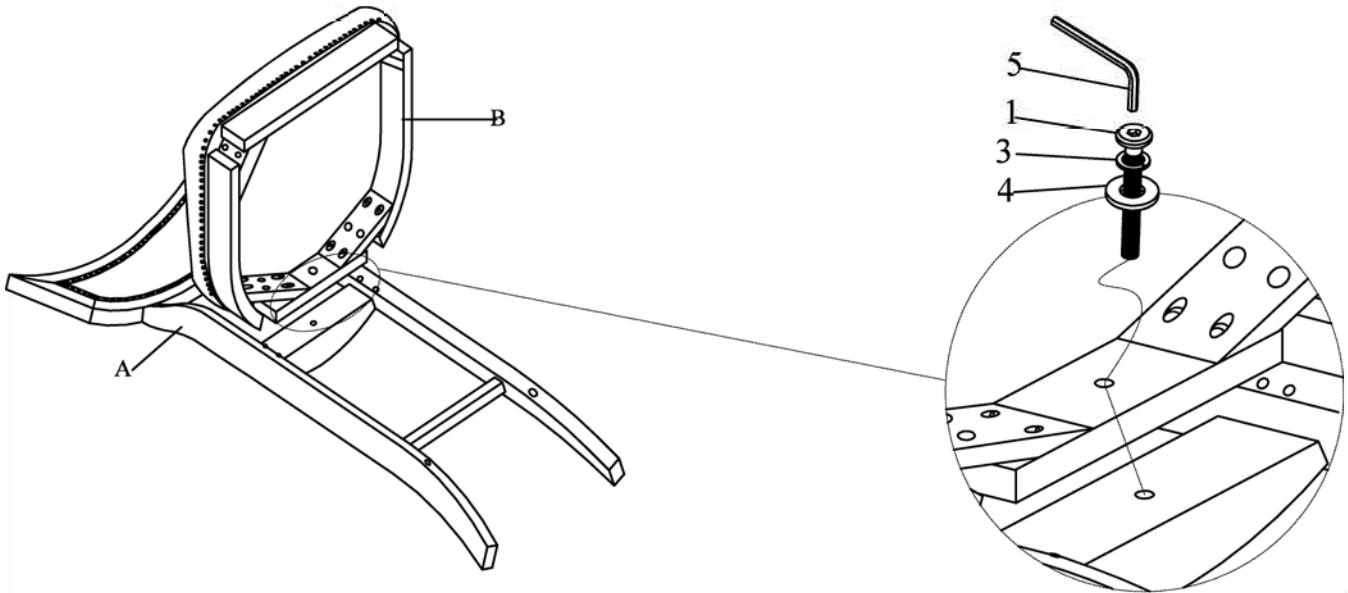


STEP 2

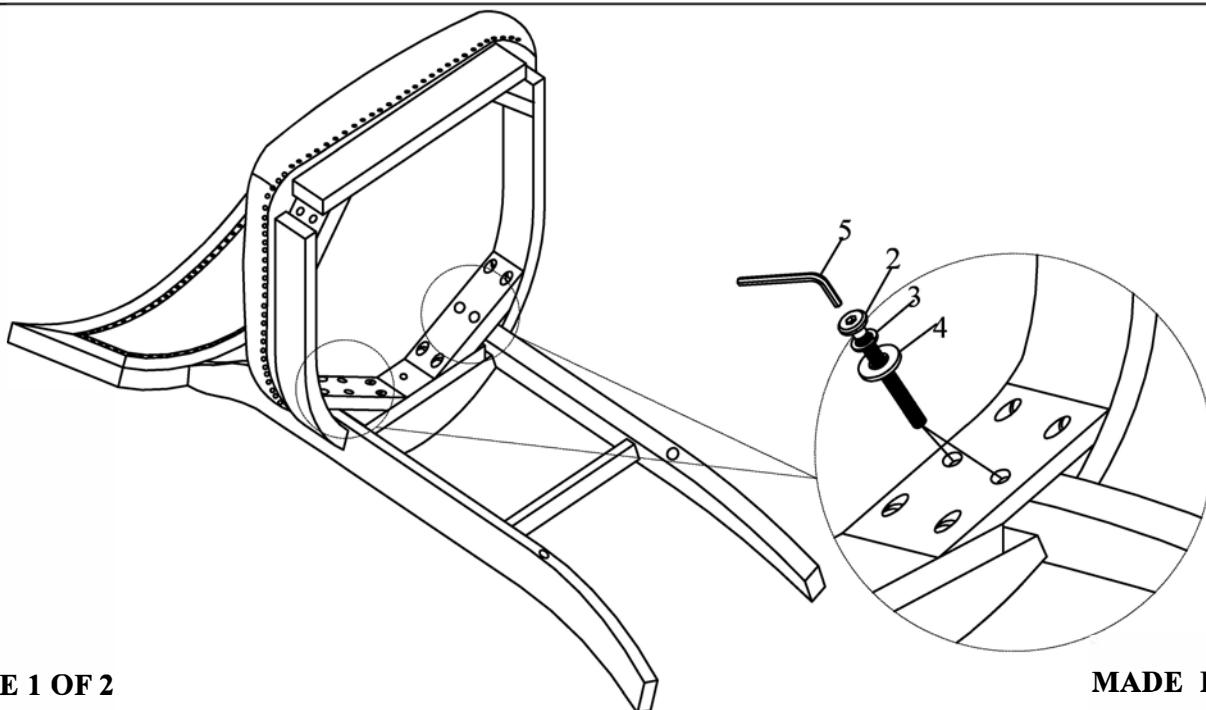

STEP 3

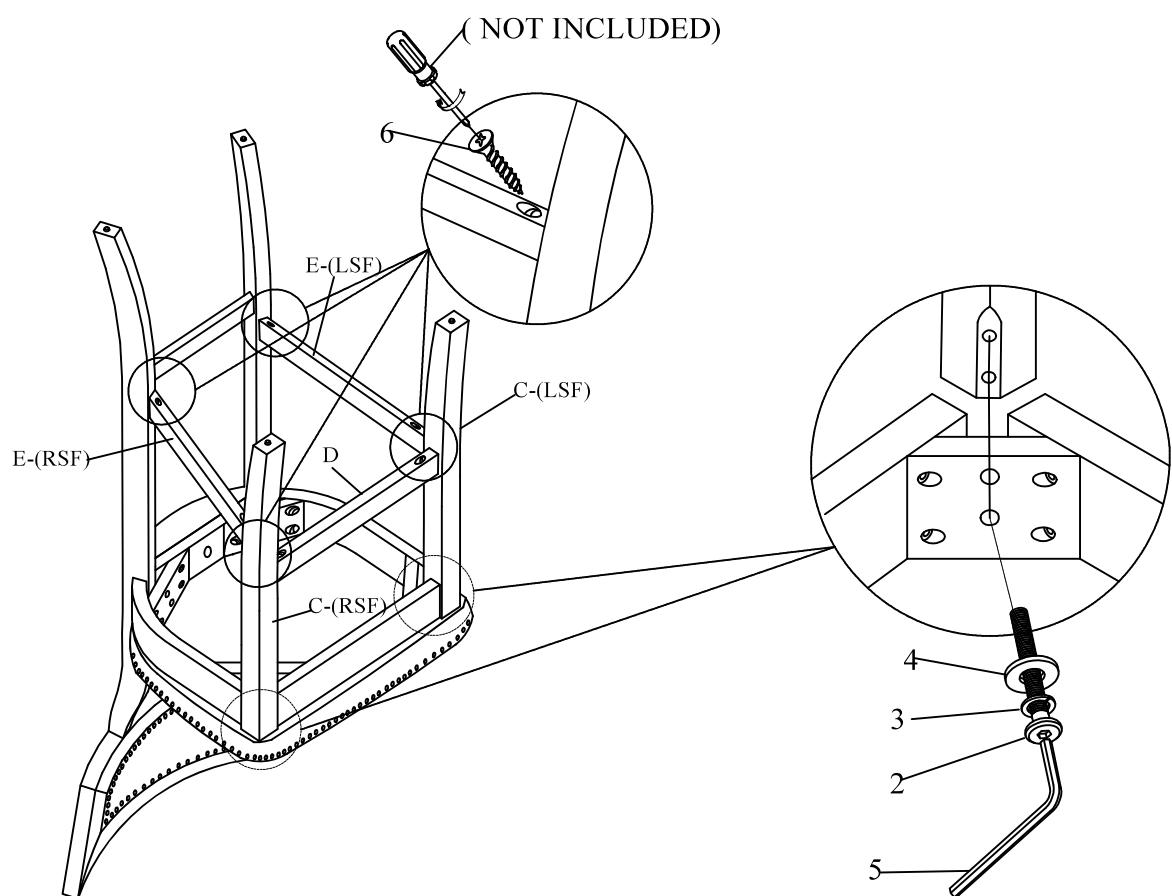

COMPLETED

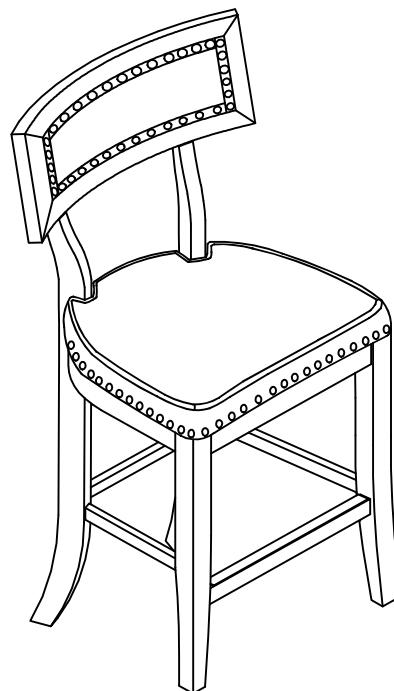

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.