
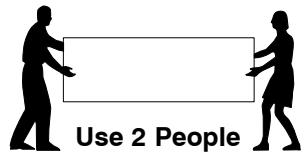


2200-1 Full Bed

Assembly Instructions

WII-0820


1 Assembled View

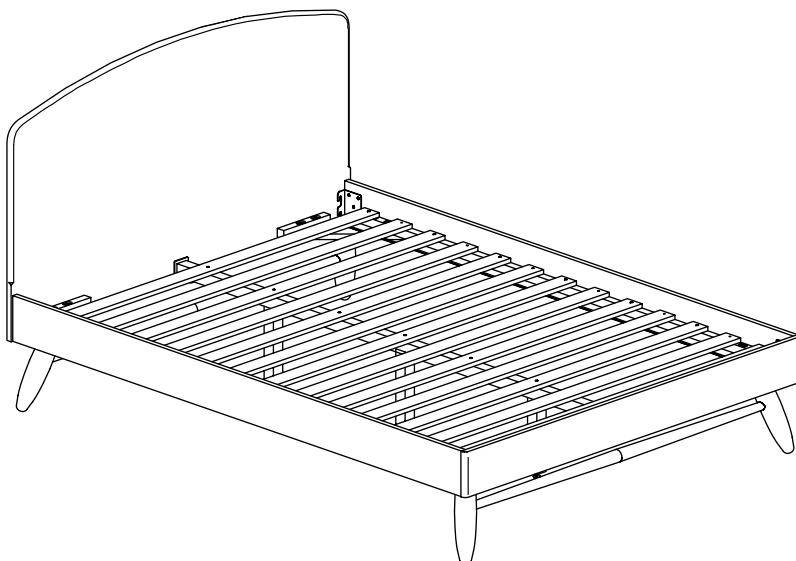


Note: Do not assemble using power tools. This can cause the bolts to be overtightened

2 Parts List


Parts in Box A:

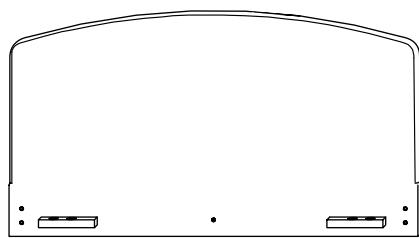

A Headboard Panel **x 1**

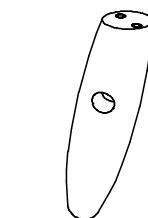


G Post (Left Hand) **x 2**




H Post (Right Hand) **x 2**


Parts in Box B:

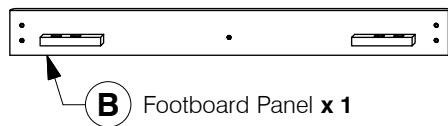


B Footboard Panel **x 1**

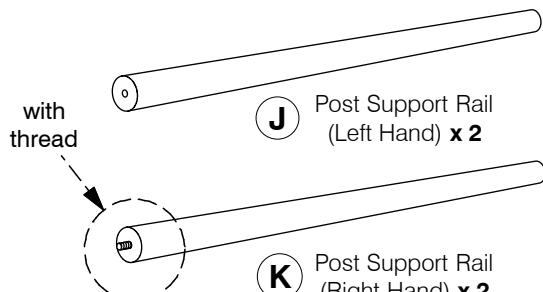


J Post Support Rail (Left Hand) **x 2**

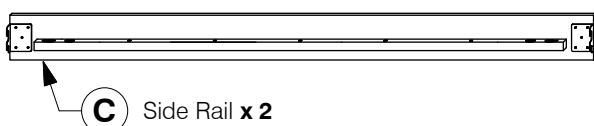


C Side Rail **x 2**

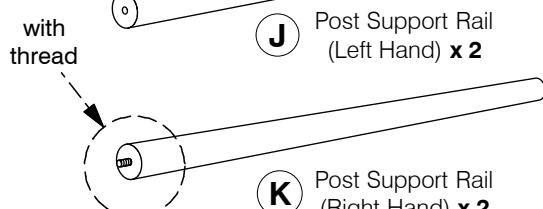



K Post Support Rail (Right Hand) **x 2**



D Long Support **x 1**

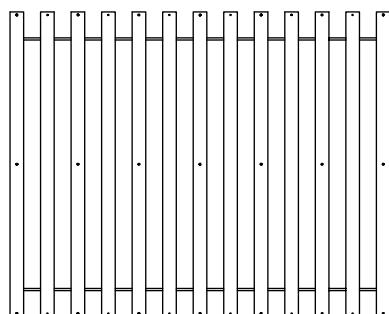

L Set of Bed Slats **x 1**

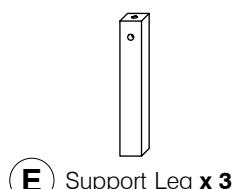

F Support Panel **x 4**

2200-1 Full Bed


Assembly Instructions

WII-0820


3 Hardware List



1 M6 x 100mm JCB
x 3



2 M6 x 50mm JCB
x 16




3 M6 x 40mm JCB
x 18



4 M6 x 20mm JCB
x 8



5 M6 x 15mm JCB
x 4



6 M8 x 50mm JCB
x 8



7 Barrel Nut
x 3



8 Spring Washer
x 24



9 Flat Washer
x 24




10 Wood Screw
(M4 x 32mm) x 12




11 M4 Allen Key
x 1



12 M5 Allen Key
x 1




13 Center Rail
Bracket x 2




14 Adjustable
Foot x 3

4 Fix the Adjustable foot to the bottom of the Support Leg (E).

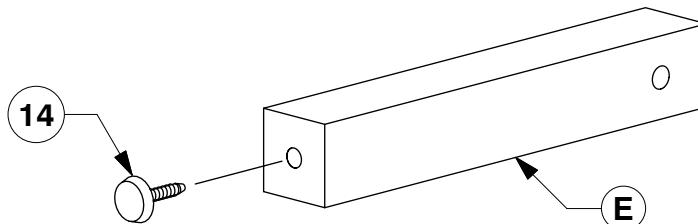

5 Fit the Post Support Rail (J & K) to the Post (G & H).

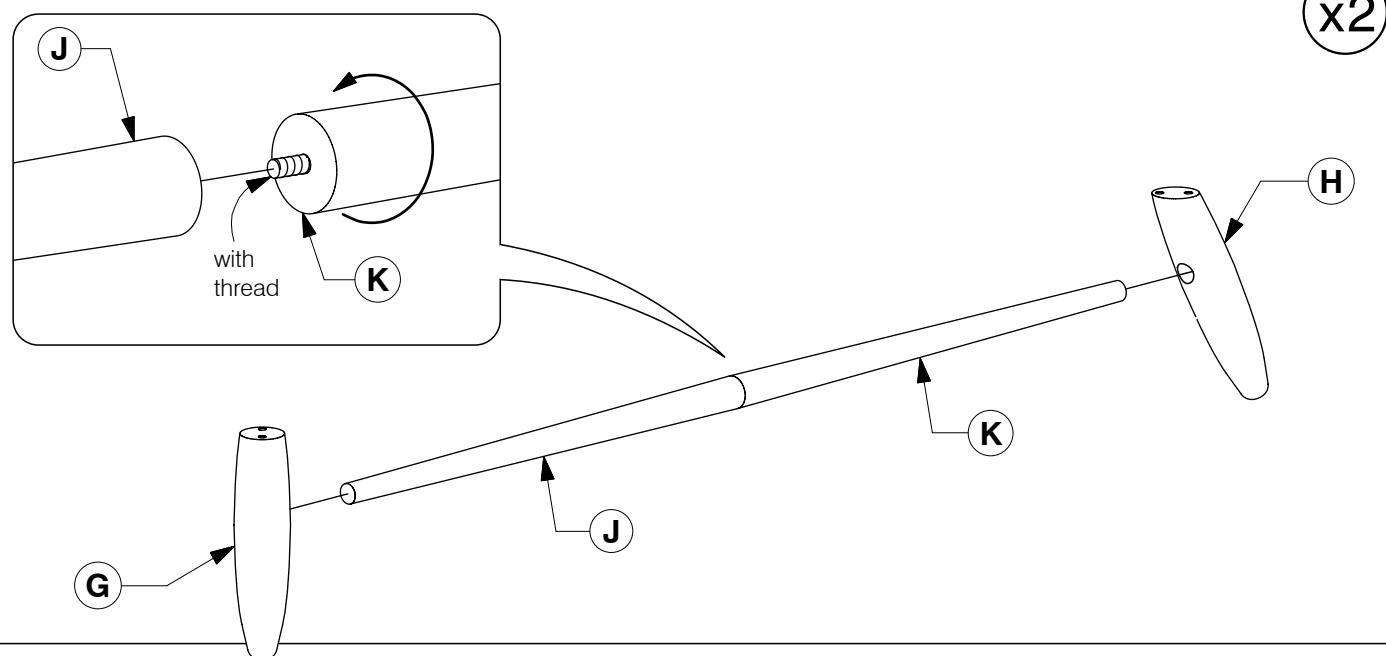


2200-1 Full Bed


Assembly Instructions

WII-0820


6 Assemble the Support Panel (F) to the assembled Post (G & H) & Post Support Rail (J & K) .

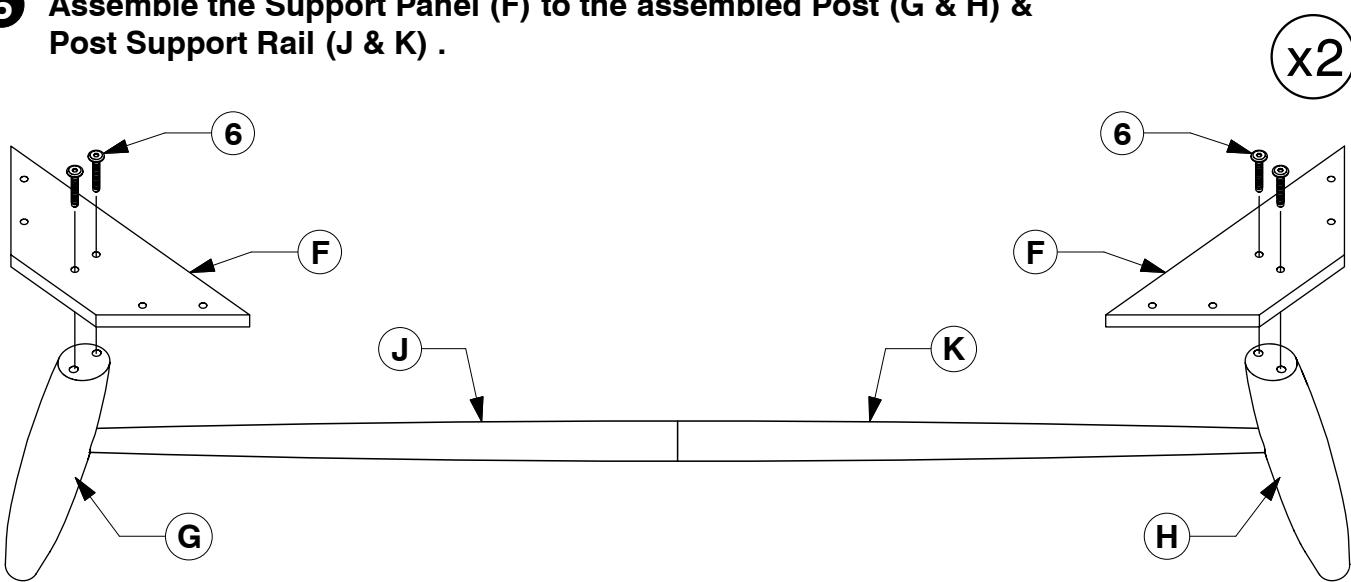

7 Fit the Center Rail Bracket to the Headboard Panel (A).

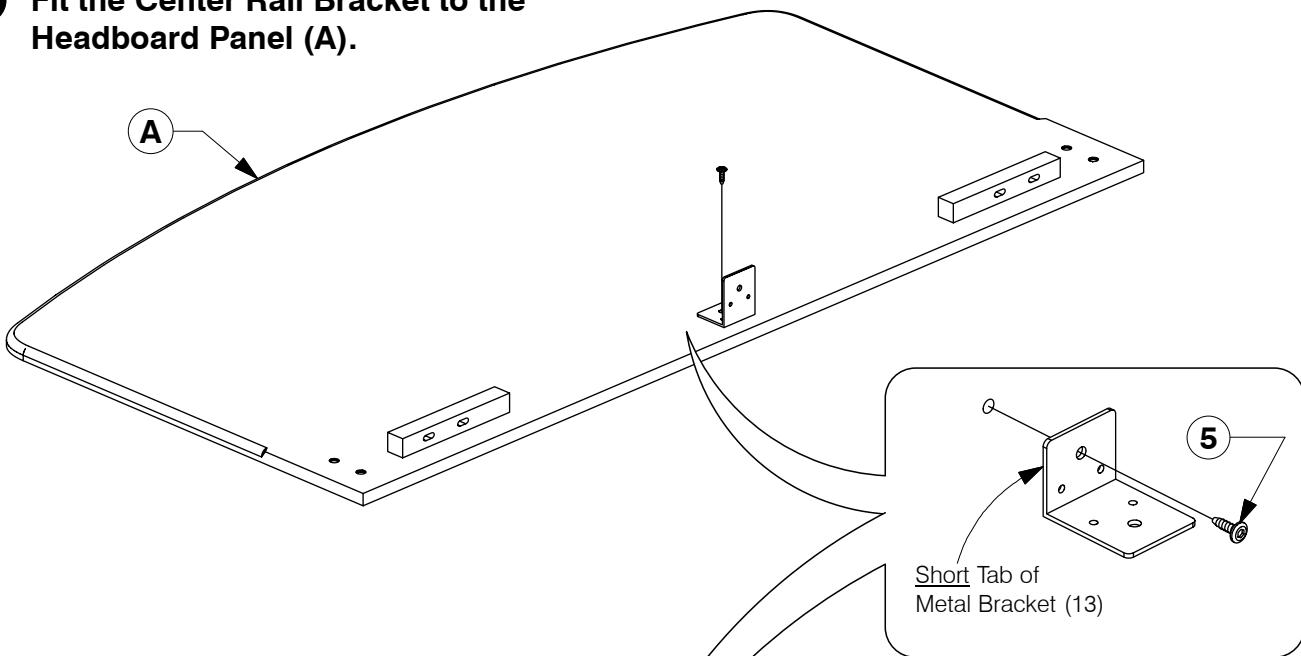

8 Fit the Center Rail Bracket to the Footboard Panel (B).

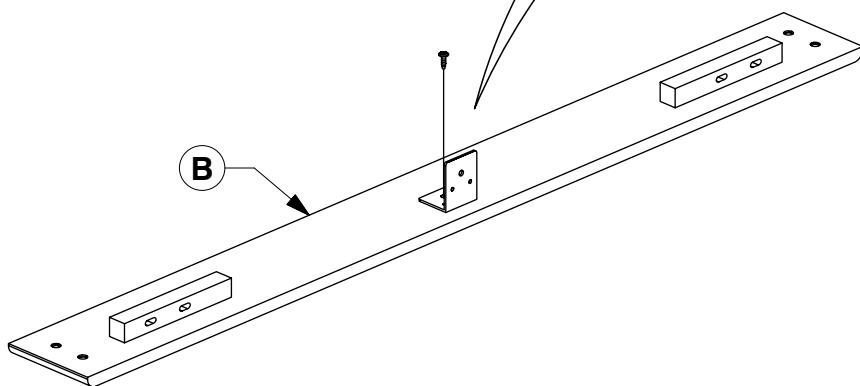


2200-1 Full Bed


Assembly Instructions

WII-0820

9 Assemble the assembled Support Panel (F) to the Side Rail (C).

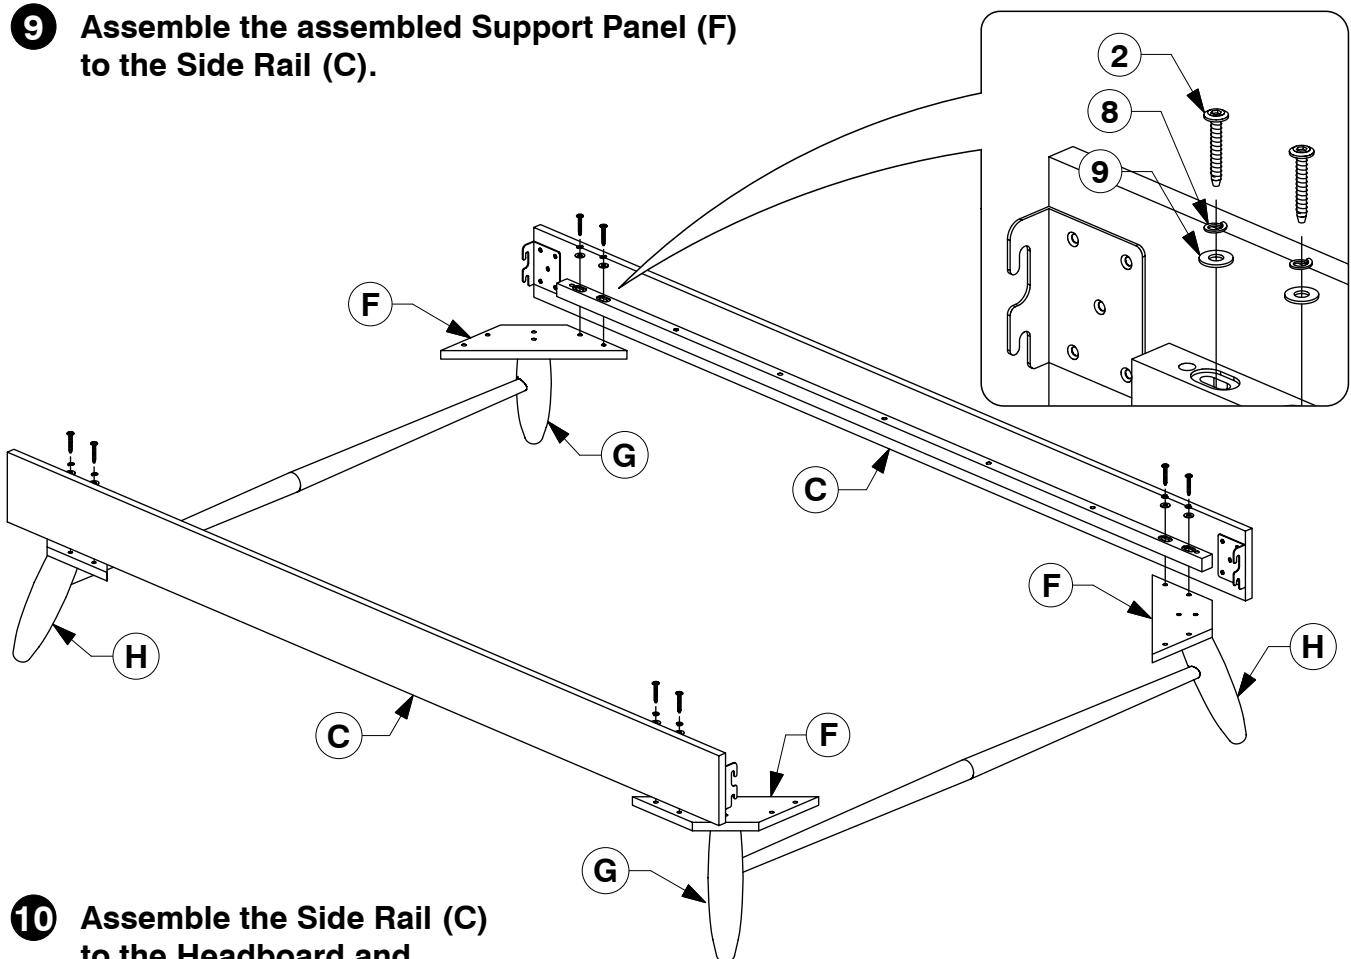

10 Assemble the Side Rail (C) to the Headboard and Footboard Panel (A & B).

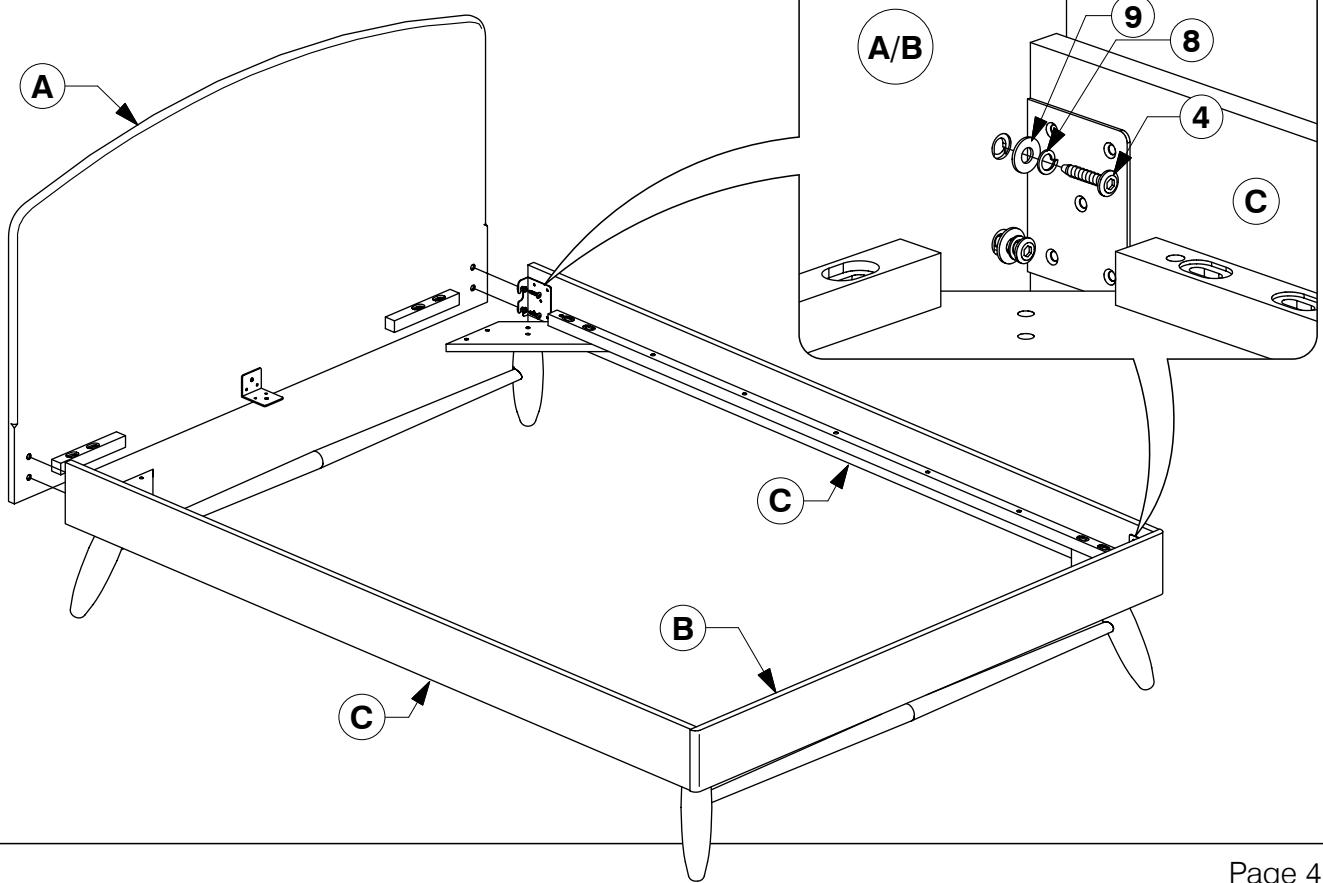


2200-1 Full Bed


Assembly Instructions

WII-0820

11 Bolt the Support Panel (F) to the Headboard and Footboard Panel (A & B).

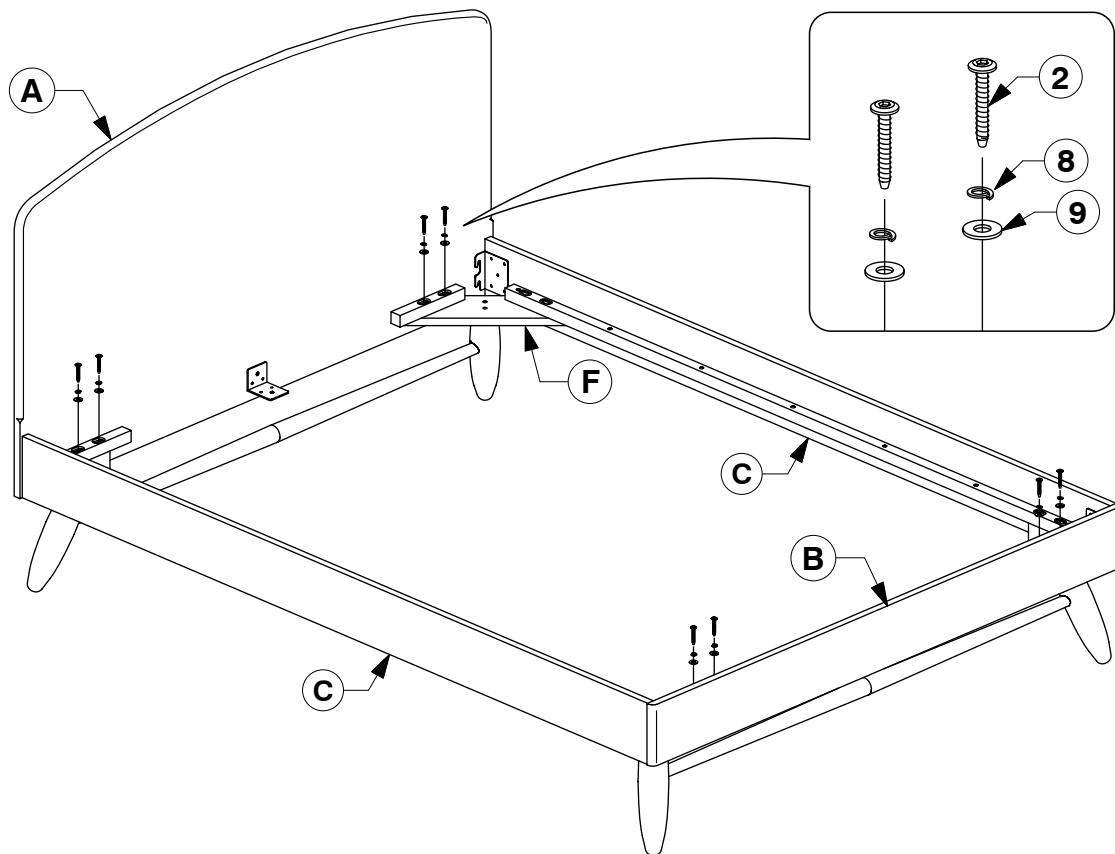

12 Bolt the Long Support (D) to the Center Rail Brackets (13) on the Headboard and Footboard Panel (A & B).

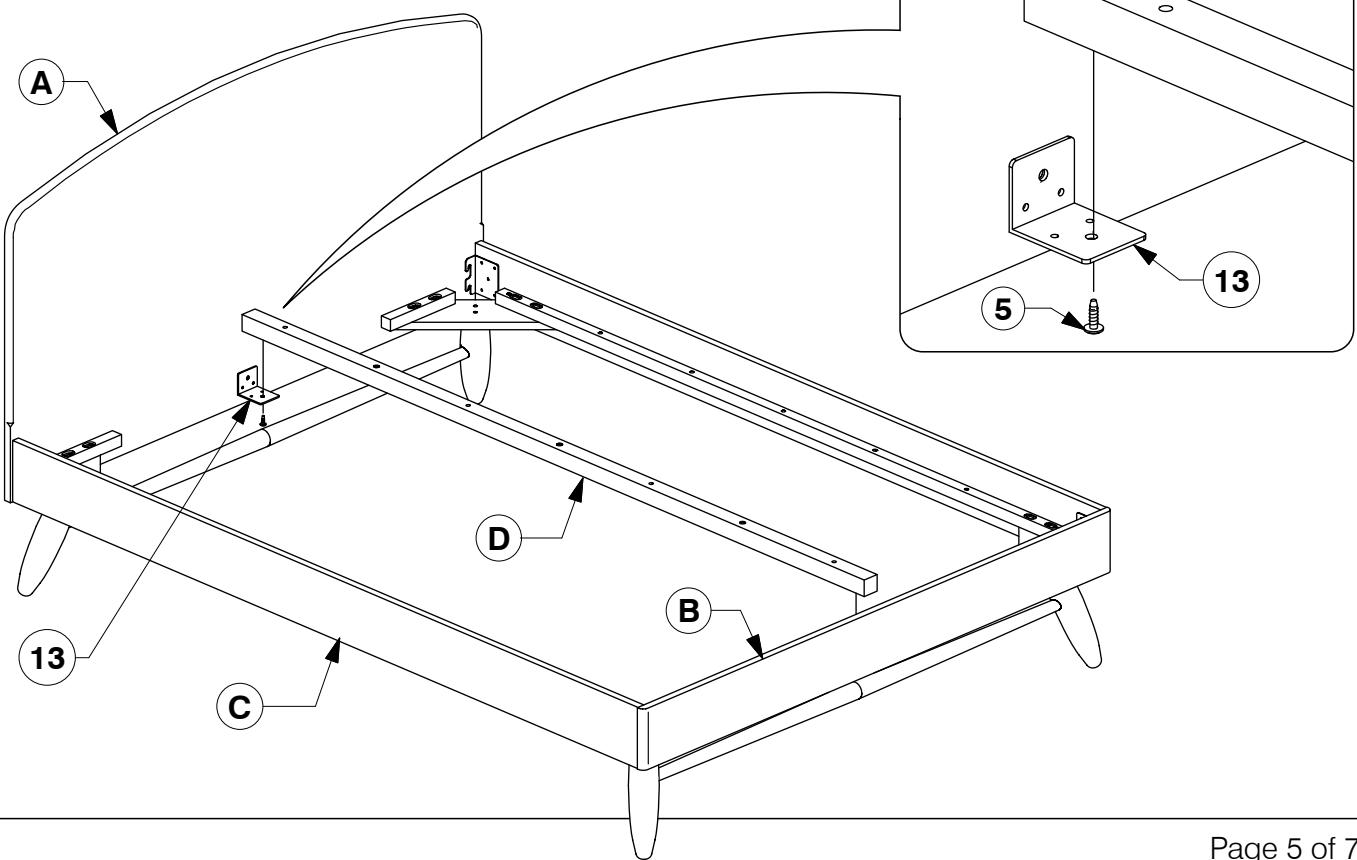


2200-1 Full Bed


Assembly Instructions

WII-0820

13 Fit the first 3 Slat and assemble the Support Leg (E) to the Bed Slat (L). Bolt & screw the Bed Slat (L) to the Side Rail (C) & Long Support (D).

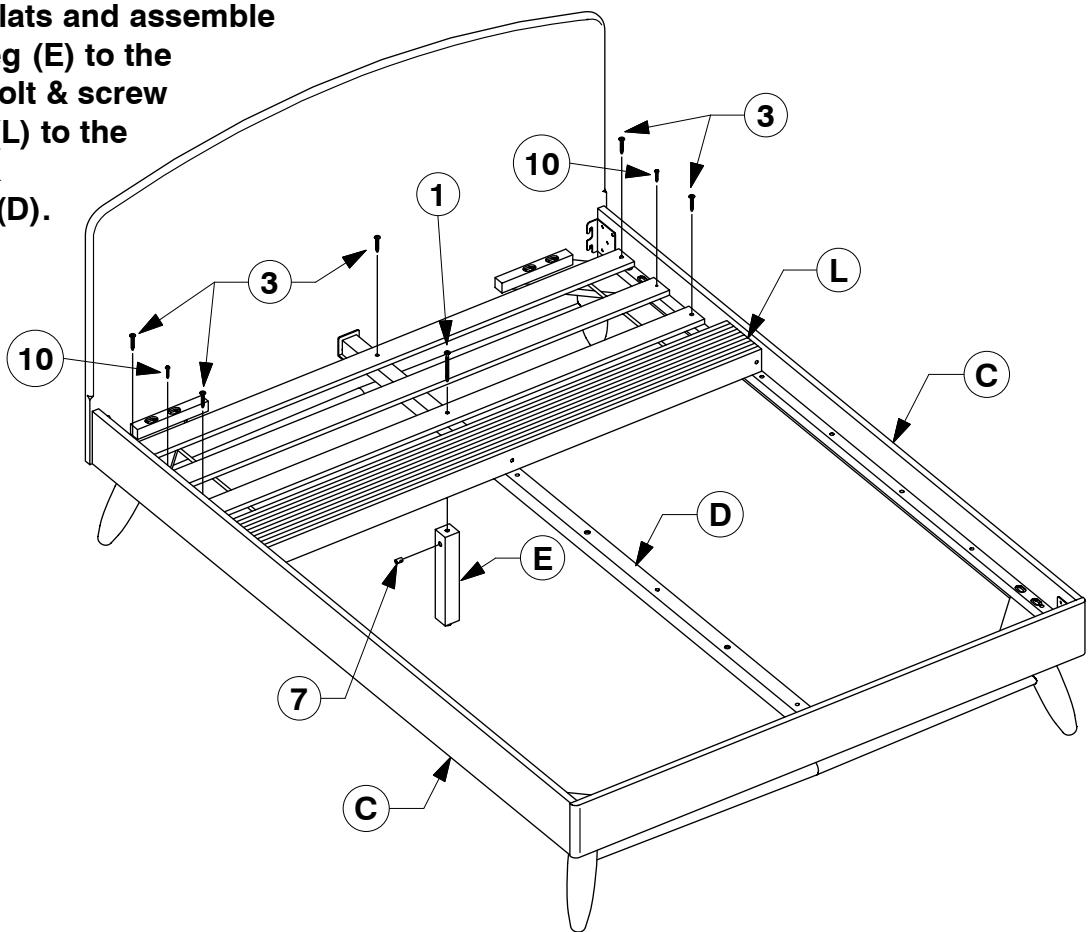

14 Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (L). Bolt & screw the Bed Slat (L) to the Side Rail (C) & Long Support (D).

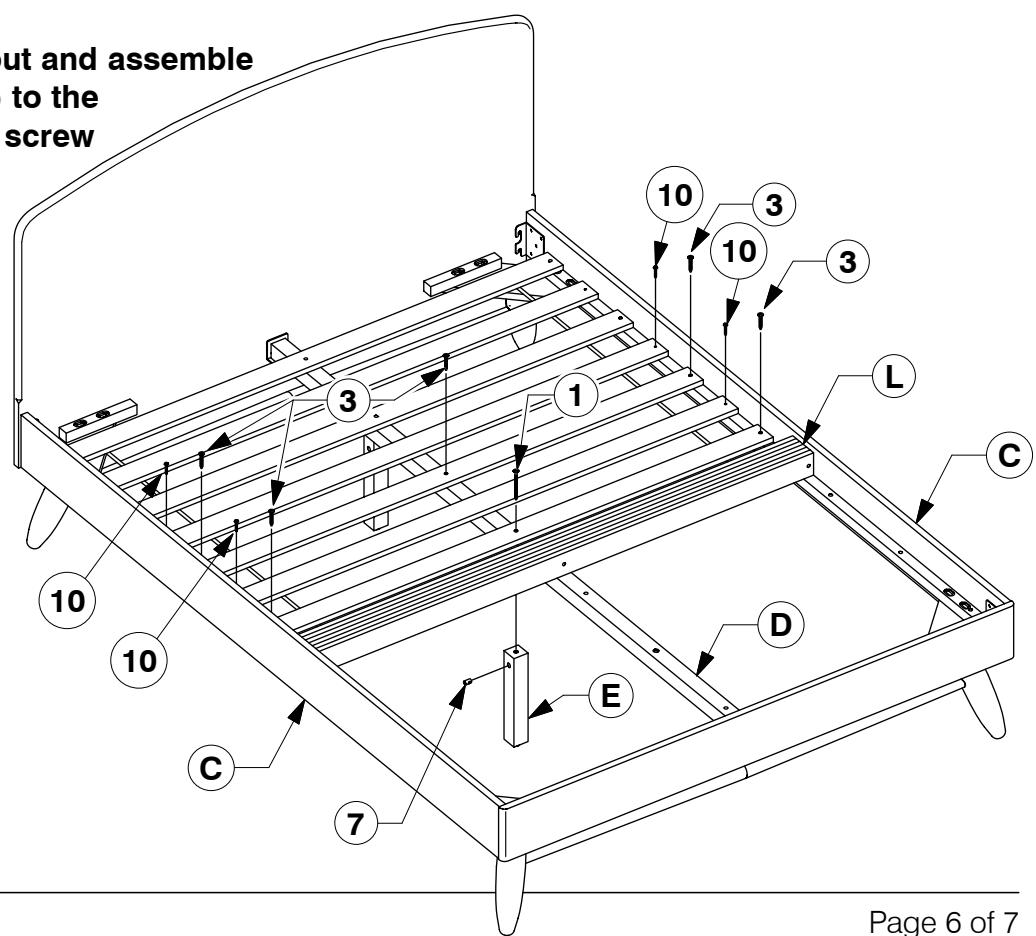


2200-1 Full Bed

Assembly Instructions

WII-0820

15 Fit the other Slats out and assemble the Support Leg (E) to the Bed Slat (L). Bolt & screw the Bed Slats (L) to the Side Rail (C) & Long Support (D).

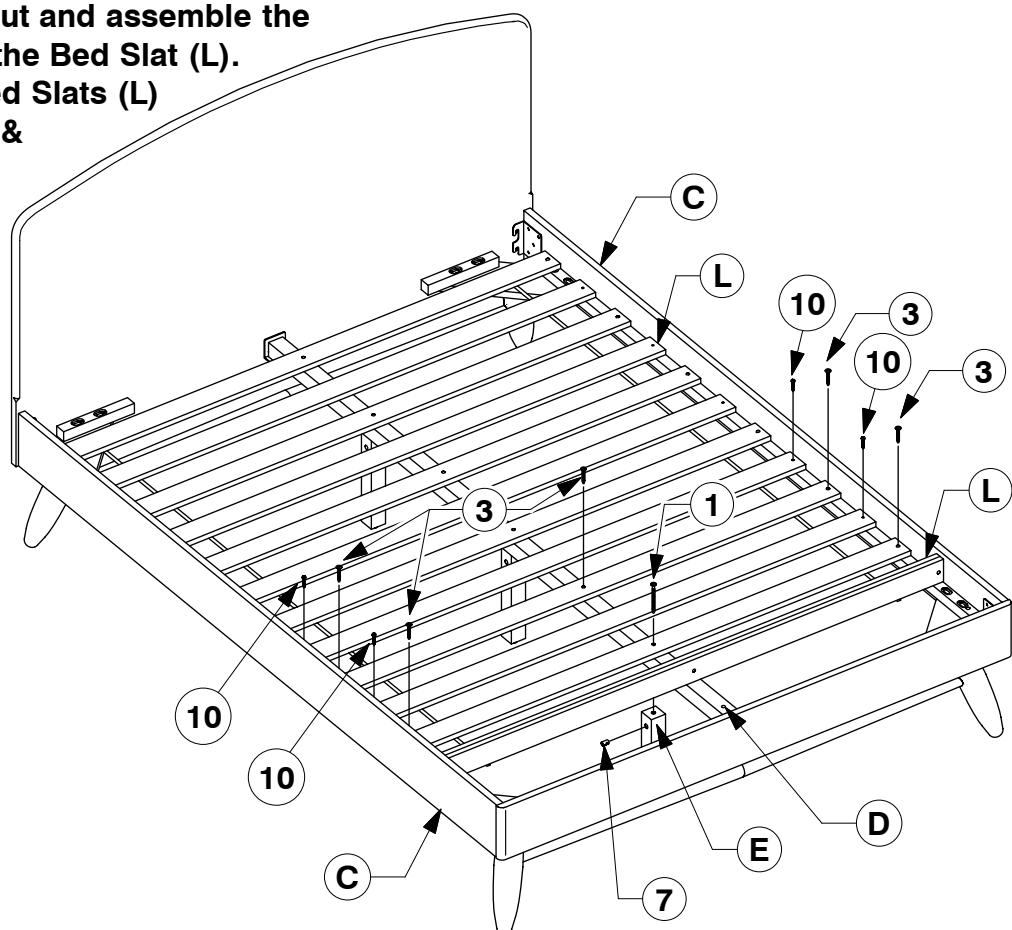

16 Bolt & screw the remaining Bed Slats (L) to the Side Rail (C).

