

- 3910 / 3950 - 961 6/6 POSTER HEADBOARD
3910 / 3950 - 991 6/6 POSTER WOVEN HEADBOARD
3910 / 3950 - 963 6/6 POSTER FOOTBOARD
3910 / 3950 - 994 6/6 POSTER WOVEN FOOTBOARD
3910 / 3950 - 880 5/0 - 6/6 RAILS

Assembly Instruction

A. Components :

Qty

1. Headboard : 1 Pc
2. Footboard : 1 Pc
3. HB Legs : 2 Pcs
4. HB Finial : 2 Pcs
5. FB Finial : 2 Pcs
6. Stretcher : 1 Pc
7. Bed Rails : 2 Pcs
8. Slats : 4 Pcs
9. Slats Support : 4 Pcs



a



b



c



d



e




f



g



h

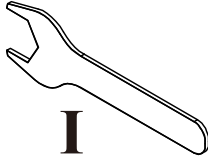

i

B. Hardware :

Qty


- a. Bolt M6 x 50mm : 10 Pcs
b. Flat Washer : 10 Pcs
c. Lock Washer : 10 Pcs
d. Allen Key : 1 Pc
e. Bolt M8 x 100mm : 8 Pcs
f. Halfmoon Washer : 8 Pcs
g. Hexa Nut : 8 Pcs
h. Screw : 8 Pcs
i. Hexa Wrench : 1 Pc

C. Tool Required


1. Screw Driver = (not included)




STEP - 1 Option 1

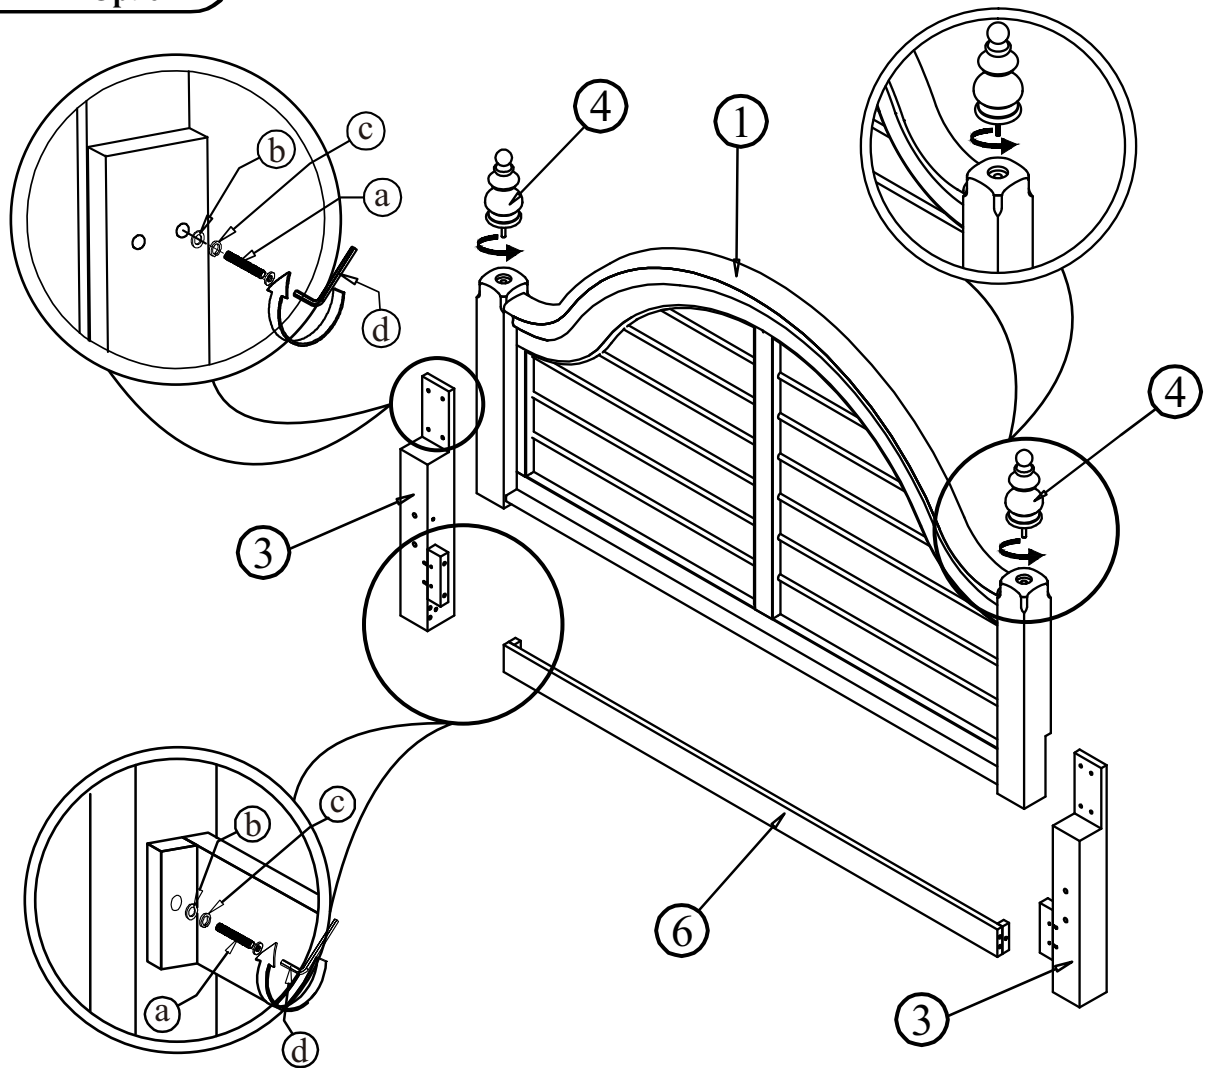


STEP - 1 Option 2

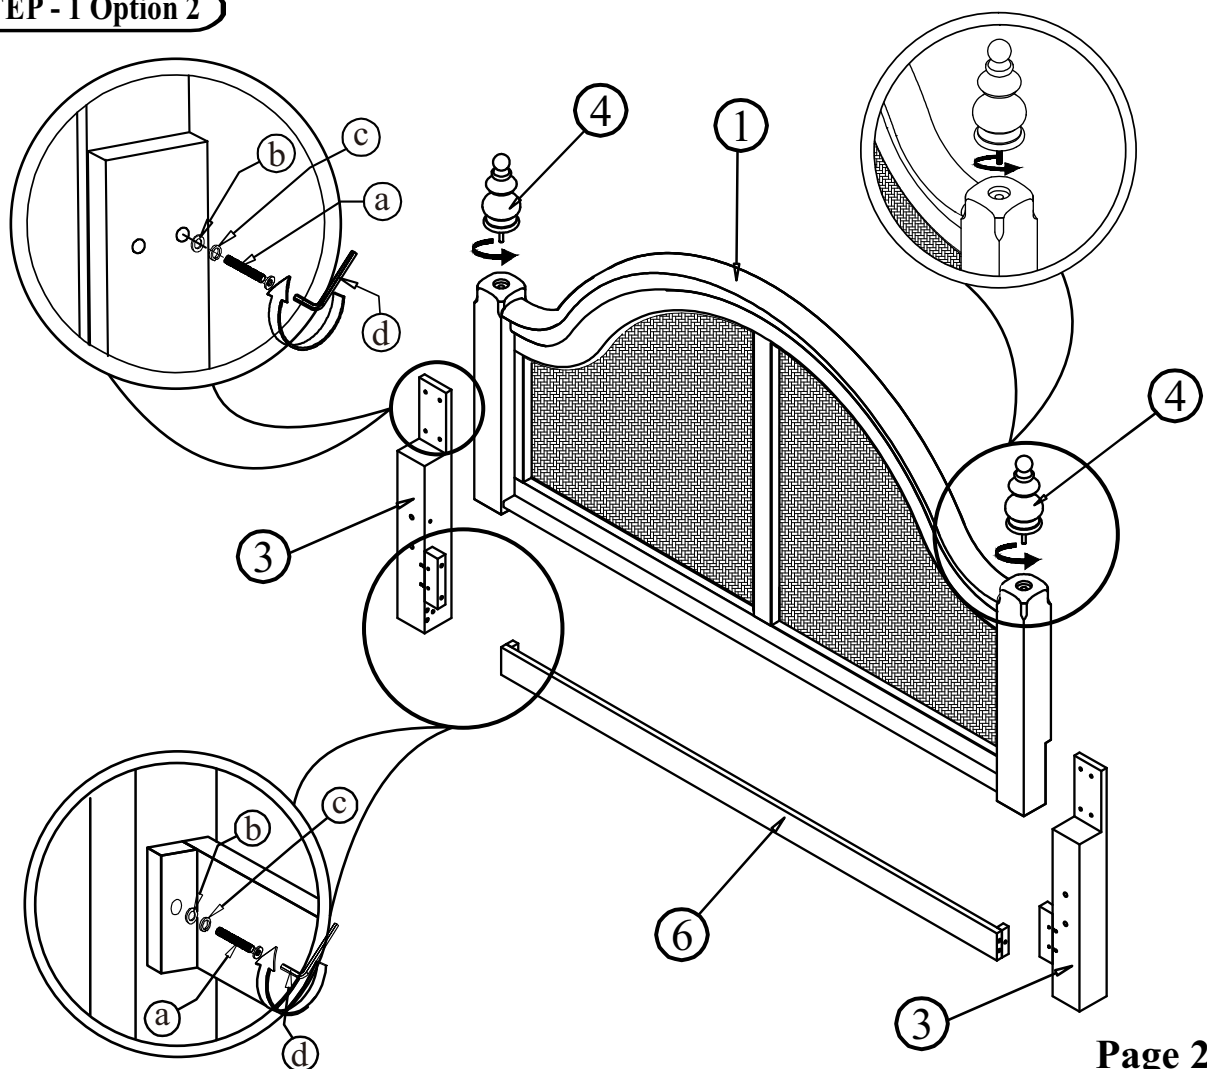


STEP - 2 Option 1

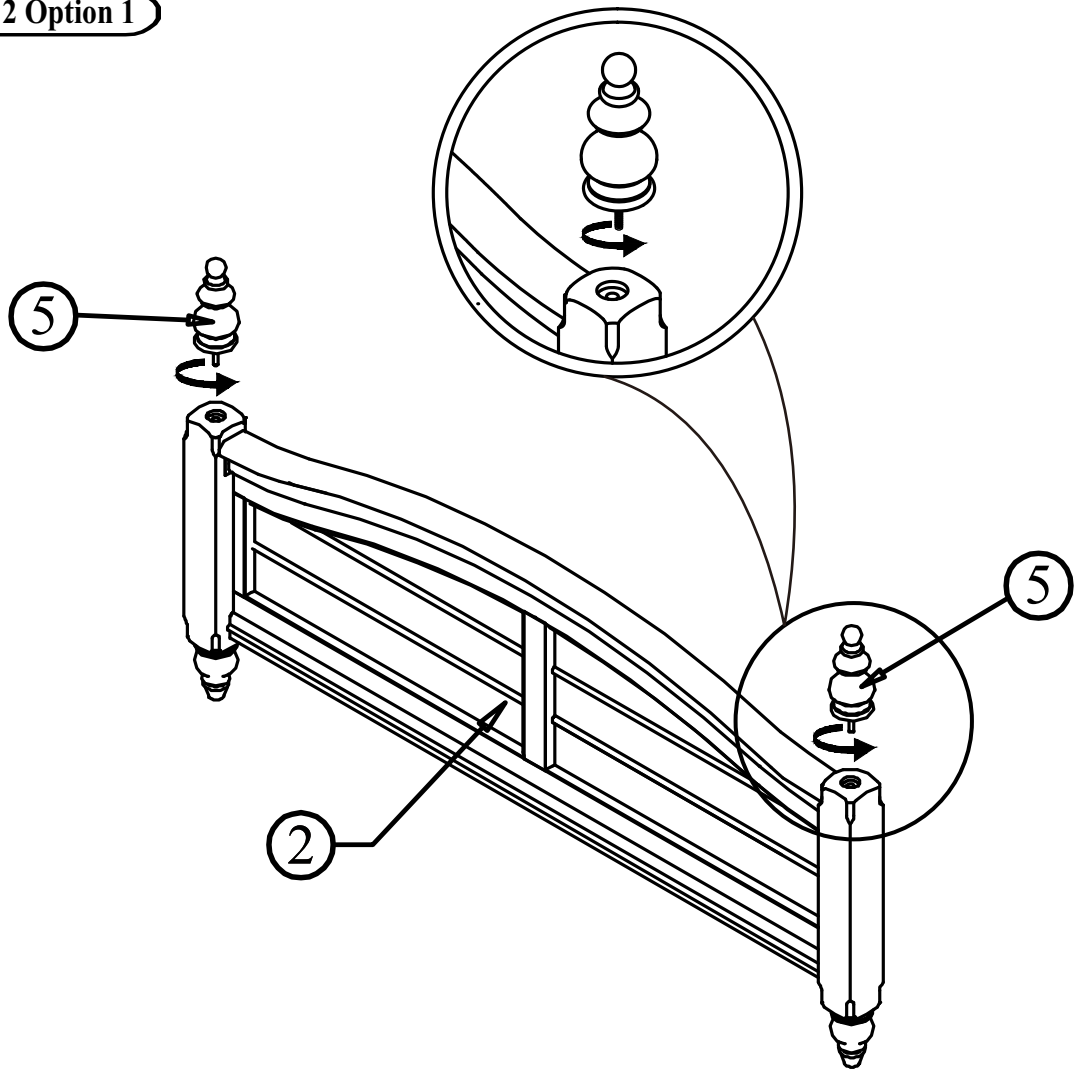


STEP - 2 Option 2

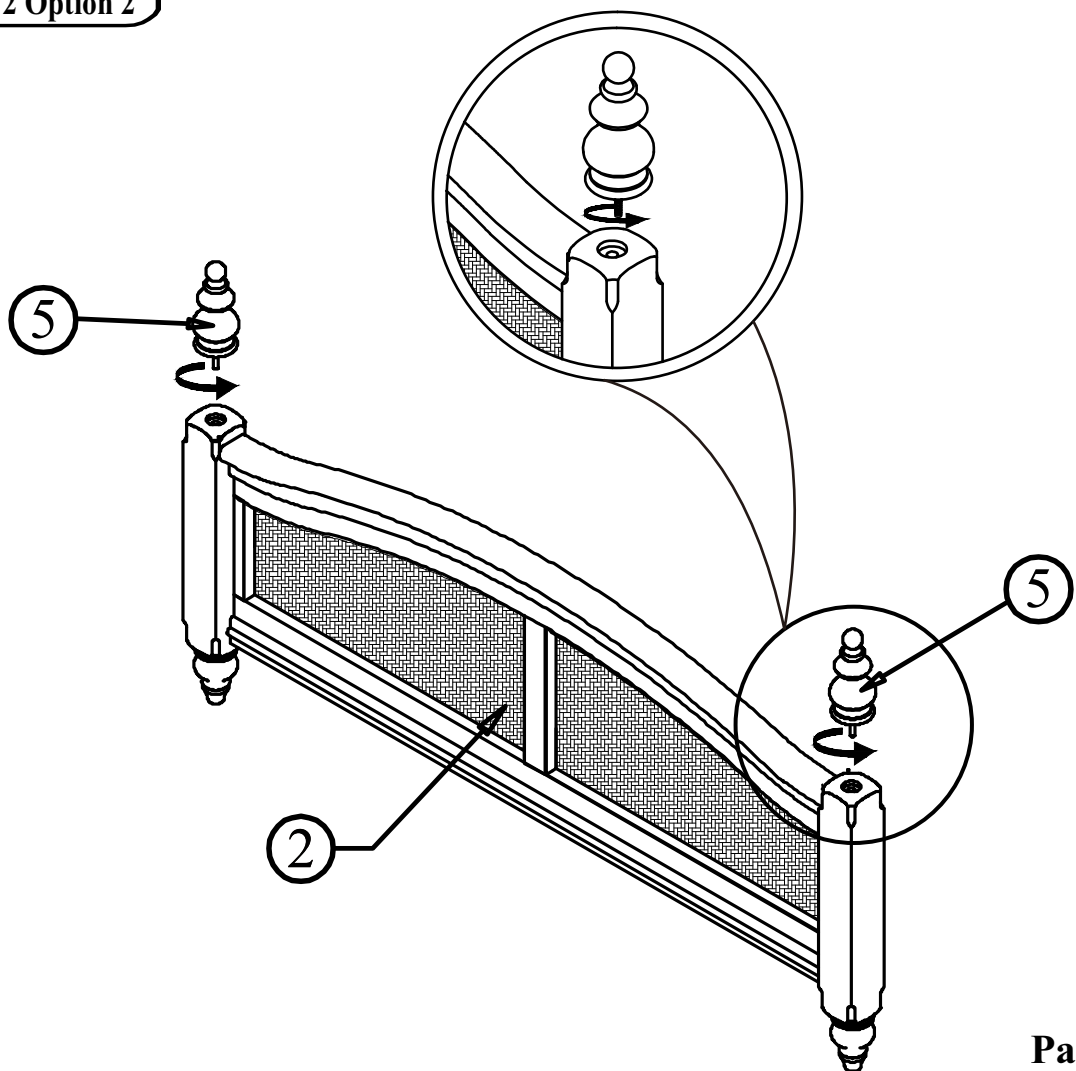


STEP - 3 Option 1

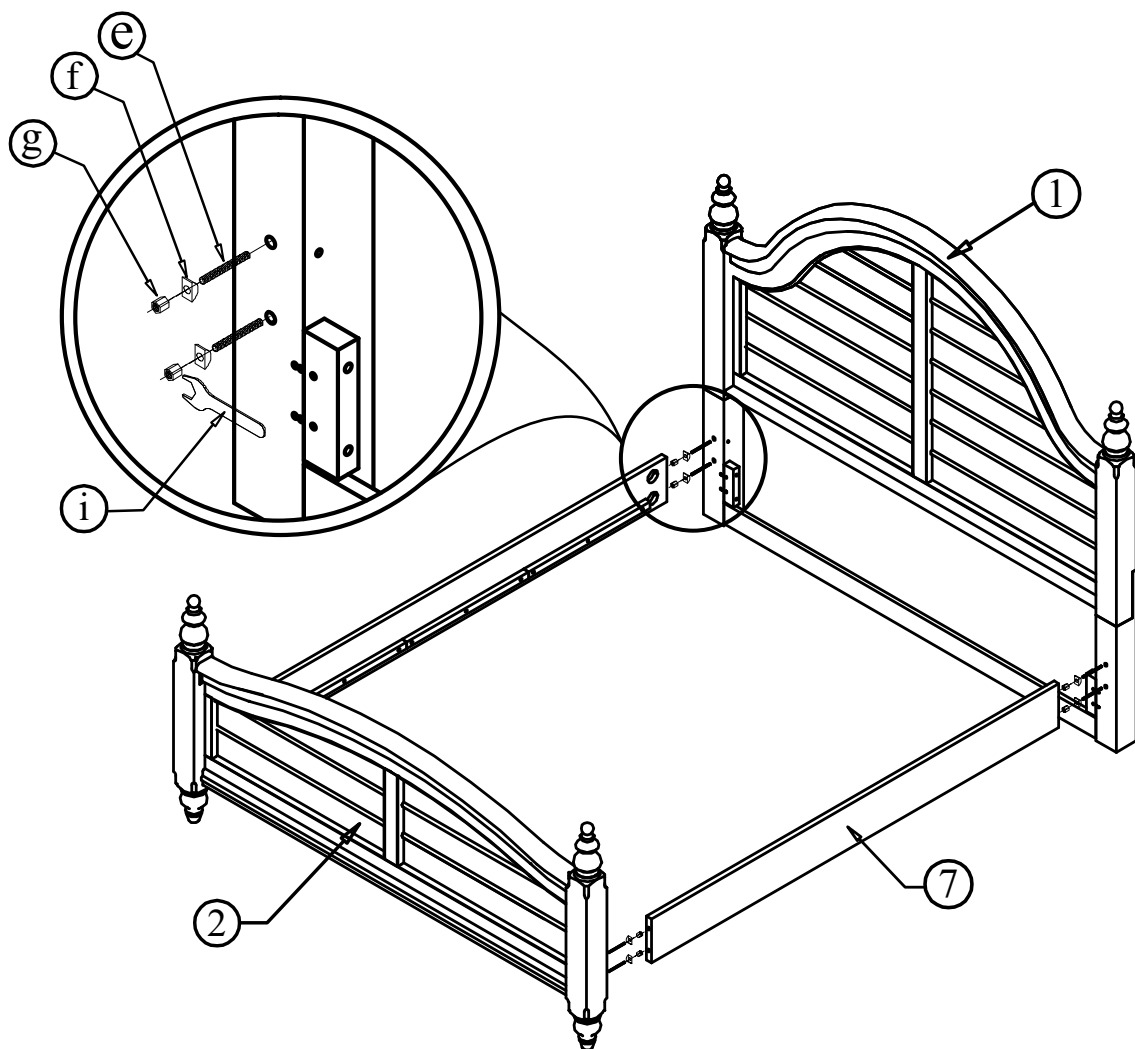


STEP - 3 Option 2

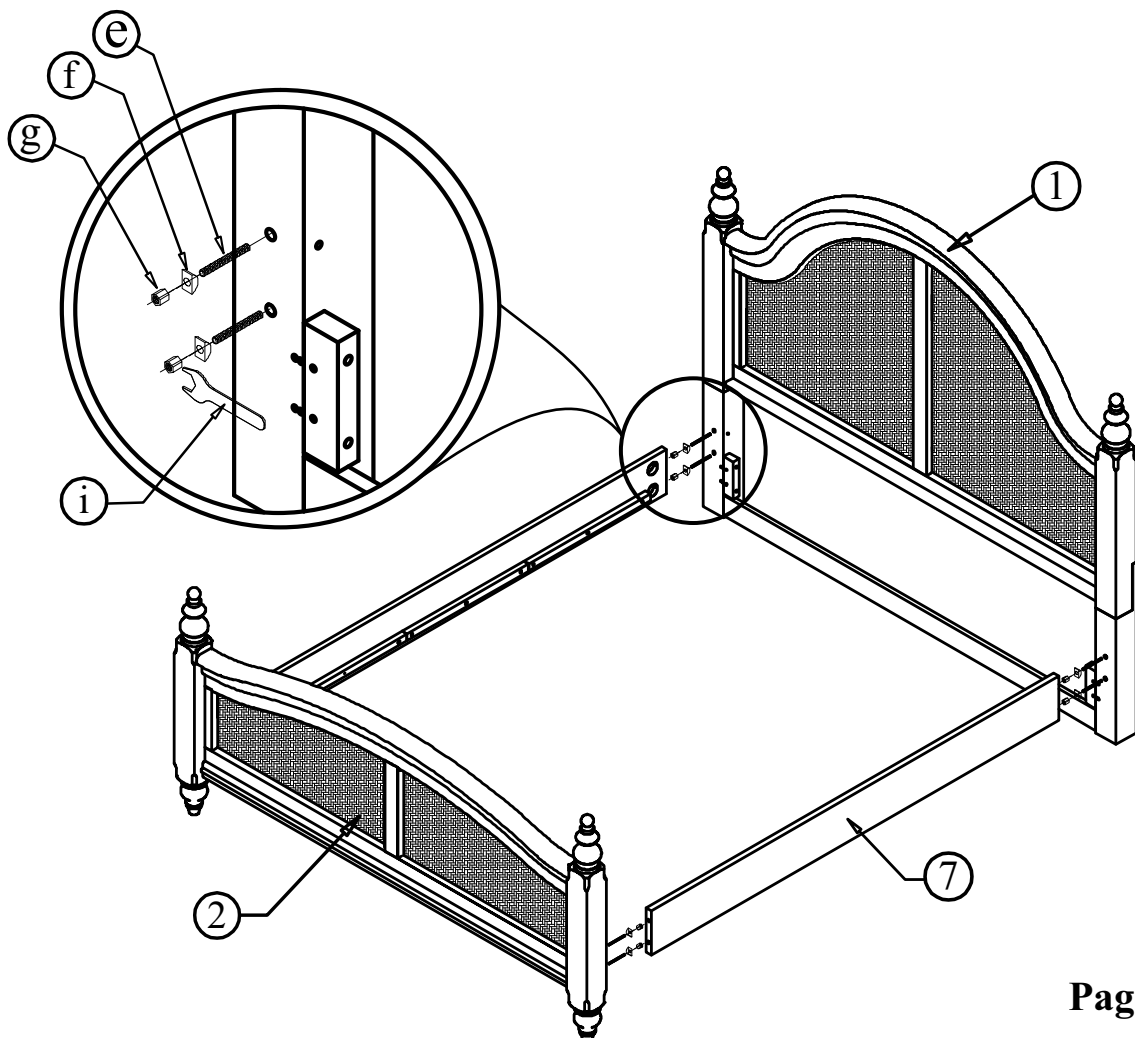


STEP - 4 Option 1

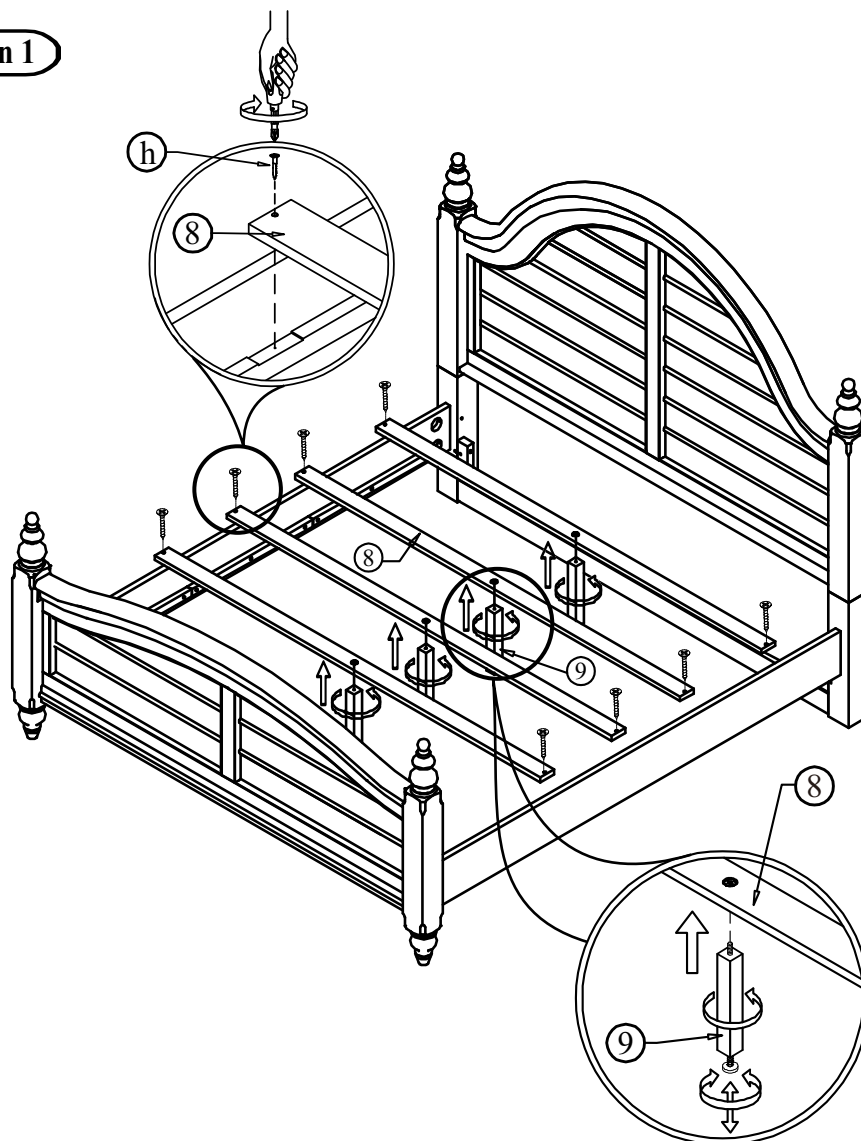


STEP - 4 Option 2

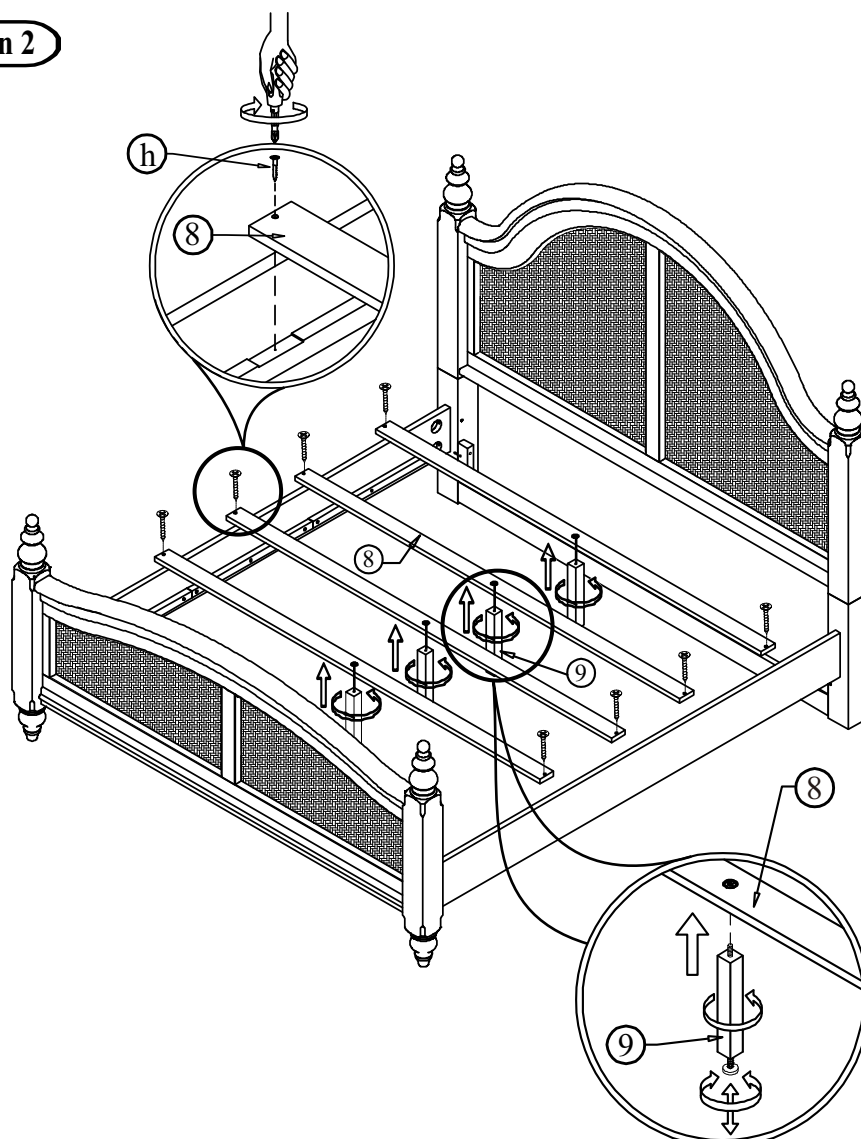

CARTON 1

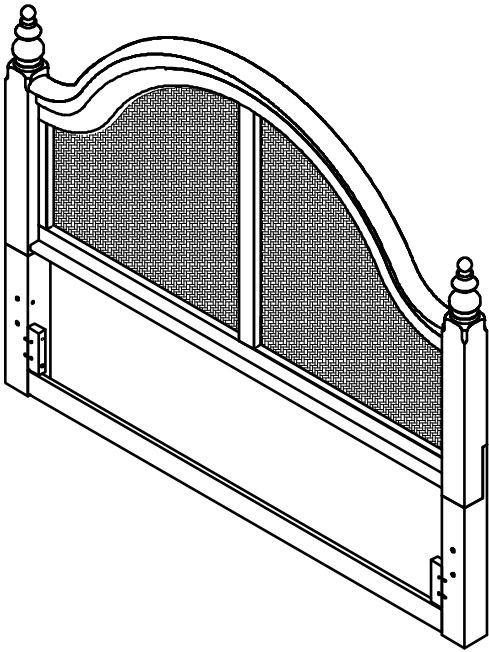


6/6 Poster Woven Headboard.....1 Pc

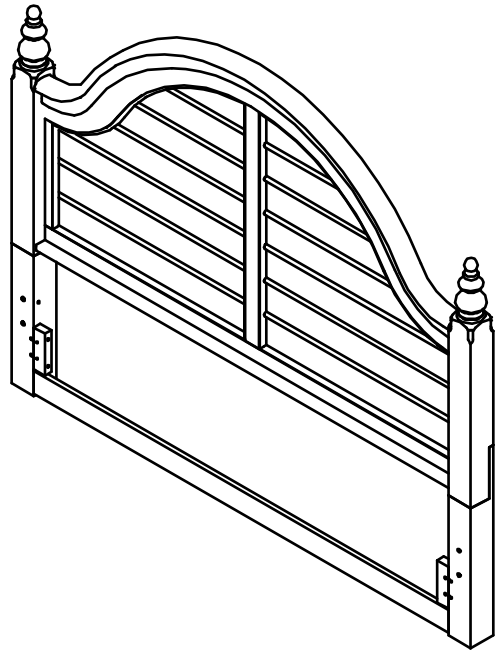


6/6 Poster Headboard.....1 Pc


CARTON 2

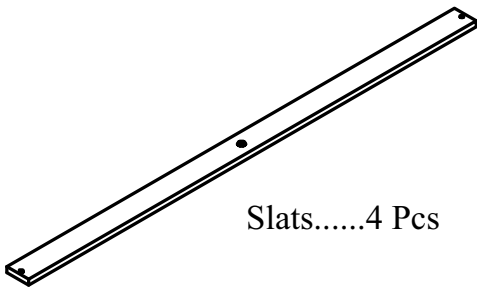

Slats.....4 Pcs

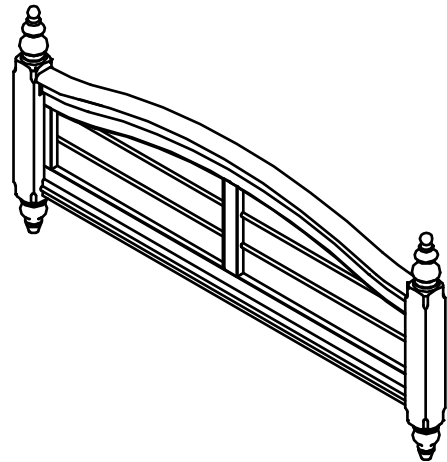

6/6 Poster Footboard.....1 Pc

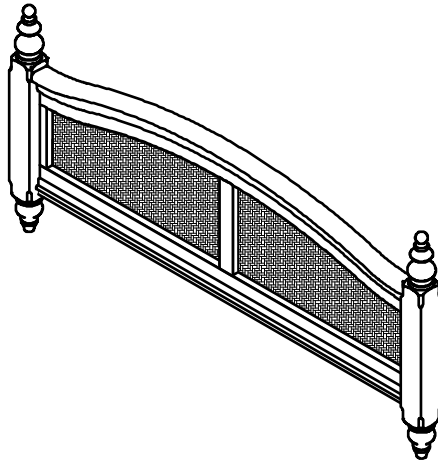


6/6 Poster Woven Footboard.....1 Pc



Slats Support.....4 Pcs

CARTON 3

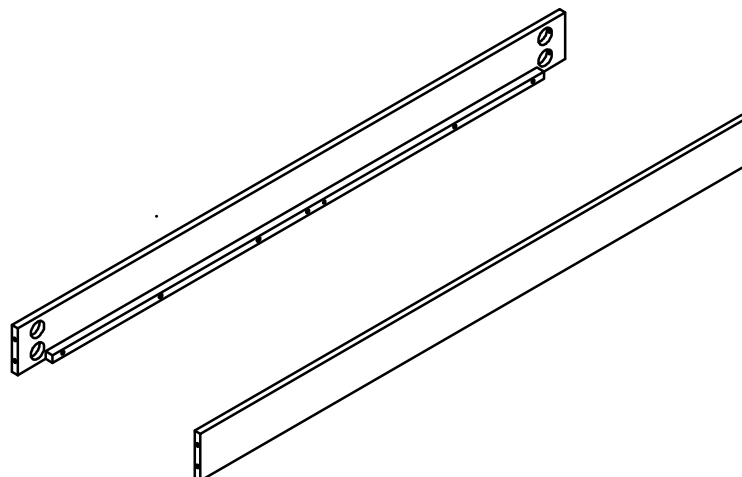

5/0 6/6 Rails.....2 Pcs