


ASSEMBLY INSTRUCTION

ITEM NO.: 193D5803RF-24








COUNTER HEIGHT CHAIR

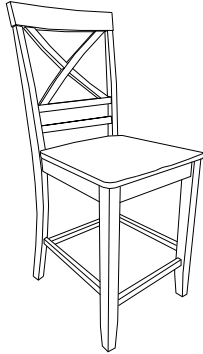








Thank you for purchasing the product. Please take time to read and follow the instruction below. Check that you have all parts and hardware before assembly. Parts apparently missing are often found in the packing materials. If you do not have all the parts listed, have your dealer contact us and they will be sent to you immediately.



It is recommended to install protective pads under all legs and supports to avoid damage or scratches when placing furniture on a wood floor or other hard surface, and to limit indentation and prevent discoloration if placing on carpet.

PARTS LIST			
No	Sketch	Description	Quantity
1		Chair Back	1PC
2		Seat Frame	1PC
3		LSF Front Leg	1PC
4		RSF Front Leg	1PC
5		LSF Cross Bar	1PC
6		RSF Cross Bar	1PC
7		Front Cross Bar	1PC

HARDWARE LIST			
No	Description	Sketch	Quantity
A	JCBC - M6 x 1.0 x 70mm		4PCS
B	JCBC - M6 x1.0 x 60mm		4PCS
C	JCBC - M6 x 1.0 x 35mm		2PCS
D	Spring Washer - 1/4" x 1/4" x 1/2" x 0.06"		10PCS
E	Flat Washer - 1/4" x 2/7" x 3/4" x 0.04"		10PCS
F	Pan Head Screw - #8 x 1 1/2" x 3.0		6PCS
G	Allen Key - 1/6" x 2"		1PC

* HAREWARE ARE SET IS IN 5803RF-24 FOR ASSEMBLY.


NOTE : YOU WILL ALSO NEED A PHILIP SCREWDRIVER (NOT PROVIDED).

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.


MADE IN MALAYSIA

ASSEMBLY INSTRUCTION
ITEM NO.: 193D5803RF-24
COUNTER HEIGHT CHAIR

STEP 1

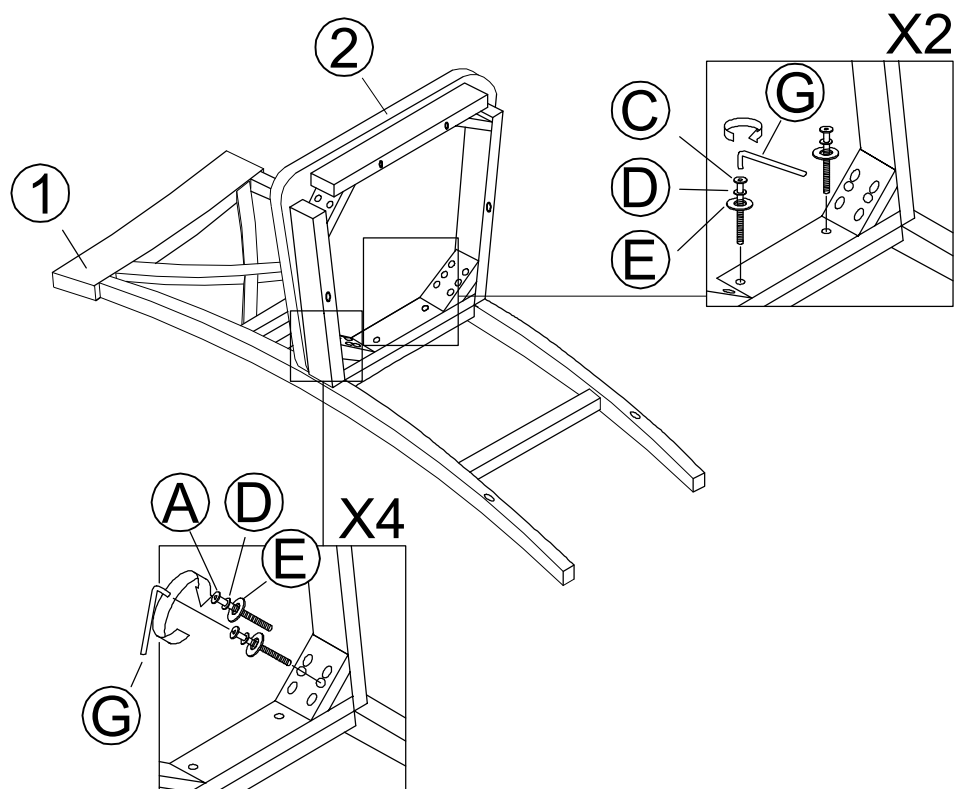

STEP 2

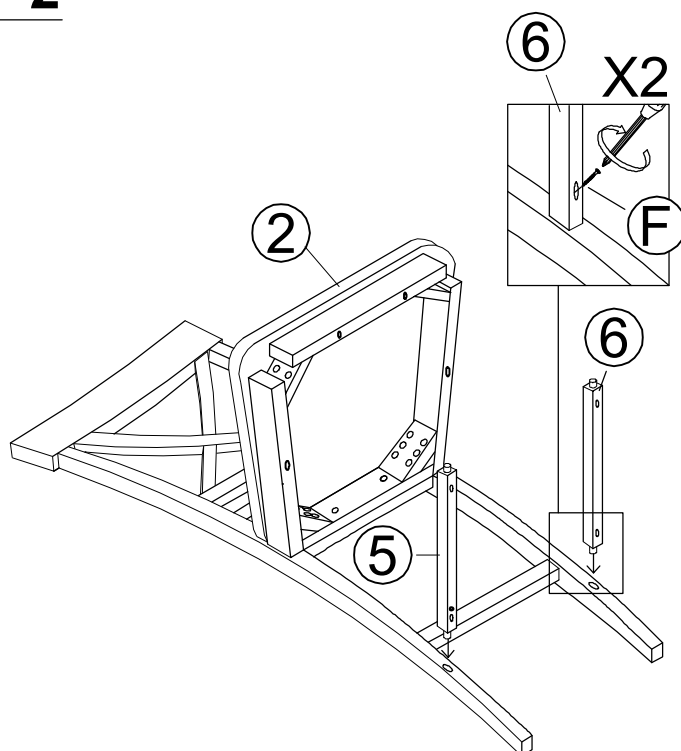


DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.

ASSEMBLY INSTRUCTION


ITEM NO.: 193D5803RF-24

COUNTER HEIGHT CHAIR

STEP 3

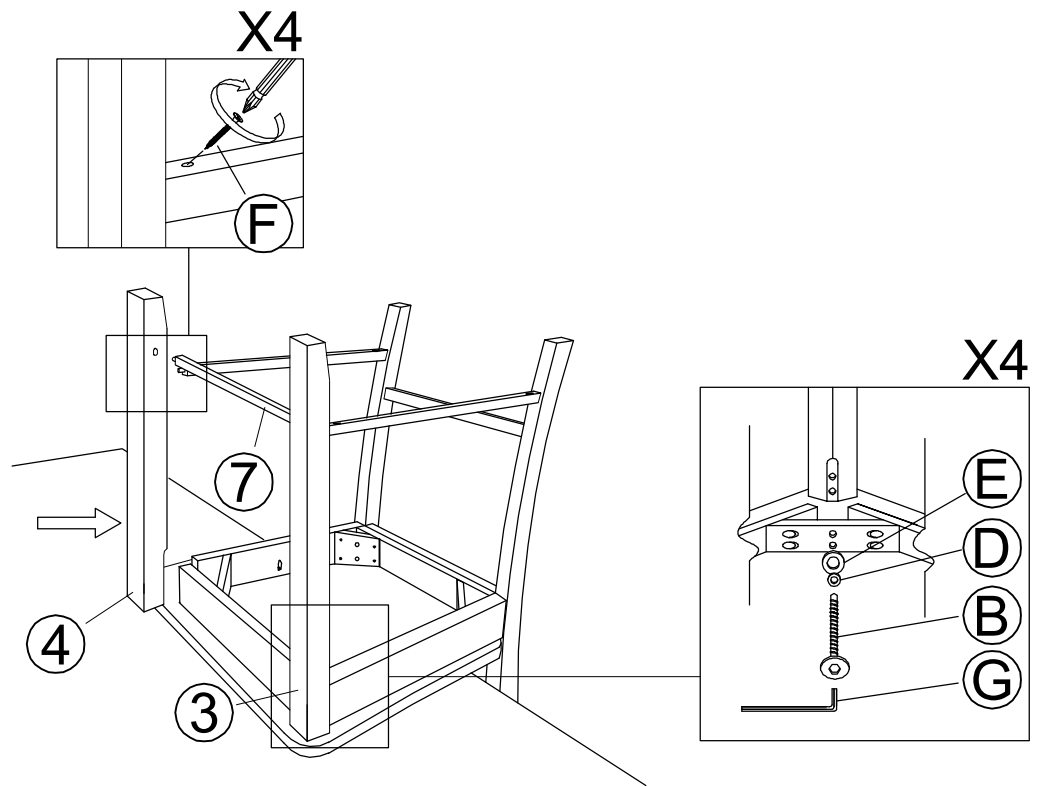

STEP 4

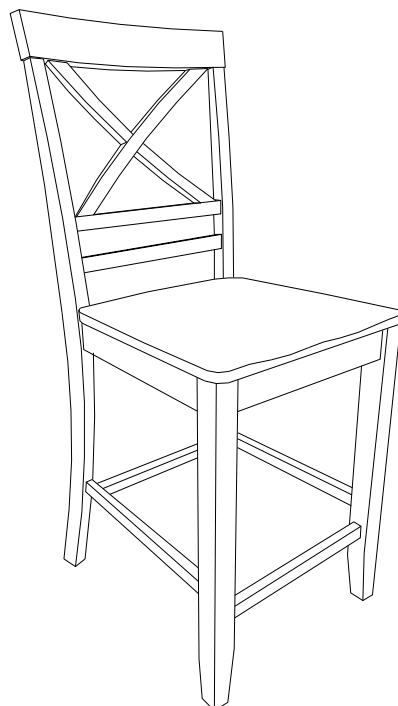

COMPLETED

DO NOT TIGHTEN BOLTS UNTIL COMPLETELY ASSEMBLED.