

## WYNDHAM COLLECTION

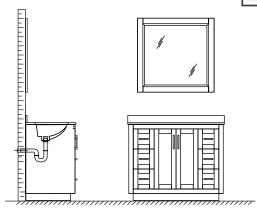



- Prior to installation please check received items against the "Packing List".
  Please report any missing items to your retailer immediately.
- Protect all surfaces from sharp objects, high heat sources, direct prolonged sunlight and chemical hazards.
- Professional installation recommended.
- Please install on a level surface. If minor door and drawer alignment is required, please follow the easy directions below.

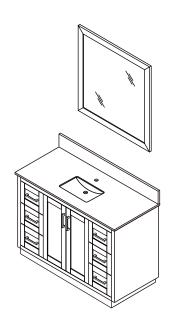

### **PACKING LIST**

(Not all components may be included, depending upon your purchase)

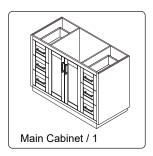

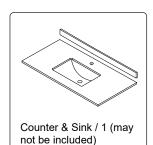








## HOW TO ADJUST HINGES (if required)











#### REQUIRED TOOLS NOT IN BOX







Spirit Level



Phillips Screwdriver



Tape measure



Pencil




Electric Drill


WC-2929-42-SGL Installation Guide


# WYNDHAM


### INSTALLATION INSTRUCTIONS

dry 24 hours for proper curing.

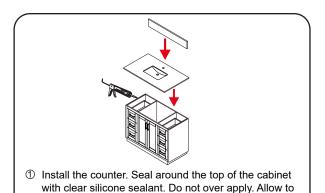


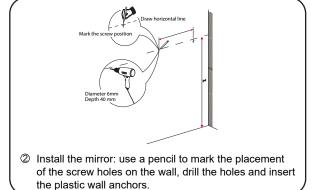

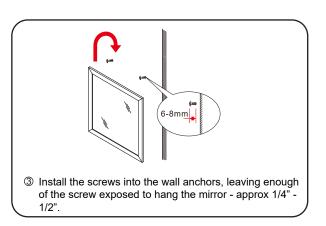

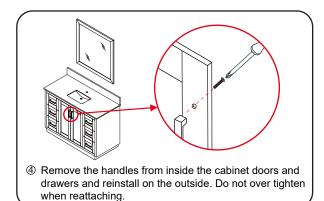


### HOW TO ADJUST DRAWER SLIDES (if required)

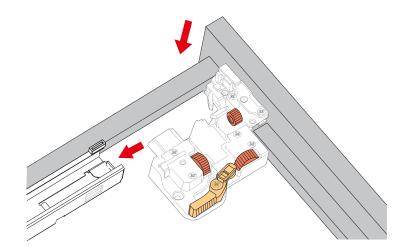


Up and Down Adjustment

WC-2929-42-SGL Installation Guide

# WYNDHAM COLLECTION

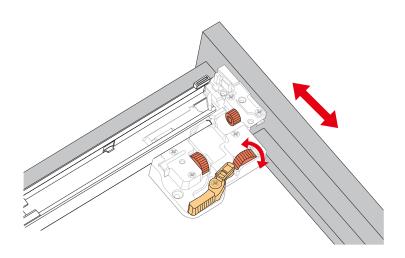

Side Adjustment

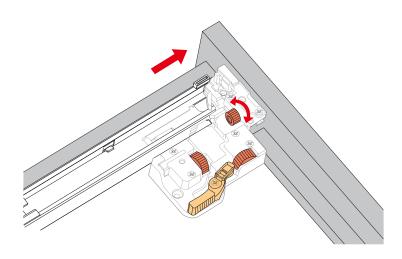

Depth Adjustment



Scan the QR code with your phone to watch detailed video instructions or visit www.wyndhamcollection.com/3dslides

WC-2929-42-SGL Installation Guide