

# ASSEMBLY INSTRUCTION

---


## **PLEASE READ BEFORE ASSEMBLING!**

Tip #1: Make sure you've taken all the pieces and hardware out of its packaging before discarding the box. Assembly on top of flattened box/blanket is recommended.

Tip #2: Using page 2 and/or page 3 of instruction manual make sure all pieces and hardware are accounted for.


Tip #3: Note position of all holes on each panel during assembly.

ITEM# : 202811      202812

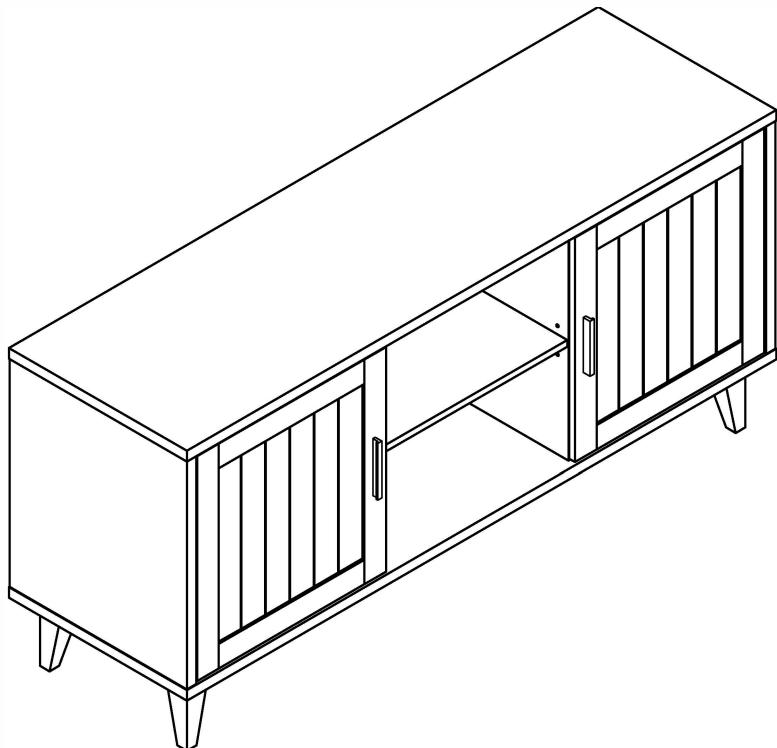

# PARTS IDENTIFICATION

ITEM#: 202811 202812

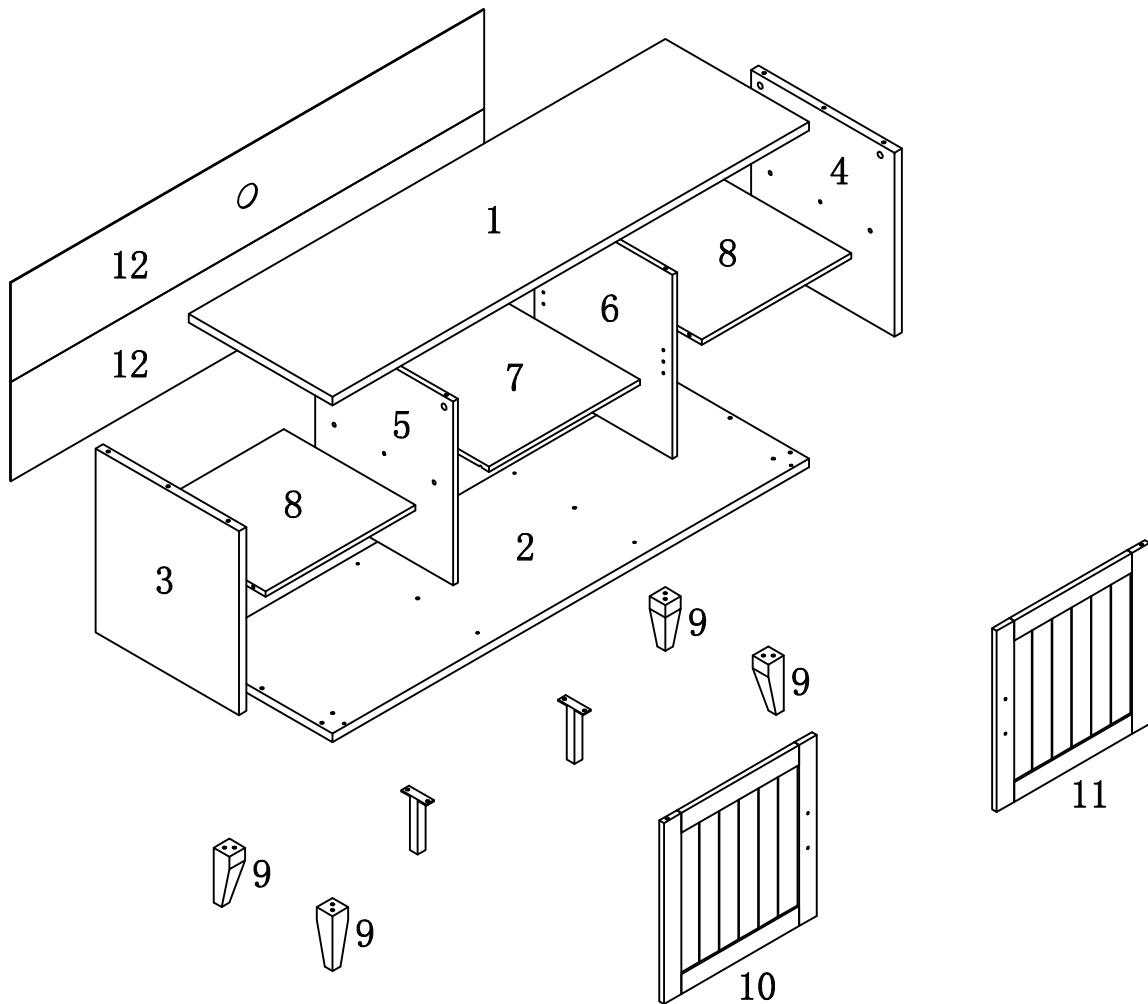

(1)	1pc	(7)	1pc
(2)	1pc	(8)	2pcs
(3)	1pc	(9)	4pcs
(4)	1pc	(10)	1pc
(5)	1pc	(11)	1pc
(6)	1pc	(12)	2pcs






# HARDWARE IDENTIFICATION

ITEM#: 202811      202812


A		L29	16pcs
B		ø15	16pcs
C		ø8x25	16pcs
D		ø3x14	4pcs
E		ø3x16	4pcs
F		ø4x45	4pcs
G			2pcs
H			2pcs
I			2pcs
J		ø7x48	4pcs
K		ø16xø8x2	8pcs
L			46pcs
M		ø22	20pcs
N		ø16	4pcs
O		ø5	4pcs
P			4pcs
Q			1pc
R			2pcs
S		M4x22	4pcs
T		M6x12	4pcs
U		80x25x152	2pcs
V		197x5x1	1pc
W		ø4x25	1pc
X		ø5x40	1pc
Y		ø8 x 40	1pc
Z		12x12x1	2pcs
A1		Glue: For securing please apply to wood dowel first before inserting into panel	

# ASSEMBLY INSTRUCTION


ITEM#: 202811      202812

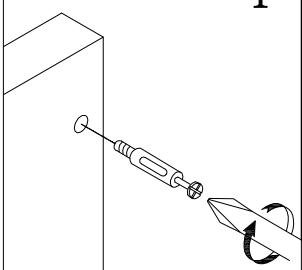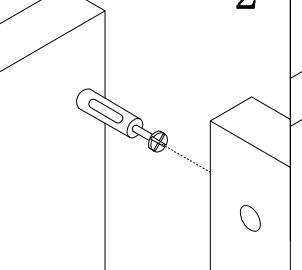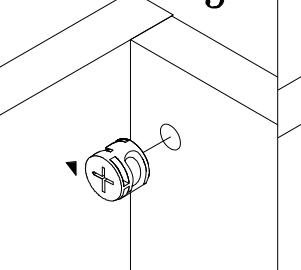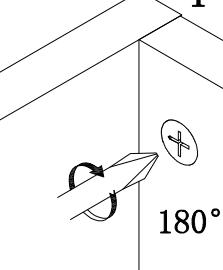HOW TO	1	2	3	4
 Cam Bolt				 180°

STEP1

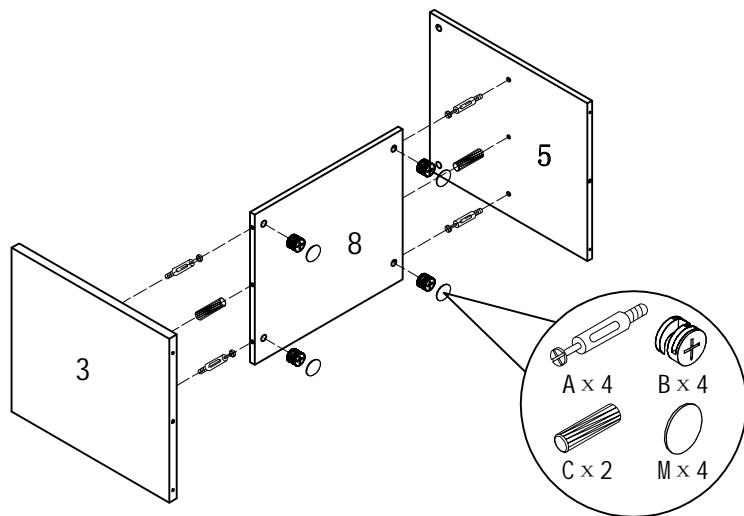


STEP2

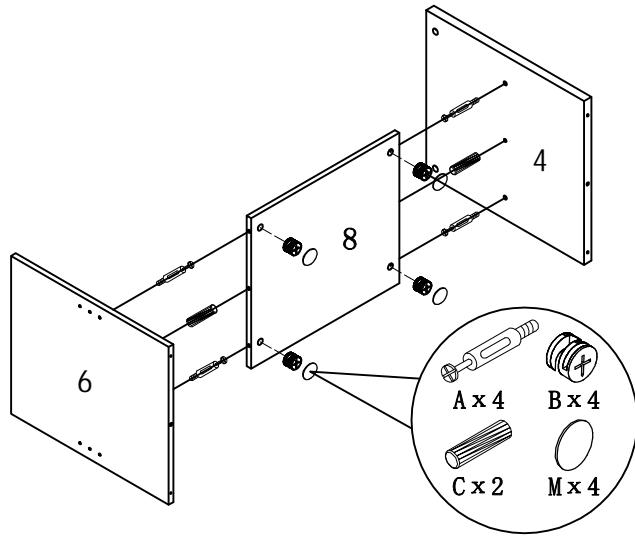


# ASSEMBLY INSTRUCTION

ITEM#:202811 202812

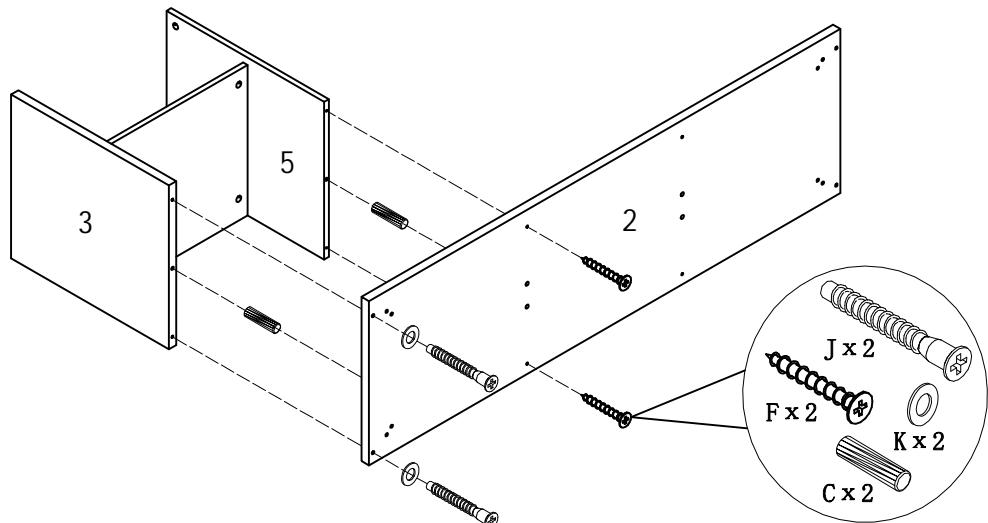


STEP3

STEP4

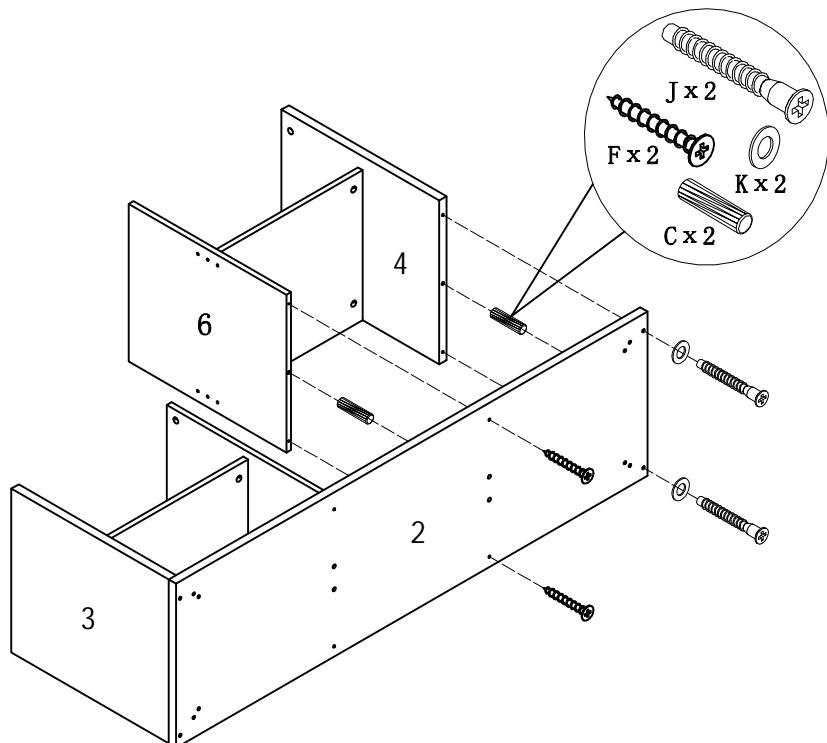


# ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

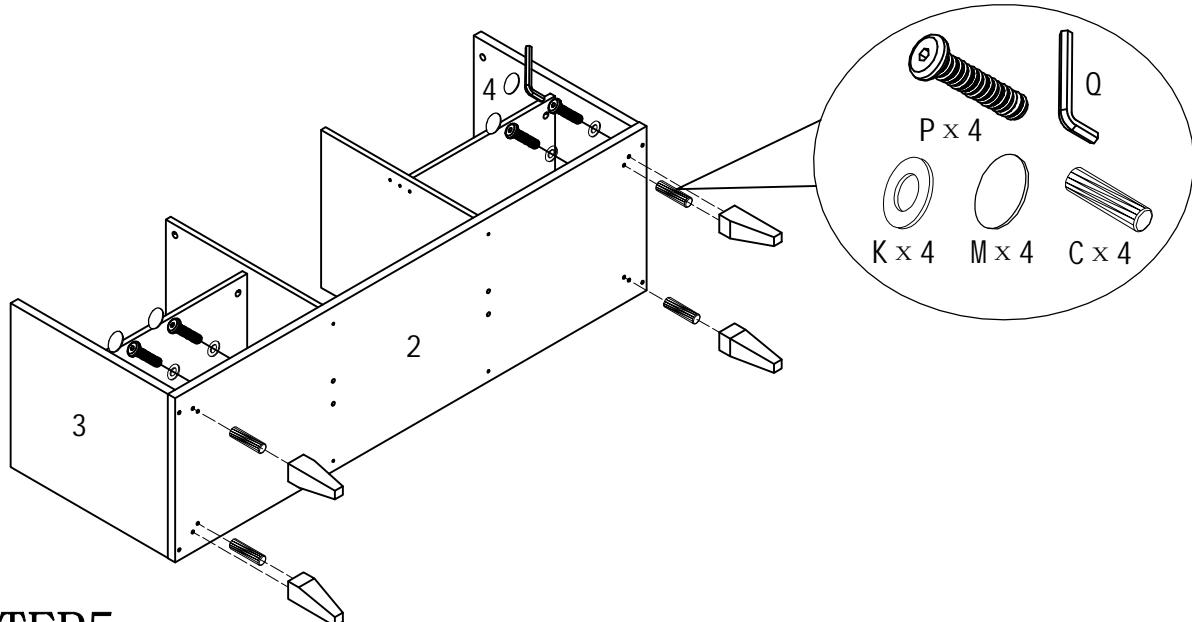


STEP5

STEP6

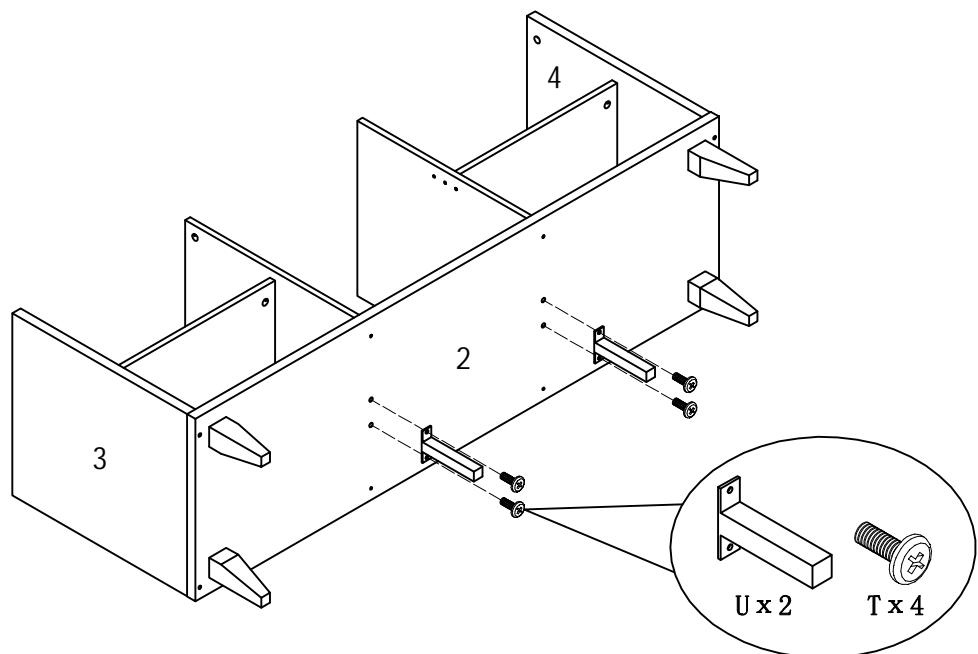


# ASSEMBLY INSTRUCTION

ITEM#:202811 202812

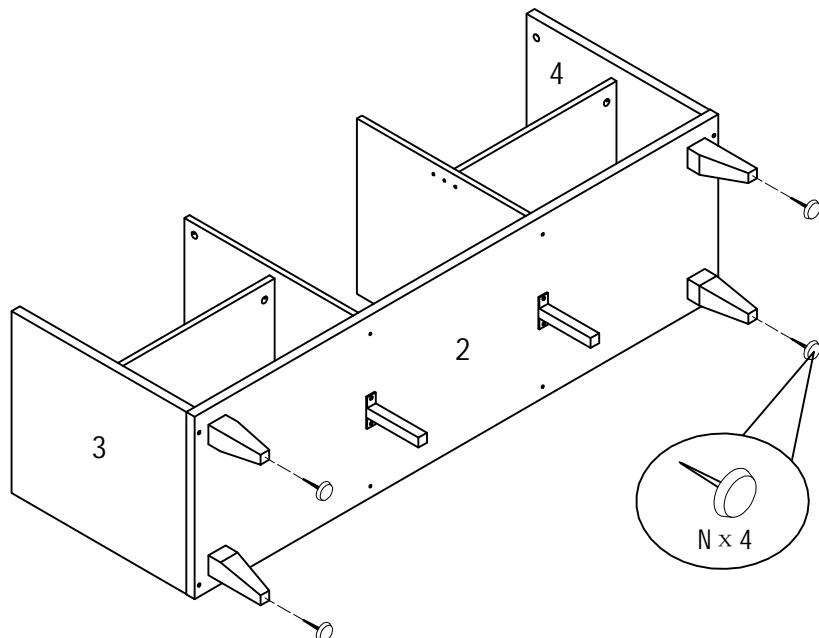


STEP7

STEP8

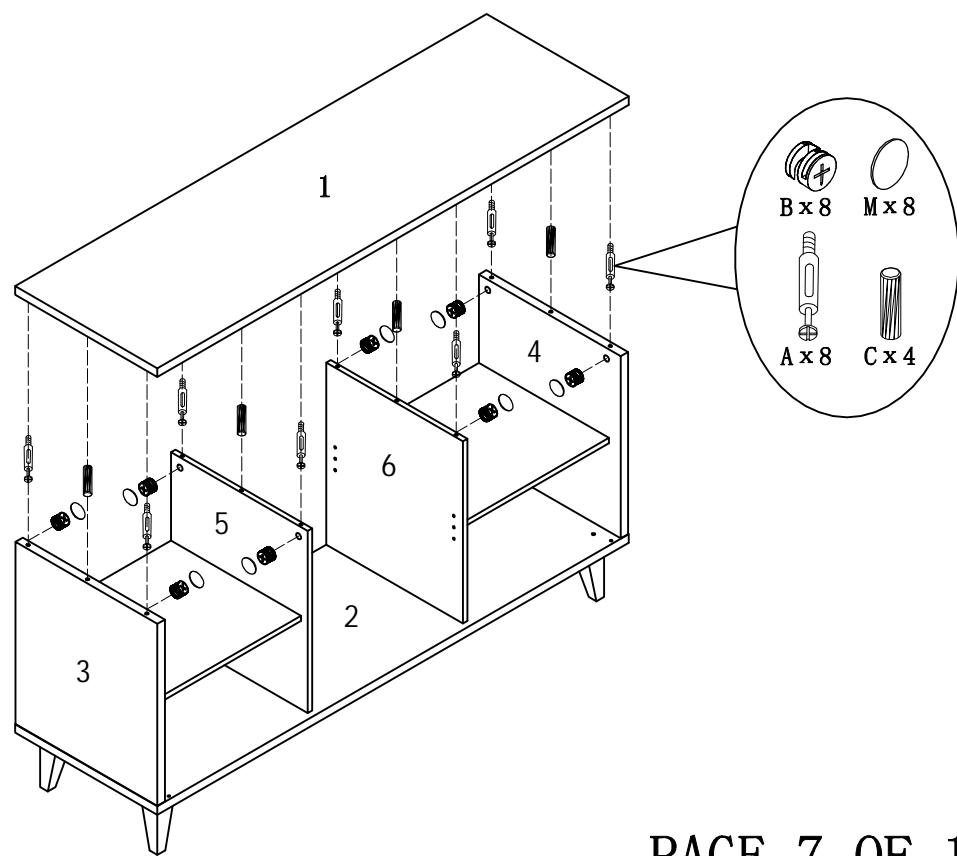


# ASSEMBLY INSTRUCTION

ITEM#:202811 202812

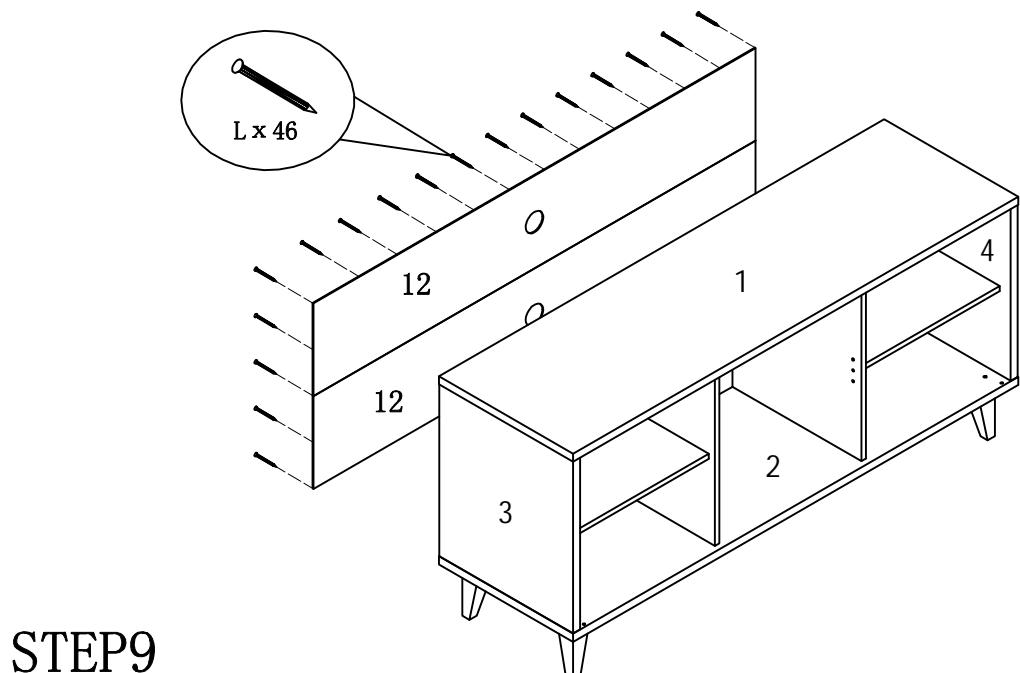


STEP10

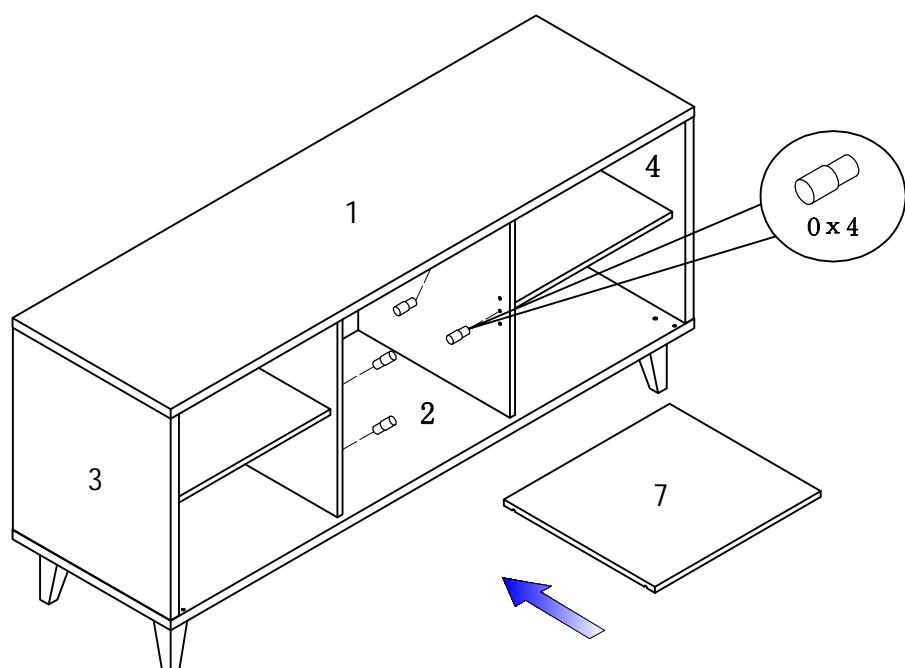


# ASSEMBLY INSTRUCTION

ITEM#: 202811 202812

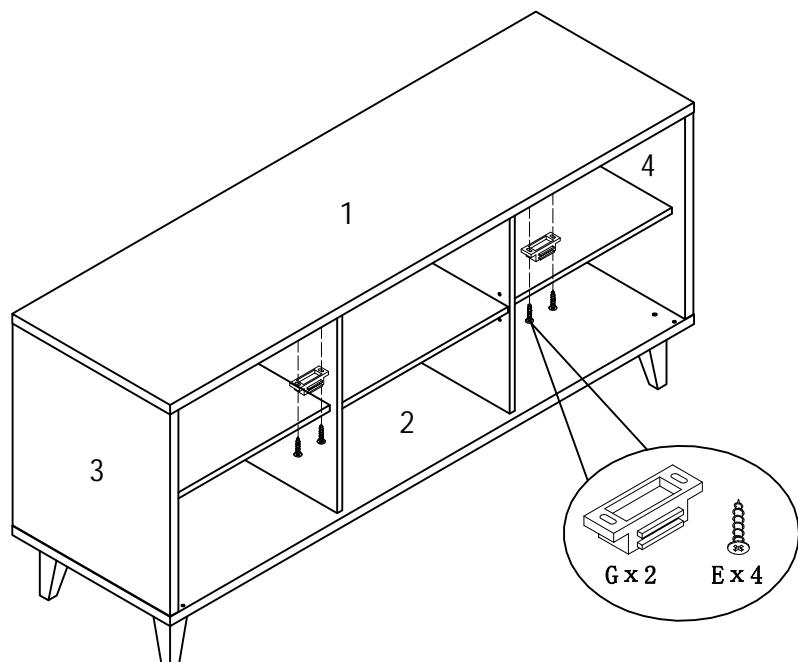


STEP11

STEP12

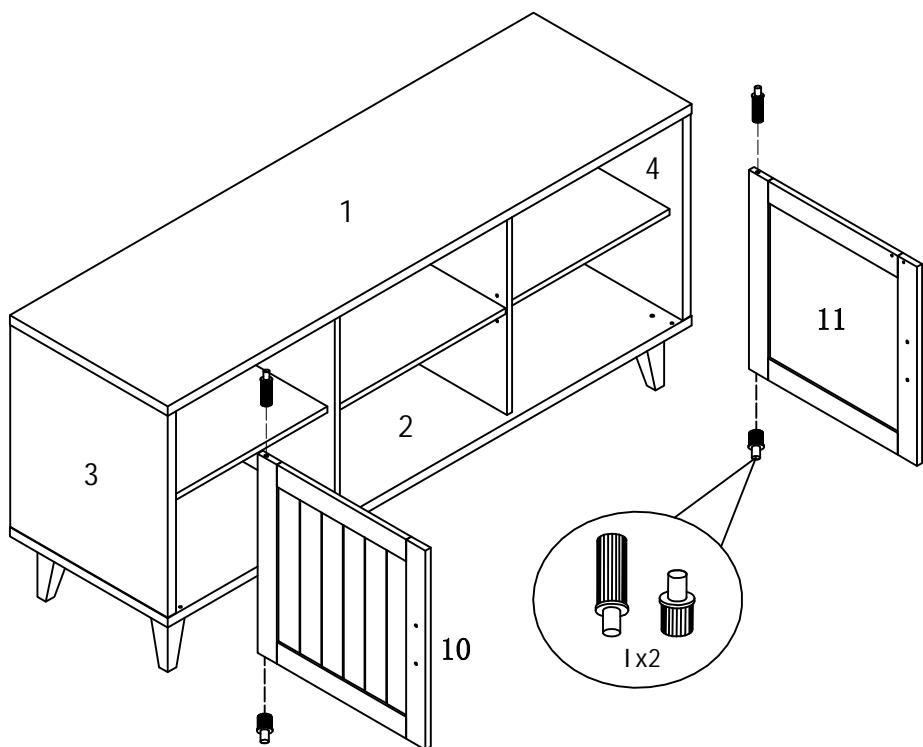


# ASSEMBLY INSTRUCTION

ITEM#: 202811      202812

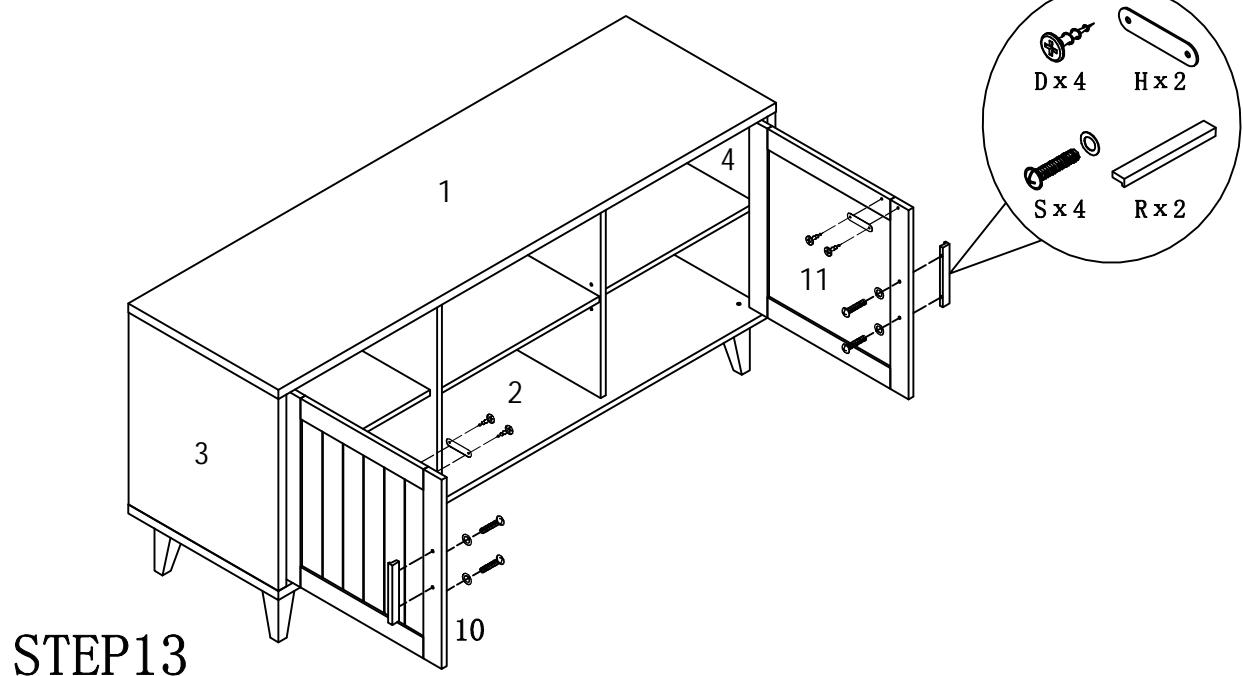

STEP14

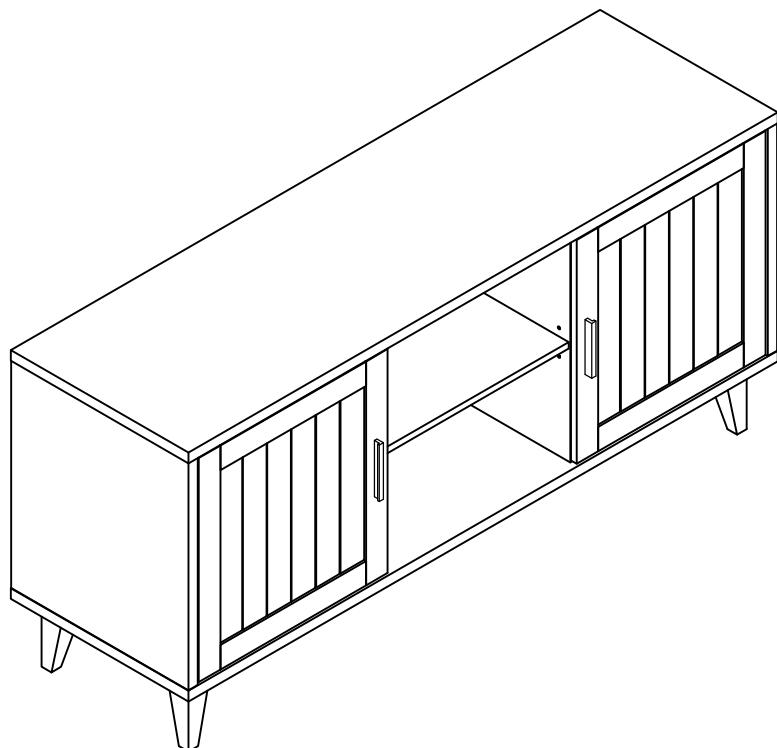


# ANTI-TIPPING STRAP INSTRUCTION

## HARDWARE (INCLUDED) :



DRYWALL ANCHOR  $\phi 8 \times 40$  X 1PC



METAL BRACKETS  $12 \times 12 \times 1$  X 2PCS



DRYWALL SCREW  $\phi 5 \times 40$  X 1PC



STRAP  $197 \times 5 \times 1$  X 1PC



FLATHEAD SCREW  $\phi 4 \times 25$  X 1PC

## TOOLS NEEDED ( NOT INCLUDED) :




DRILL & DRILL BIT



LIGHT HAMMER


Note: Hardware included only compatible with standard drywalls.

### STEP 1

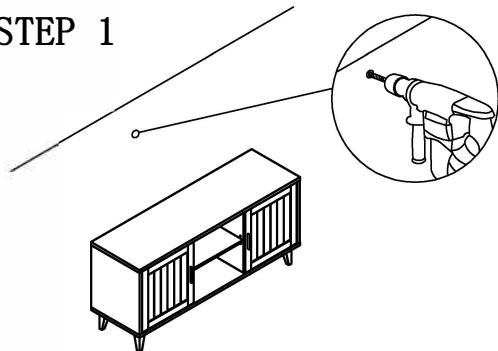


1. Find spot on wall 1" below top of item.
2. Using a drill bit slightly thinner than anchor , drill hole into drywall.

### STEP 2

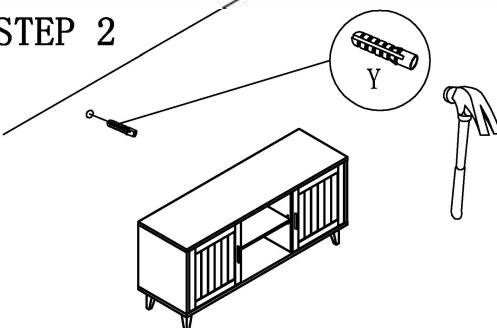


1. Use a light hammer to tap anchor into hole.
2. Anchor should fit snugly.If hole is too small, drill again to increase hole size .Do not force anchor into wall.

### STEP 3

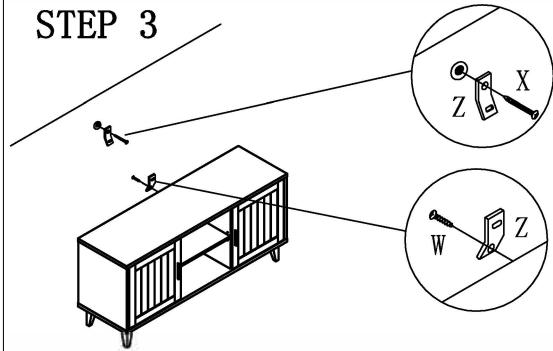

1. Insert drywall screw into metal bracket and into drywall anchor.
2. Insert flathead screw into second metal bracket and into back of item along top edge.

### STEP 4

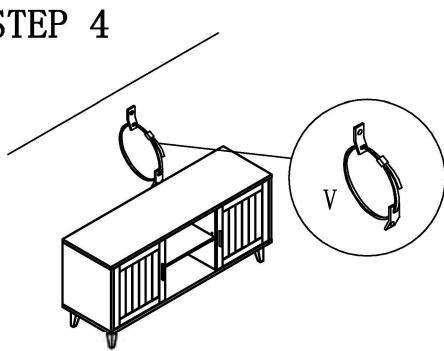

1. Insert strap thru bracket attached to wall. then thru bracket on item , and into head of strap.
2. pull lightly til strap stops.

Assembly is complete.