


## SHOWER SET INSTALLATION

To protect the surface from scratches, wrap a cloth around the product during installation.


### What's in the package.




### Dimension

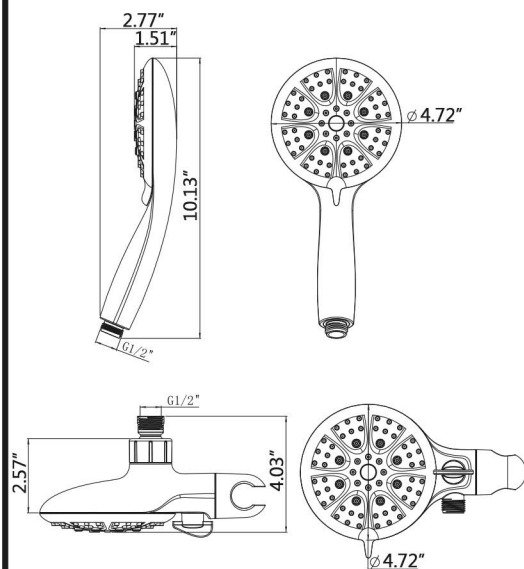


### 1 Remove old shower head.

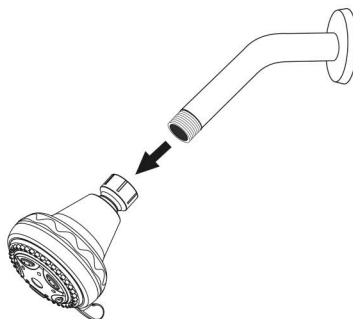

### 3 Check washer 1 in the shower hose hex nut. Attach shower hose to wall bracket. Check washer 2 in the shower hose conical nut. Connect the shower hose conical nut to the handheld shower.

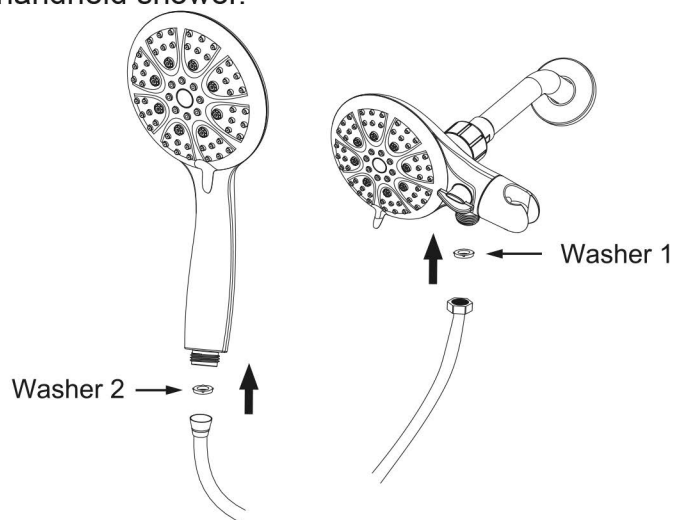

### 2 Attach wall bracket with a built-in washer to the shower arm by rotating hex nut clockwise by hand first. Then lightly snug with a wrench.

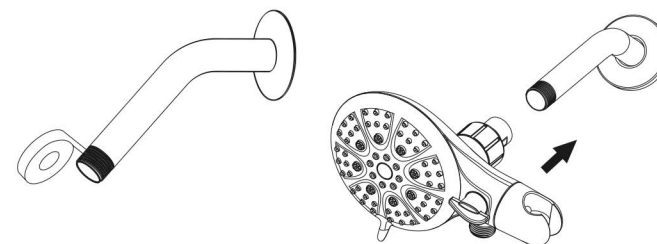

### 4 Finish

